


SAR Test Setup Photographs

Test Mode Description

Test Mode	EUT Polarization		EUT Distance to Phantom	EUT connect to NB accessory	NB Mode
1	Horizontal	Up	5mm	N/A	Bottom to Phantom (LCD open 90°)
2	Horizontal	Up	10mm	N/A	Bottom to Phantom (LCD open 90°)
3	Horizontal	Down	5mm	USB Cable (Straight)	Bottom to Phantom (LCD open 90°)
4	Horizontal	Up	5mm (Antenna Turn 90°)	N/A	Bottom to Phantom (LCD open 90°)

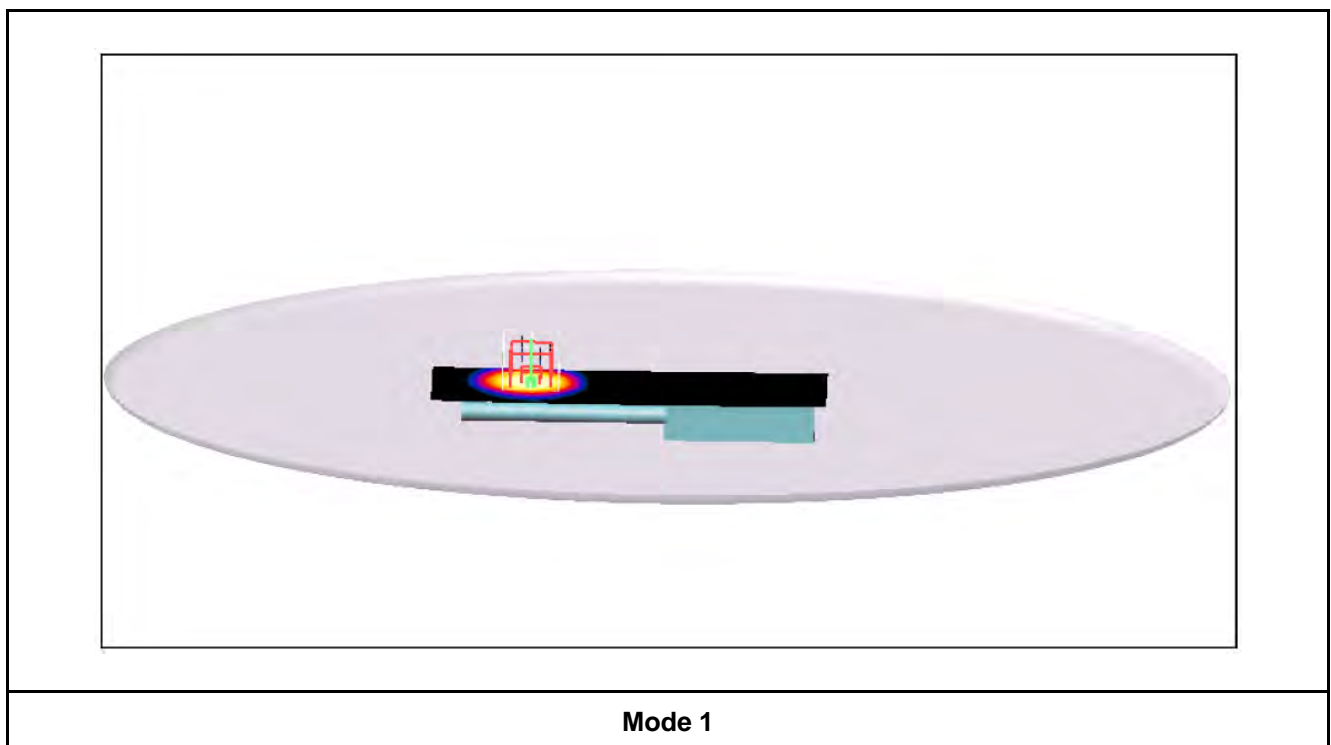

Test Setup Photo



Mode 1



Mode 2



Mode 3



Mode 4