

## **PICTORIALS – EUT**

### **Handle Assembly of Wrench**

*Bottom cap removed, exposing programming connector and charger port  
(antenna wire is placed in circular groove of end cap).*



**Client: SEEG**  
**Model: CS5-25**

**Order Number: F2LQ2956A**

**Handle Assembly of Wrench**

*Metal cover removed, exposing battery compartment and transmitter housing.*



**Client: SEEG**  
**Model: CS5-25**

**Order Number: F2LQ2956A**


**Handle Assembly of Wrench**  
*Metal cover removed, with battery removed.*



**Client: SEEG**  
**Model: CS5-25**


**Order Number: F2LQ2956A**

**Transmitter/Controller Unit Removed From Wrench**

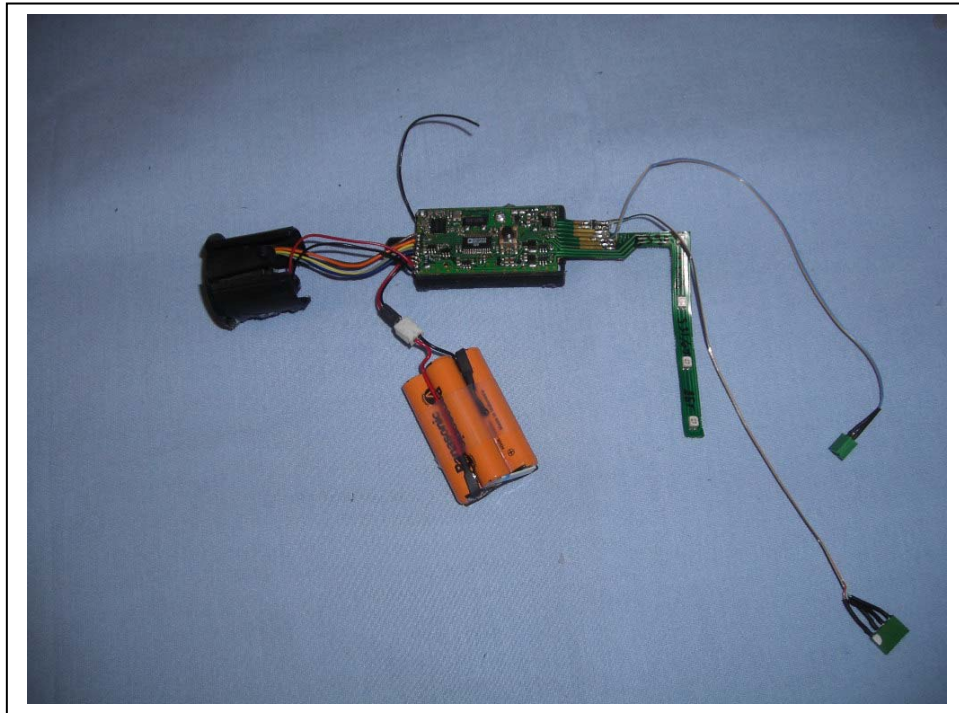




**Transmitter/Controller Unit – Close-up of Component Side of PCB**

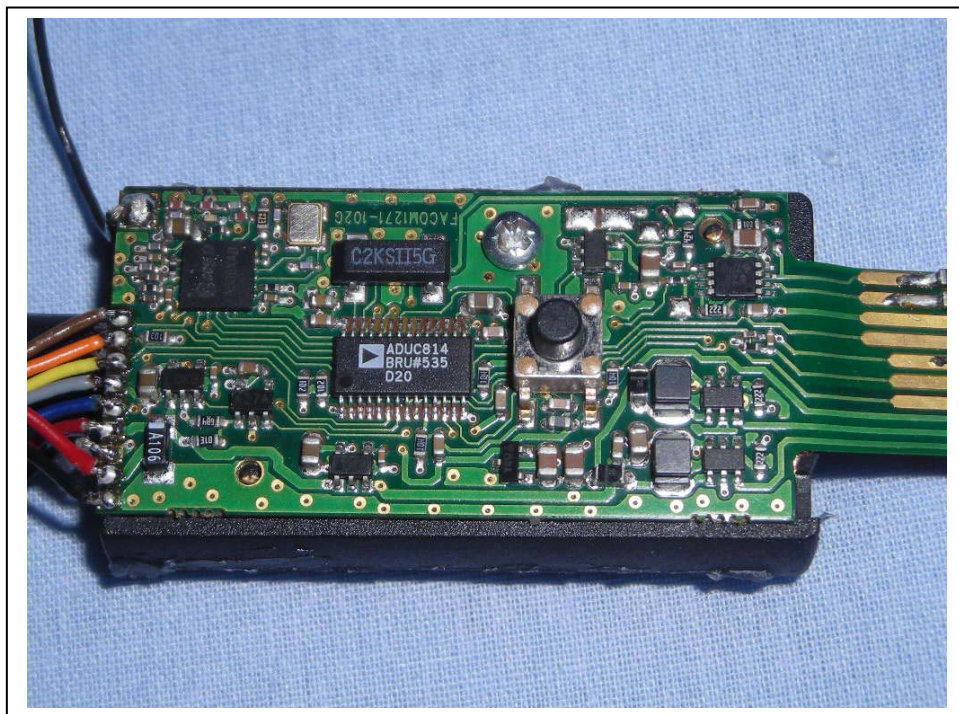


**Client: SEEG**  
**Model: CS5-25**

**Order Number: F2LQ2956A**

**Transmitter/Controller Unit**  
*Reverse side of PCB after removal from plastic housing.*

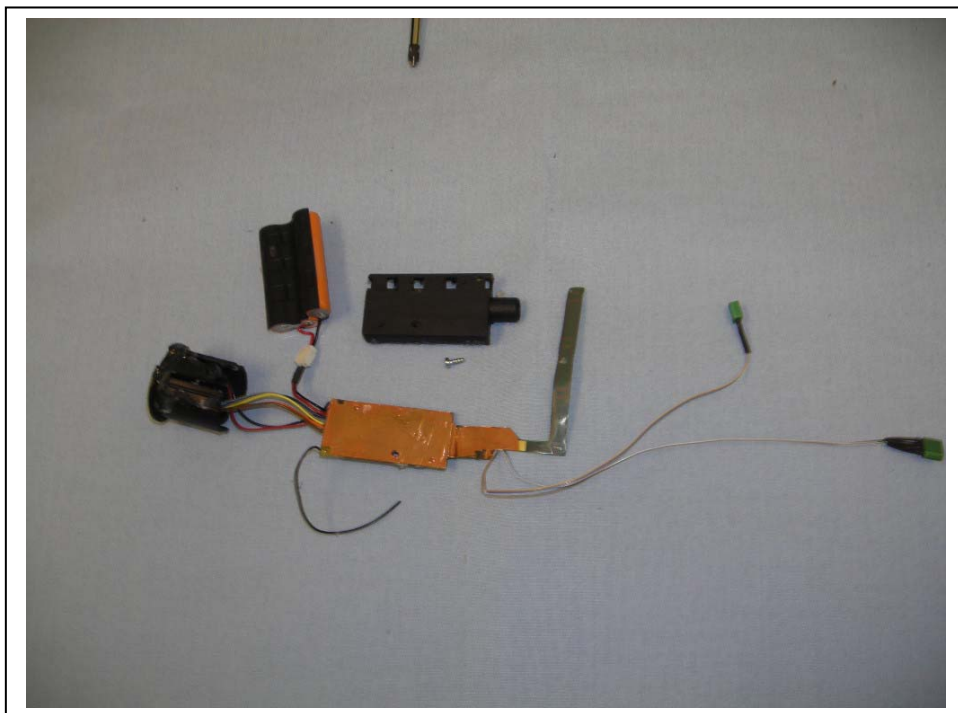

**Transmitter/Controller Unit**  
*Close-up of Reverse Side of PCB*

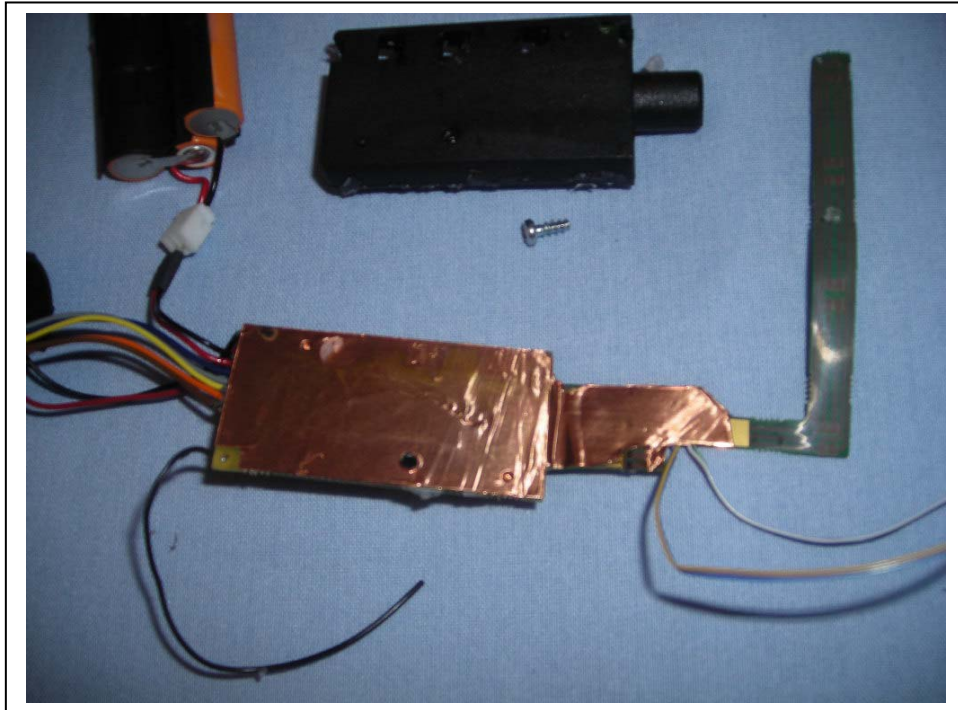

*Bottom View of PCB, with Copper Tape Removed*

