

圖 框	<div>春合昌電器(深圳)有限公司</div>					一般公差 (未勾選按A級)	<input type="checkbox"/> A級	<input type="checkbox"/> B級	<input type="checkbox"/> C級	
	圖 名	BT-150 英西說明書(KINYO)		核 準		0~30	±0.10	±0.20	±0.50	
	料 號	12590600		審 核		30~120	±0.15	±0.35	±1.00	
	單位/比例	mm / 1:1	材質	80G雙膠19	制圖	董文君20120705	120~315	±0.20	±0.50	±1.20
	表面處理	<div></div>	環保	需環保	原設計		315~	±0.30	±0.70	±1.50
設 變 記 錄	注：本公司在開發設計時不用KYE-021101規定一級環境管理物質							版次	A	


 **KINYO**
www.kinyo.com

I2590600

 **KINYO**
A NEW DIMENSION IN SOUND

BT-150 TRILLEON II

2.0 UNIVERSAL BLUETOOTH SPEAKER
2.0 ALTAVOZ BLUETOOTH UNIVERSAL

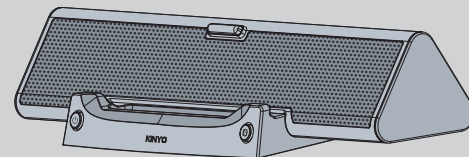


User's Guide
Guía De Usuario

Please read and understand all safety instructions before use.
Lea y comprenda todas las instrucciones de seguridad antes de usar el equipo.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Pay attention to all warnings.
- Follow all instructions.
- Do not use this apparatus near water or moisture.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not push objects into apparatus vents or slots because fire or electric shock hazards could result.
- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloth, curtains, etc.
- Do not install near any heat sources as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Place apparatus in a stable location so it will not fall causing product damage or bodily harm.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wider blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Operate the apparatus only from the audio line output jack of the computer or of an audio device.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords or integral convenience receptacles.
 - Use the proper power source as described in the instructions or as marked on the product.
 - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

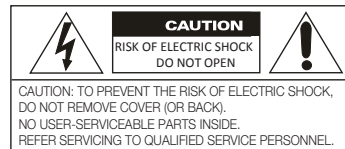

The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. THE UNIT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON UNIT.



ENVIRONMENTAL PROTECTION RECOMMENDATION

At the end of its working life, this product should not be disposed of with standard household Waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling. This is confirmed by the symbol found on the product, user manual or packaging.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


TROUBLESHOOTING

PROBLEM	POSSIBLE PROBLEM	SOLUTION
Speaker will not turn ON	Power is not connected	<ul style="list-style-type: none"> • When using the power adapter, make sure your system is connected to a working AC (mains) outlet, all connections are correct and properly plugged in. • When using batteries, make sure the battery power is sufficient, and batteries are installed properly as instructed.
No sound from speakers	Power isn't turned on	<ul style="list-style-type: none"> • Make sure the system is on and the power indicator is lit. • When using AC adapter as the power source, make sure the adapter is plugged into a wall outlet.
	Volume is set too low	<ul style="list-style-type: none"> • Increase the volume from the audio source and set it to the medium level.
Cracking sound from speakers	Bad connection	<ul style="list-style-type: none"> • Make sure the stereo plug is connected to the correct input. • Try another audio source such as portable CD or MD player.
	Problem with audio source	<ul style="list-style-type: none"> • Decrease the volume.
Sound is distorted	Volume level on the speaker system is set too high	<ul style="list-style-type: none"> • Check the audio source volume and decrease if necessary.
	Volume level on the audio source (e.g. laptop computer, MP3 player or portable CD player) is set too high	
	Audio source is distorted	<ul style="list-style-type: none"> • MP3 files usually have poorer quality; noise and distortion are easily noticed with higher volume and/or high-powered speakers. Try an alternate source such as portable CD player.
No audio from the AUX source	Bad connection Volume is set too low	<ul style="list-style-type: none"> • Make sure the audio cable plug is fully connected into your audio device. • Increase the volume level on the device.
Poor sound quality from the AUX source	Volume is set too high	<ul style="list-style-type: none"> • Reduce the volume on the audio device. • Make sure the audio cable plug is fully connected into your audio device. • Make sure your device is on, working properly and playing.
	Bad connection	
	Problem with audio source	<ul style="list-style-type: none"> • MP3 files are easily noticed with high volume and/or high-powered speaker. Try an alternate audio source.

PROBLEM	POSSIBLE PROBLEM	SOLUTION
Cannot pair the Bluetooth speaker with my Bluetooth device	Bluetooth function is not found	<ul style="list-style-type: none"> • Make sure your Bluetooth speaker is discoverable. Turn the Bluetooth speaker off and back on to Bluetooth mode until the Bluetooth indicator flashes blue and red. • Make sure to turn on the Bluetooth setting of your Bluetooth device. • Follow the Pairing Instructions to pair the Bluetooth speaker and Bluetooth device. • If possible, turn off all other nearby Bluetooth speaker and Bluetooth device. • Make sure your Bluetooth device supports A2DP Bluetooth profile. Refer to the owner's guide or technical support for your Bluetooth device to learn how it pairs with other Bluetooth devices.
Bluetooth device found but will not connect	Bluetooth connection is not established	<ul style="list-style-type: none"> • Make sure the Bluetooth setting on your device is turned on and working properly. Check your device's manual for details on Bluetooth pairing and linking. • Turn the Bluetooth speaker off and back on, the speaker will automatically enter into pairing mode. Follow the Pairing instructions to pair and connect the Bluetooth speaker and device again.
No audio from the Bluetooth speaker	Bluetooth connection is not established	<ul style="list-style-type: none"> • Turn off or disable Bluetooth settings on all other paired devices nearby and reconnect with the device you want to hear. • Turn the Bluetooth speaker off and back on, then follow the Pairing instructions to pair and connect the Bluetooth and device again. • Make sure the volume of the Bluetooth speaker is turned up.
	Volume is set too low	
Poor sound quality from a Bluetooth device	Bad connection and/or interference	<ul style="list-style-type: none"> • Make sure the volume of the Bluetooth speaker is turned up. • Your Bluetooth device may be out of range-try moving it closer to the Bluetooth speaker. • Move your Bluetooth device and/or Bluetooth speaker away from any device that generates electromagnetic interference, such as Bluetooth device, cordless phone, microwave oven, or wireless router.

INTRODUCTION


• With the use of Bass ReNu, the passive membrane design, BT-150 Universal Bluetooth Speaker produces the complete range of quality audio enhanced by a rich and deep bass sound without the use of a woofer. You may play wirelessly with the Bluetooth wireless technology, or connect with a 3.5mm audio connection. The compact speaker system, with its universal audio input, can be used with any Tablet, MP3, Smartphone, laptop, etc.

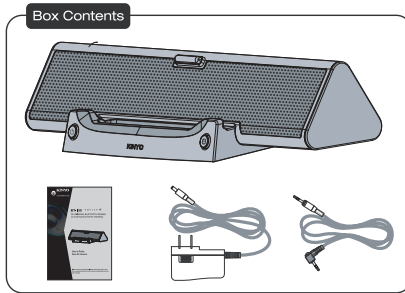

BLUETOOTH DESCRIPTION


Pairing is the process of associating your speaker with Bluetooth enabled devices. Pairing establishes a permanent security link between all devices using Bluetooth wireless technology. You will be prompted to enter a PIN (personal identification number) to establish the initial pairing. After the pairing is successful, you will not have to re-enter it again. The device remembers the PIN and will automatically connect to the speaker.

The following pairing instructions describe the pairing process between the speaker and a typical Bluetooth audio source. The pairing process may be different for your Bluetooth enabled devices. If you have problems pairing, please refer to the user's guide of your specific Bluetooth device for detailed pairing instructions.

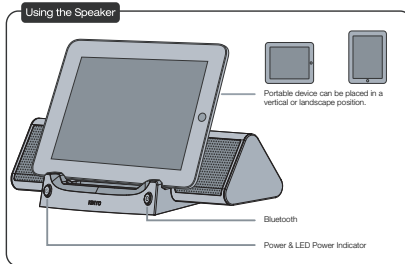

PAIRING WITH ANY BLUETOOTH A2DP ENABLED DEVICES

1. For first time pairing, turn on the Bluetooth speaker then turn on the Bluetooth function by pressing the right hand side Bluetooth button. The Bluetooth speaker will automatically enter into discoverable mode to allow pairing with Bluetooth enabled devices.
2. Turn ON the Bluetooth settings on your Bluetooth enabled device. Then perform a search for Bluetooth devices in range.
3. Your Bluetooth enabled device will display a Bluetooth Device List found in range. Select "BT 150" from the list.
4. When the Bluetooth LED flashes blue light every 2 seconds, it indicates that the pairing process has been completed successfully. Your Bluetooth enabled device and the Bluetooth speaker are now connected.

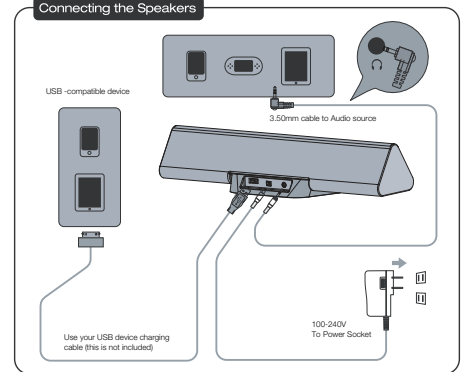

ANSWER PHONE CALL

1. If the phone rings from your Bluetooth enabled device, answer your phone will temporarily stop music playing.
2. Press the Bluetooth button to resume connection.

CHARGE YOUR DEVICE

the BT-150 Bluetooth speaker comes with a USB out port which offers a convenient charging option for any device with a USB hub.

1. Plug the AC adapter into a powered outlet.
2. Insert the USB charging cable of your device into the USB output, then insert the other end to your USB device. Your USB device will be charging.

LIMITED WARRANTY

Kinyo Company Inc. (KINYO) warrants this product to the original purchaser against defects in material and workmanship for a period of one (1) year from the date of purchase. Kinyo will, at its option, repair or replace the defective product at no cost to you during the warranty period.

The warranty will not apply if the unit has been subject to accident, misuse, abuse, disassembly, altered or operated contrary to the instructions contained in the accompanying manual.

To obtain warranty service, proof of purchase, in the form of retail receipt, bill of sale or invoice must be presented as evidence that the unit is within the warranty period. The product must be packaged either in its original packaging or in such a way as to reasonably protect it from shipping damage. Properly fill out the warranty card with description of problem. Send the product freight prepaid or deliver to:

**ATTN: SERVICE DEPT.
KINYO COMPANY INC.
14235 LOMITAS AVE.
LA PUENTE, CA 91746**

Model : _____

One Year Limited
Warranty Certificate

Name: _____

Address: _____

City _____

State: _____ ZIP _____

Phone: _____

Date of Purchase _____

Retailer: _____

Warranty Reason: _____

Signature: _____

Email: _____

Valid in USA only.

GARANTÍA LIMITADA

Kinyo Compañía Inc. (KINYO) garantiza el producto al comprador original Company defectos de material y mano de obra por un período de un año a partir de la fecha de compra, KINYO, a su elección, reparará o reemplazará el producto defectuoso sin costo alguno para usted durante el período de garantía.

La garantía no se aplicará si la unidad ha sido objeto de un accidente, mal uso, abuso, desmontaje, alteración u opera en contra de las instrucciones que figuran en el manual anexo.

Para obtener servicio de garantía, la prueba de compra, en forma de recibo de venta, factura de venta o albarán deberá ser presentada como prueba de que la unidad está dentro del período de garantía. El producto deberá estar envasado ya sea en su embalaje original o en forma tal que razonabl empacado protegerlo de los daños de envío. Llenar correctamente la tarjeta de garantía con la descripción del problema. Enviar el producto portes pagados o entregar a:

**ATENCIÓN: DEPARTAMENTO DE SERVICIO.
KINYO COMPANY INC.
14235 LOMITAS AVE.
LA PUENTE, CA 91746**

Modelo #: _____

CERTIFICADO DE GARANTÍA
LIMITADA DE UN AÑO

Nombre: _____

Dirección _____

Detallista: _____

Ciudad _____

Fecha de compra: _____

Estado: _____

Codigo Postal: _____

Telefono : _____

Garantía Razón: _____

Firma: _____

Email: _____

Válido sólo en USA.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

- Lea las instrucciones.
- Guarde estas instrucciones.
- Preste atención a todas las advertencias.
- Siga todas las instrucciones.
- No utilice este aparato cerca del agua o humedad.
- Limpie con un paño seco.
- No bloquee las aberturas de ventilación. Instale de acuerdo con las instrucciones del fabricante.
- No empuje objetos en las aberturas o ranuras del equipo debido a los riesgos de incendio o descargas eléctricas podría causar.
- La ventilación no debe ser impedida cubriendo las aberturas de ventilación con objetos como periódicos, manteles, cortinas, etc
- No lo instale cerca de fuentes de calor como radiadores, calefactores, estufas u otros aparatos (incluyendo amplificadores) que produzcan calor.
- Coloque el aparato en un lugar seguro para evitar posibles caídas que pudieran ocasionar daños o lesiones corporales.
- No anule el propósito de seguridad del enchufe polarizado. Un enchufe polarizado tiene dos clavijas, una más ancha que la otra. La pata más ancha se proporciona para su seguridad. Si el enchufe no encaja en su tomacorriente, consulte a un electricista para reemplazar el tomacorriente obsoleto.
- Opere el aparato solo por el enchufe de salida de audio ya sea con la computadora o con un aparato de audio.
- Proteja el cable de alimentación de ser pisado o aplastado, especialmente en los enchufes, los receptáculos y el punto donde salen del aparato.
- Utilice sólo los accesorios especificados por el fabricante.
- Desenchufe este aparato durante tormentas eléctricas o cuando este en uso largos periodos de tiempo.
- El aparato debe ser desconectado de la red colocando el interruptor de encendido / en espera en la posición de espera y la desconexión del cable de alimentación del aparato de la toma de CA.
- La toma de corriente debe estar instalada cerca del equipo y debe ser fácilmente accesible.
- Para evitar el riesgo de incendios o descargas eléctricas, no sobrecargar las tomas de corriente, cables de extensión o receptáculos integrales.
- Utilice la fuente de alimentación adecuada como se describe en las instrucciones o marcado en el producto.
- Refiere las reparaciones a personal calificado. Se requiere servicio cuando el aparato ha sido dañado de alguna manera, como por ejemplo el cable de alimentación o el enchufe está dañado, se ha derramado líquido o han caído objetos dentro del aparato, el aparato ha sido expuesto a la lluvia o la humedad, no funciona con normalidad, o se ha caído.



La figura del rayo acabado en punta de flecha y encerrada dentro de un triángulo equilátero tiene por finalidad alertar al usuario de la presencia de "voltaje peligroso" en el interior del producto que podría tener potencia suficiente para que una persona sufra una descarga eléctrica.



El signo de exclamación encerrado dentro de un triángulo equilátero tiene por finalidad alertar al usuario de la presencia de importantes instrucciones de utilización y mantenimiento en la documentación que acompaña al aparato.

ADVERTENCIA

PARA EVITAR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA (O CUBIERTA DE ATRAS). NO HAY PARTES DE SERVICIO DENTRO. PARA EVITAR INCENDIOS Y DESCARGAS ELÉCTRICAS, NO EXPONGA ESTA UNIDAD A LA LLUVIA NI A LA HUMEDAD. LA UNIDAD NO SERÁ EXPUESTA AL SALPICADO O GOTAS Y QUE OBJETOS CON LÍQUIDOS COMO POR EJEMPLO FLOREROS SE COLOQUEN EN LA UNIDAD.

RECOMENDACIÓN DE PROTECCIÓN AMBIENTAL

Al terminar su vida útil, este producto no debe tirarse en un contenedor de basuras estándar, sino que debe dejarse en un punto de colección de desechos eléctricos y equipamiento electrónico para ser reciclado. Esto viene confirmado por el símbolo que se encuentra en el producto, manual del usuario o empaque.



SOLUCIÓN DE PROBLEMAS

SÍNTOMA	POSIBLE PROBLEMA	SOLUCIÓN
El altavoz no se enciende	La alimentación no está conectado	<ul style="list-style-type: none">• Cuando utilice el adaptador de corriente, asegúrese de que su sistema está conectado a un toma de corriente alterna (ca) y que todas las conexiones son correctas y correctamente enchufado.
No hay sonido desde los altavoces	La energía no está encendida	<ul style="list-style-type: none">• Asegúrese de que el sistema está encendido y el indicador de encendido esté iluminado.• Cuando utilice el adaptador de CA como fuente de alimentación, asegúrese de que el adaptador está conectado a la toma de corriente.
	El volumen está muy bajo	<ul style="list-style-type: none">• Aumente el volumen del sistema de altavoces.• Asegúrese de que el enchufe del cable de audio está bien conectado en el dispositivo de audio.• Aumente el nivel de volumen en el dispositivo.
El volumen de sonido deficiente es de la fuente AUX	La configuración de volumen de la calidad está demasiado alto	<ul style="list-style-type: none">• Reduzca el volumen del altavoz Bluetooth en el dispositivo de audio.
	Mala conexión	<ul style="list-style-type: none">• Asegúrese de que el enchufe del cable de audio está bien conectado en el dispositivo de audio.
	Problema con fuente de audio	<ul style="list-style-type: none">• Asegúrese de que su dispositivo está encendido, funcionando elimínate jugar y tocando.• Los archivos MP3 se pueden notar fácilmente, con alto volumen y / o representante de alto poder. Pruebe una fuente de audio alternativa.
No puede conectar con su bocina Bluetooth su dispositivo Bluetooth	La función Bluetooth no es establecida	<ul style="list-style-type: none">• Asegúrese de que su altavoz Bluetooth es reconocible. Apague el altavoz Bluetooth y vuelva a enciendan en el modo Bluetooth, hasta que el indicador de Bluetooth intermita en azul y rojo.• Asegúrese de activar la configuración de Bluetooth cercanos y otros dispositivos Bluetooth.• Siga las instrucciones de sincronización Para asociar el altavoz Bluetooth y el dispositivo Bluetooth.• Si es posible, apague todos los altavoces Bluetooth cercano y otro dispositivo Bluetooth.• Asegúrese de que su dispositivo Bluetooth soporta el perfil Bluetooth A2DP. Consulte el manual del propietario o soporte técnico para su dispositivo Bluetooth para saber cómo conectar o palear con otros dispositivos Bluetooth.


SÍNTOMA	POSIBLE PROBLEMA	SOLUCIÓN
El dispositivo Bluetooth que se encuentre, pero no se conecta	No se ha establecido la conexión con el Bluetooth no está establecido	<ul style="list-style-type: none">• Asegúrese de que la configuración de Bluetooth en el dispositivo es encendido y funcionando correctamente. Consulte el manual del dispositivo para obtener más información sobre la asociación Bluetooth y la vinculación.• Encienda el altavoz Bluetooth y vuelva a encenderla, el altavoz entrará automáticamente en modo de emparejamiento. Siga las instrucciones de sincronización para vincular y conectar el Altavoz Bluetooth y el dispositivo de nuevo.
No hay sonido de la conexión Bluetooth	Bluetooth no se ha establecido que habla	<ul style="list-style-type: none">• Apague o desactivar la configuración de Bluetooth en todos los demás dispositivos emparejados cercanamente y volver a conectar con el dispositivo que desea escuchar.• Encienda el altavoz Bluetooth y vuelva a encenderla, a continuación, siga las instrucciones de sincronización para vincular y conectar el Bluetooth y el dispositivo de nuevo.• Asegúrese de que el volumen del altavoz Bluetooth está activado.
	El volumen está demasiado bajo	
Mala calidad de sonido del dispositivo Bluetooth	Mala conexión y / o interferencia	<ul style="list-style-type: none">• Asegúrese de que el volumen del altavoz Bluetooth está activado.• El dispositivo Bluetooth puede estar fuera del rango-trate de mover más cerca de los altavoces Bluetooth.• Mueva el dispositivo Bluetooth y / o bocina de Bluetooth lejos de cualquier dispositivo que genere interferencia electromagnética, tales como dispositivos Bluetooth, teléfonos inalámbricos, hornos microondas, o el router inalámbrico.

INTRODUCCIÓN

• Con el uso de Bass Renu, el diseño de la membrana pasiva, BT-150 Altavoz Bluetooth Universal produce una gama completa de la calidad de audio mejorada por un sonido de graves ricos y profundos sin el uso de un altavoz de graves.

Puedes reproducir de forma inalámbrica con la tecnología inalámbrica Bluetooth, o conectar con una conexión de audio de 3,5 mm. El sistema de altavoces compacto, con su entrada de audio universal, se puede utilizar con cualquier tableta, MP3, Smartphone, laptop, etc.

Contenido de la Caja

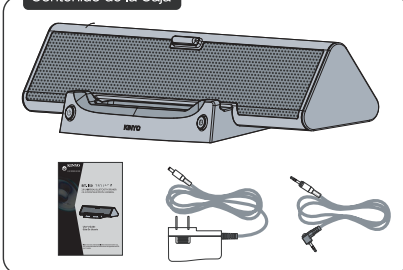


DESCRIPTION BLUETOOTH

El emparejamiento es el proceso de asociar el altavoz con los dispositivos habilitados para Bluetooth. El emparejamiento establece un vínculo permanente de seguridad entre todos los dispositivos que utilizan tecnología inalámbrica Bluetooth. Se le pedirá que introduzca un PIN (número de identificación personal) para establecer la vinculación inicial. Después de que la vinculación se realiza correctamente, usted no tendrá que volver a entrar de nuevo. El dispositivo recuerda el PIN y se conecta automáticamente al altavoz.

Las instrucciones de sincronización siguientes describen el proceso de emparejamiento entre el altavoz y una fuente de audio Bluetooth típico.

El proceso de sincronización puede ser diferente para los dispositivos habilitados para Bluetooth. Si usted tiene problemas de sincronización, por favor consulte la guía del usuario de su dispositivo Bluetooth para obtener instrucciones detalladas de emparejamiento.


Usando las Bocinas

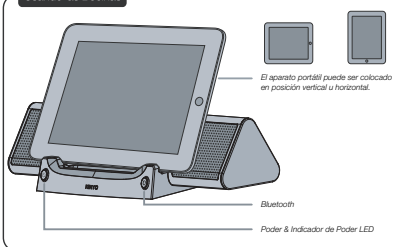

Emparejamiento con cualquier Aparato de Bluetooth A2DP Habilitado

1. Para el emparejamiento por primera vez, encienda el altavoz Bluetooth y luego encienda la función Bluetooth al presionar el botón derecho del Bluetooth.
2. Activar la configuración de Bluetooth en su dispositivo compatible con Bluetooth. A continuación, realice una búsqueda de dispositivos Bluetooth dentro del rango.
3. El dispositivo con tecnología Bluetooth se mostrará una lista de dispositivos Bluetooth que se encuentren en el rango. Seleccione "BT 150" de la lista.
4. Cuando el LED Bluetooth intermite la luz azul cada 2 segundos, esto indica que el proceso de emparejamiento se ha realizado correctamente. Su dispositivo Bluetooth habilitado y el altavoz Bluetooth están conectados.

Conectando las Bocinas

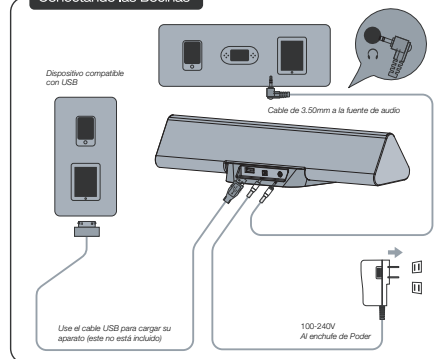

RESPUESTA LLAMADA TELEFÓNICA

1. Si suena el teléfono de su dispositivo con tecnología Bluetooth, al contestar el teléfono dejará temporalmente la reproducción de música.
2. Pulse el botón para reanudar la conexión de Bluetooth.

CARGUE SU APARATO

La bocina bluetooth BT-150 viene con un puerto de salida USB que le ofrece una opción conveniente para cualquier aparato que se recarga por USB.

1. Conecte el adaptador ca en un enchufe de corriente.
2. Inserte el cable para cargar USB de su aparato en la salida USB. Luego inserte la otra punta del USB a su aparato. Su aparato va a ser cargado por el USB.