

Use of Network

4-1 How to use WiFi

4-2 How to use Bluetooth

This product can configure network by using wireless LAN (WiFi), Bluetooth, WWAN. (HSDPA, WiBro, WiMAX)
To use wired LAN, you need an additional wired LAN card of USB type.

* However, WWAN is available only in the model which support this function.

Wireless LAN (WiFi)

Wireless LAN is a device to connect a wired/wireless router for home or wireless internet service.

With wireless LAN in operation, a green LAN LED flashes at the right bottom of the device.

Sometimes, it is necessary to have a network key for wireless AP's SSID (a router's name) and security to take advantage of wireless LANs. For more information, see the manual of the device.

Types of WiFi

■ AP Connection

- Connect to internet or network by having access to AP in the environment of network where AP is installed.

- AP (Access Point)

As a network device which connects wired LAN with wireless LAN, it corresponds to wireless hub of wired network.

It is possible to connect several wireless LAN-mounted computers. It involves wired/wireless routers for home.

■ Small Networks

- It connects wireless LAN-mounted computers through wireless network. This is available when small networks is configured in a computer and the other computers is wireless connected to this computer.


(For more information on how to connect, see Windows Help > Networking and Web)

■ Wireless LAN services from Telecommunication Companies


- When you use wireless LANs from telecommunication companies, you can use wireless internet services at hotels, schools, subways and public offices where wireless APs are installed. You have to subscribe a telecommunication company to take advantage of wireless LANs.

4-1 How to use of WiFi


Press the icon of Connect Wireless Network from the taskbar to check the status of the present wireless network.

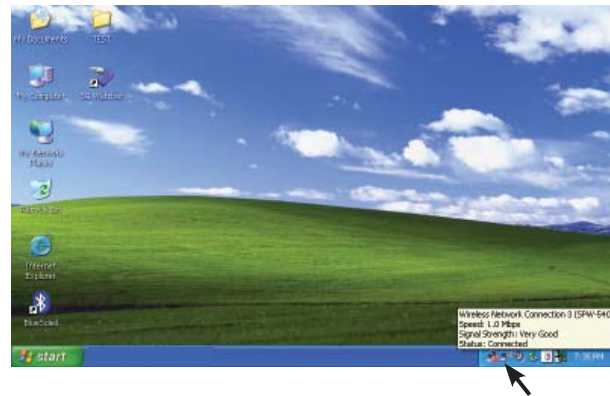


Displaying [Connected] shows that it is in normal operation. If it is not connected, select [See Wireless Network].

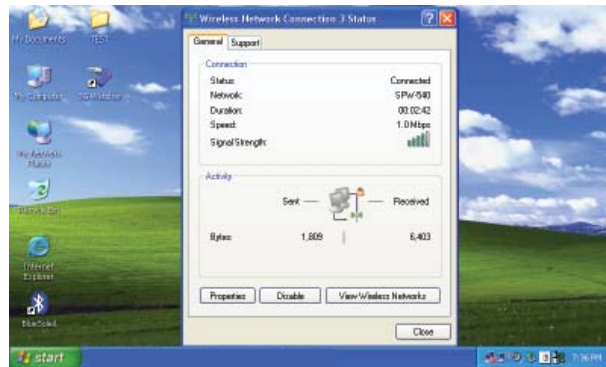

Press "Refresh Network List" to search it in the network range.

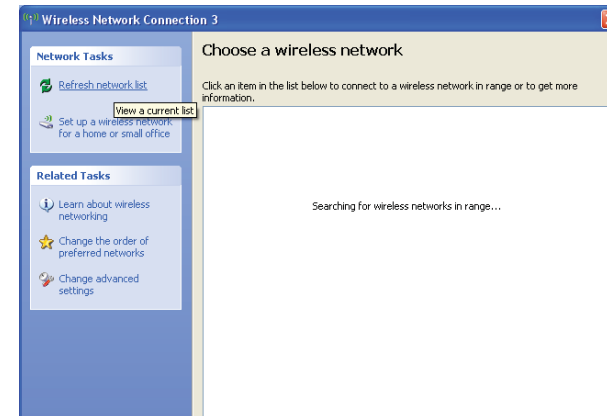


After searching the network, select one to press [Connect] button.

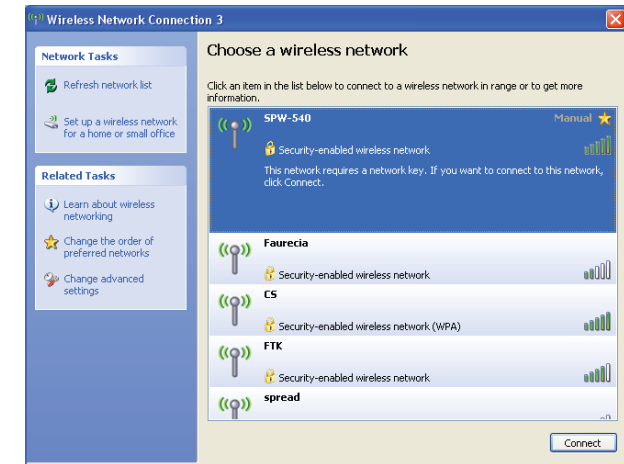

A window for password opens for a network whose security is set. Enter the password into the window.

You can see the wireless LAN (network) in operation as follows:

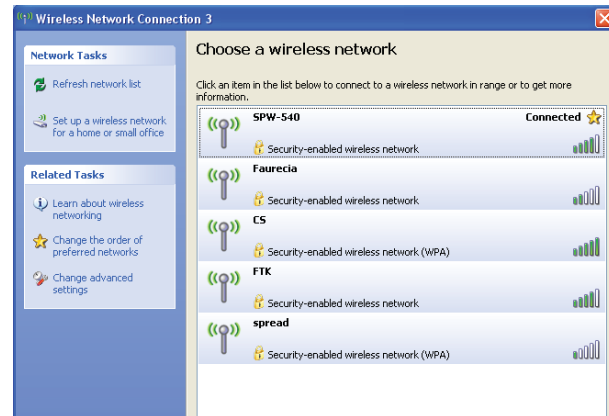

- When LAN has been set in the Power Saving Mode for a long time, some items from the network list cannot be caught occasionally. At this time, exit the other programs in operation and start [Restore Network].
- When you don't use the wireless LAN for a long time, you can save the battery by setting LAN to [Not Use]. However, in [Not Use] mode, please note that you cannot use Bluetooth as well.
- When internet speed gets slow or its connectivity is not stable, use a control program(CoxWin) to set LAN Power Saving Mode to [Normal]. In the Power Saving Mode, LAN LEDs flash, but in the Normal Mode, LAN LEDs always turn on.

4-2 How to use Bluetooth

Bluetooth is a function to connect the Bluetooth-supporting devices such as cell phones, printers, stereo headsets, mice, and keyboards at a close range in the wireless network. You can be limited to use it, depending on the profiles that each device supports.

How to use Bluetooth

- **Send Files**
It helps to send or receive files between two Bluetooth devices. It also helps to exchange files through other computers, cell phones and PDAs.
- **Network Connection**
It connects to network by having access to wireless LANs of other Bluetooth-mounted computers or through AP or internet routing servers.
- **Network Connection through Telephone**
It connects to network through Bluetooth cell phones.
- **Data Synchronization (Sync)**
It synchronizes Bluetooth-supporting devices such as cell phones, PDAs and laptop computers and Outlook email address data.
- **Electronic Business Card Exchange**
It helps to exchange electronic business card with Bluetooth-supporting devices such as cell phones, PDAs and laptop computers.
- **Sound Output**
The sound of a computer can be played with other Bluetooth devices. (headset etc)
- **Connection of Bluetooth-Supporting Devices**
It connects Bluetooth-supporting devices such as keyboards, mice and joysticks.

How to use Bluetooth

Run [Blue Soleil] program (double click) in which an arrow points in the wallpaper or the program folder.



This displays [Blue Soleil], a Bluetooth program, in operation.



Click [My Bluetooth Device] in the [Tools] menu.



Select Bluetooth Device's device type as [USB].



- According to the devices displayed, the upper icons on the screen are activated (light-green).
- Select those activated icons to be connected.
- In case that you have to enter some cords in course of connection, refer to the manual of Bluetooth device concerned to enter them.

You can see Bluetooth properly connected as follows:

Press the center (yellow ball) of the screen to display Bluetooth devices that are available for connection.



Use of Basic Functions of Windows XP


5-1 Wallpaper setting

5-2 Mouse setting

Windows XP Home Edition installed in the product is the same with the system installed in PC.
Refer to Windows Help for details on how to use it and its functions.


5-1 Setting Wallpaper

- ① Press the right button of the mouse on the wallpaper with Windows in proper operation.
- ② Click Properties > Wallpaper > Wallpaper Set by User as shown below.
- ③ Check the required function and click [OK].

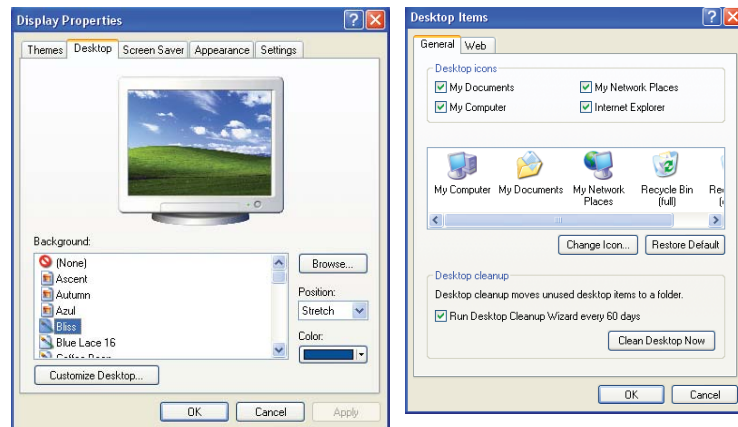

5-2 Setting Mouse

- ① Click Start > Control Panel > Mouse.
- ② Select the required item to be set.
- ③ Press [OK] to save this setting.

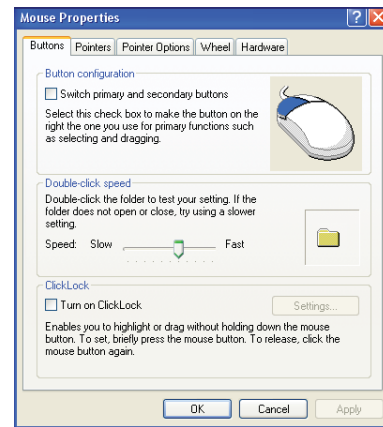

Restoration of Windows XP

6-1 Windows XP restoration

6-2 System rescue

6-3 Windows installation and MS certification


6-1 Windows XP System Restore

This is a function to restore the system to a previous state when it has some problems. If you make a restore point when it works properly, it enables the system to restore to the point when it has some problems. However, please notice that the data and program after the restore point will be deleted. So it is recommended to back up important data in advance after this restore point. (emails, list of favorites, etc. will be preserved)


1. How to make a restore point

Click Start > Programs > Accessories > System Tools > System Restore.

Select [Make a restore point] and click [Next].

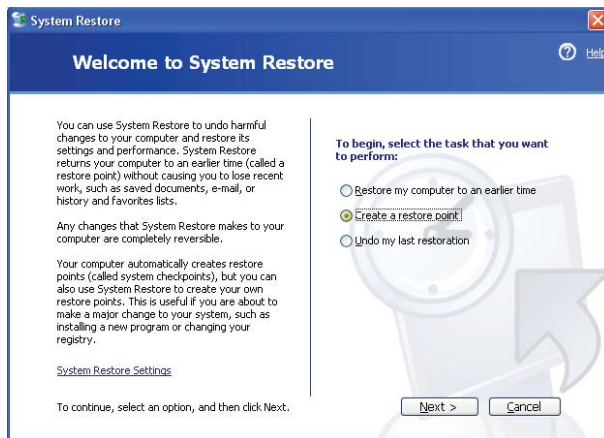

Enter a restore point into [Details on a restore point] and click [Restore]. Then a restore point is created.

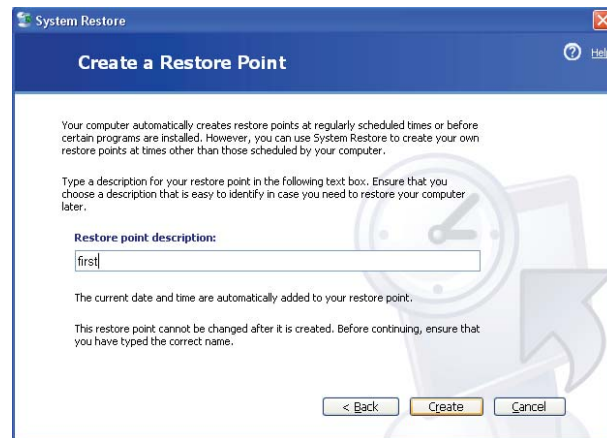


2. Restore to a previous state


Click Start > Programs > Accessories > System Tools > System Restore.

Select [Restore my computer to a previous state] and click [Next].


Select [Restore my computer to a previous state] and click [Next].

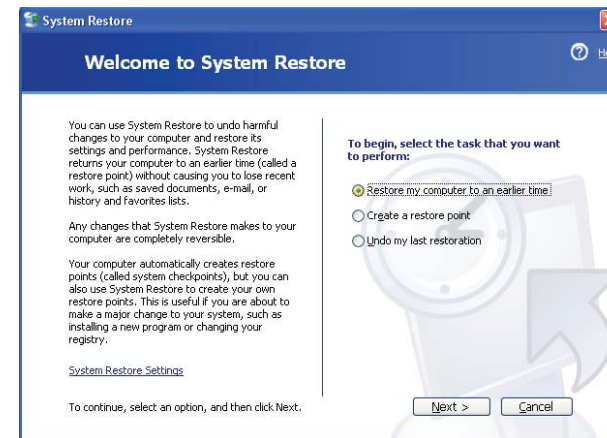

Select a restore date from the calendar and a restore point from the list on the right side, and click [Next].

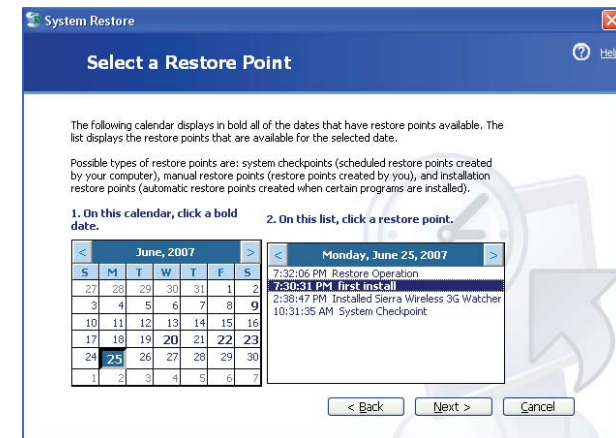

Check [a selected restore point] and click [Next].
The computer will reboot to start restoring.

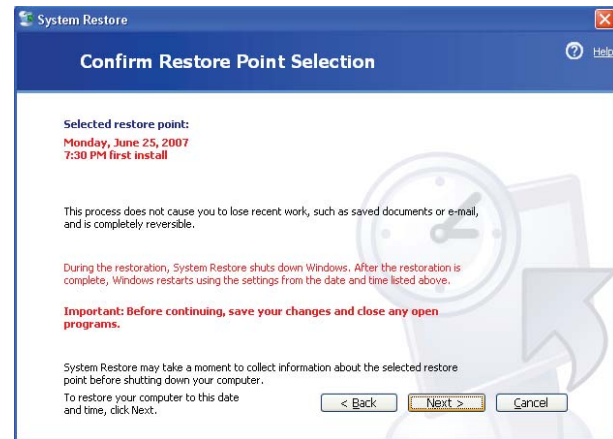

Once it is done, the computer will reboot.
Click [OK] in the window of [Restore Done].
Restore to a selected point is completed.

6-2 SYSTEM Rescue

If you fail booting due to Windows system error or Virus, you can restore the system to factory setting.
(※ Only models contained system rescue)

[Notice]

- ※ Please make sure that you move/copy important files to other locations before system recovery.
- ※ Window system(c:) is restored to factory setting.
- ※ Before restoring the system, change system date to 01/01/2007 if you get validation by Internet.


1. Turn the product on and click F10 button several times.
2. AMI Preboot Services will be displayed. (See A)
Move to AMI RESCUE by using arrow key and press ENTER. (Optical mouse does not work at this screen)
3. Windows booting bar and logo will be displayed.
4. Wizard will be displayed as right picture. (See B)
Move to Restore OS by using optical mouse and click.
5. Follow the instruction. (Click YES twice)
6. Window booting bar will be displayed.
7. Press OK when complete recovery and click EXIT.
System will reboot automatically.

- ※ After finishing system recovery, you need to take Microsoft Windows Validation procedure again.

A.picture



B.picture

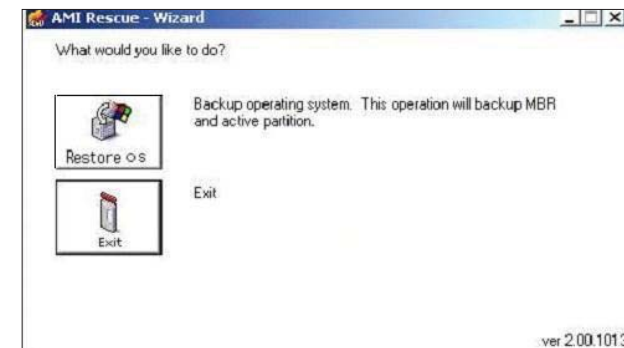

6-3 Windows installation and certification

You can reinstall Windows System using Microsoft Windows XP Home Edition CD and external USB CD-ROM provided with the product.

Windows Installation

1. Connect the product to the external CD-ROM and insert Windows CD.
2. Turn the product on again and press F2 to run BIOS Setup.
3. Move [BOOT] item using keys and set "All USB CD ROM" first from [Boot Priority order].
When USB CD-ROM isn't shown in the booting list of this product, set CD-ROM concerned to the first booting.
4. Press F10 to save and reboot it.
5. Rebooting starts with Windows CD.

- ※ If you press [ESC] button while you connect it to the external CD-ROM and boot it for RAM test, a window for setting the booting order pops up. You can use keys to select CD-ROM and boot it.
- ※ Installing Windows can delete the data from the product. So consult with professionals for help.
The manufacturer doesn't support Windows installation.

Windows certification

You should register to Microsoft after Windows installation. Registered products are allowed to get Windows update.

- Getting Validation by Telephone call to Microsoft
 1. Once installing Windows is completed and rebooted, a window for registering the product pops up.
 2. Select your country to display telephone number of Microsoft.
 3. Have a pen and paper ready to take notes before making a call.
 4. Make a call and enter the numbers shown on the screen followed by voiceguide.
 5. Once entering the numbers is done, they will tell you some numbers.
(As it is difficult to enter them at once, you had better take notes)
 6. Enter the numbers into the screen and press the certification number. Then the certification is completed.
- Getting Validation by Internet
 1. Turn the product on and press F2 to run BIOS SETUP
 2. Change System Date of info to 01/01/2007.
 3. Press F10 to save and restart booting.
 4. After booting windows, set dd/mm/yy and time.
 5. Connect to internet.
 6. Start>Program>Windows License Validation.
 7. Select [Validation through Telephone] and click [Next].
 8. Select [Change Product Key] and click [Next].
 9. Input Windows CD key.
 10. After update, press BACK and select [Validation through Internet].
 11. Finish

Installation of drivers

1. AMD Processor Driver
2. AMD Dual Core Optimizer
3. Microsoft .NET Framework
4. Chipset driver and utility
5. Audio driver
6. SDA Standard Compliant SD Host Controller driver update
7. WiFi driver
8. BlueSoleil, a Bluetooth utility
9. Update for Windows XP
10. Installation or update of CoxWin

Installation of drivers

If Windows is installed, it is required to install drivers for system devices.

They are stored in the hard disk, but if it is formatted, you have to download the drivers concerned from the websites of the manufacturers.

1. Install AMD Processor Driver
2. Install AMD Dual Core Optimizer
3. Install Microsoft .NET Framework
4. Install Chipset and Video Driver
5. Install Audio Driver
6. Update SD Host Controller
7. Install WiFi driver
8. Install BlueSoleil, a Bluetooth utility
9. Install Windows XP Update (KB918005)
Install Windows XP Update (KB896256)
Install Windows XP Update (KB916199)
10. Install System Control Program (CoxWin)

1. Install AMD Processor Driver


(Note) If the processor is Sempron 2100+, do not install it.

① Processor Driver File (/INSTALL/Processor/AMD_Processor_Driver_1320053/setup.exe)

② Dual Core Optimizer File (/INSTALL/Processor/ AMD_Dual-Core_Optimizer_113/Setup.exe)

※ For single core CPU, install the file from ① above, and for dual core CPU, install the files from ① and ②


Install those two files as shown below.

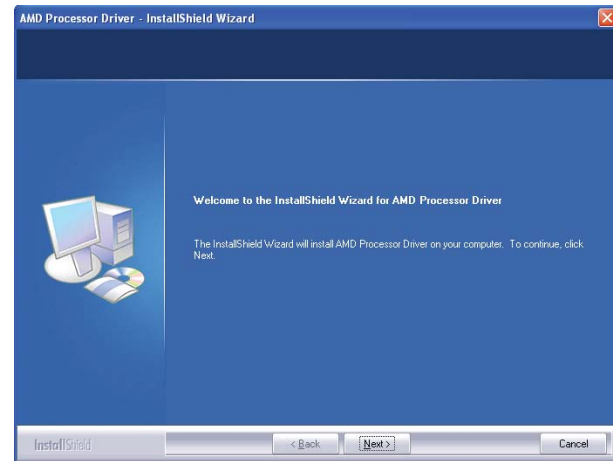


Select [Next]




Select [Yes]

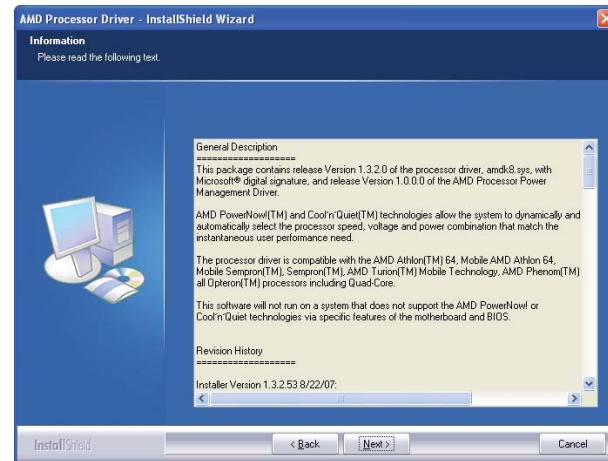

Select [Next]

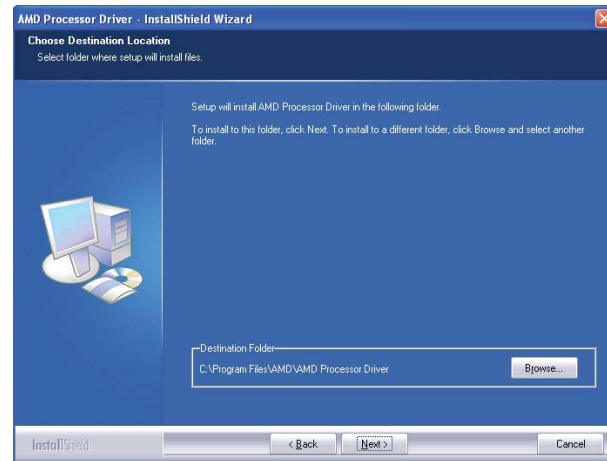

Select [Next]

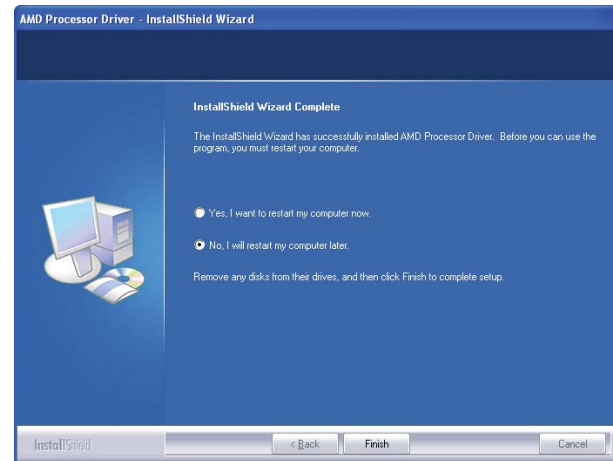

Select [Complete]

2. Install AMD Dual Core Optimizer

※ Please install it only if it is the dual core product.


Run /INSTALL/Processor/ AMD_Dual-Core_Optimizer_113/Setup.exe.




Select [Next]




Select [I accept the terms in the license agreement]
and then [Next]

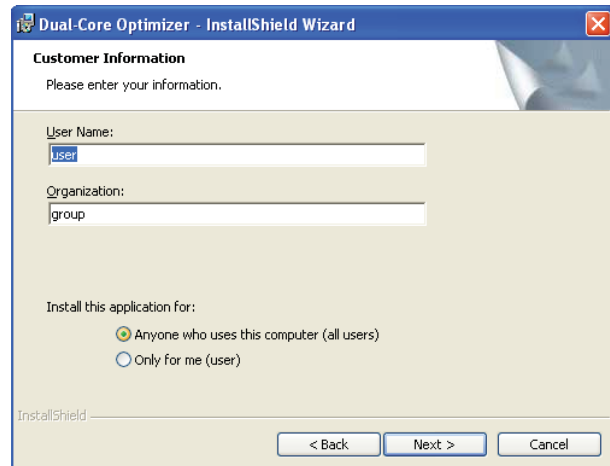


Enter [User Name] and [Organization]
Select [Anyone who uses this computer (all users)] and then [Next]

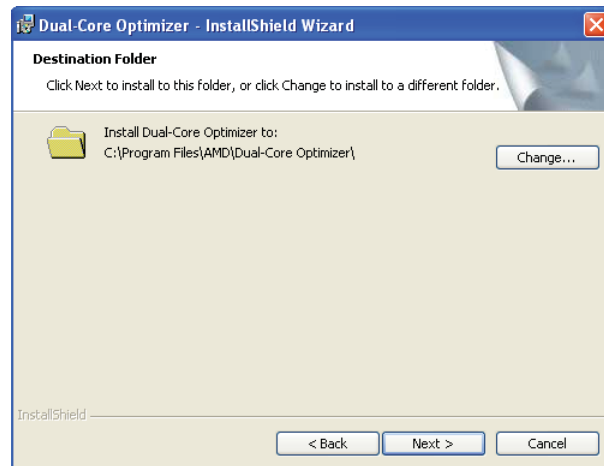

Select [Next]

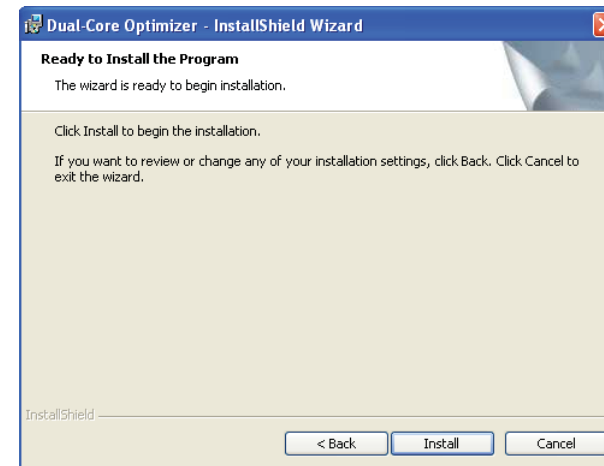

Select [Install]

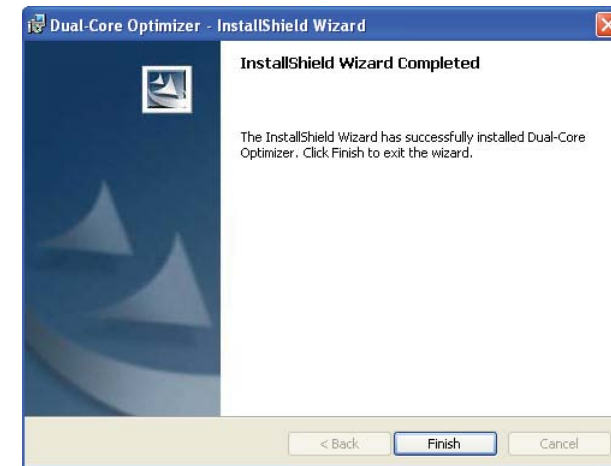


Select [Finish]


3. Install Microsoft .NET Framework

It is required when you install [Catalyst Control Center] from Chipset Drivers and Utilities (ATI Software).
Make sure to install Microsoft .NET Framework first before [Catalyst Control Center].


Run /INSTALL/Microsoft .NET Framework/dotnetfx.exe.

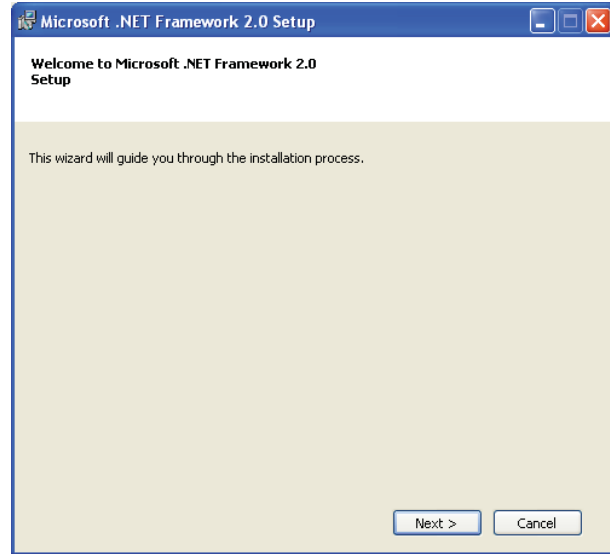

Select [Next]

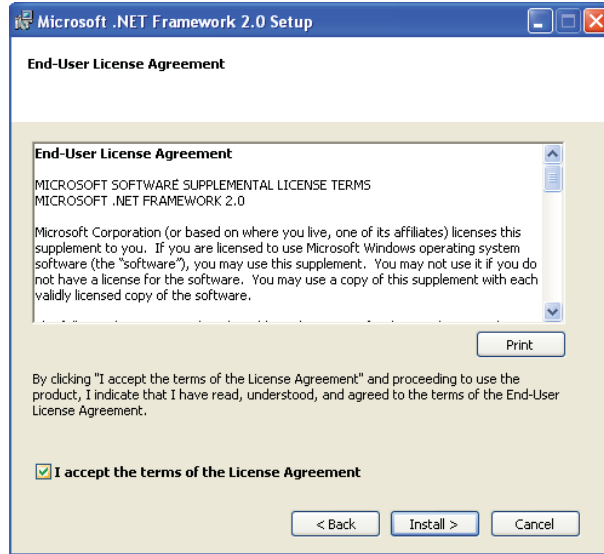

Mark the checkbox of [Agreed] and select [Install]

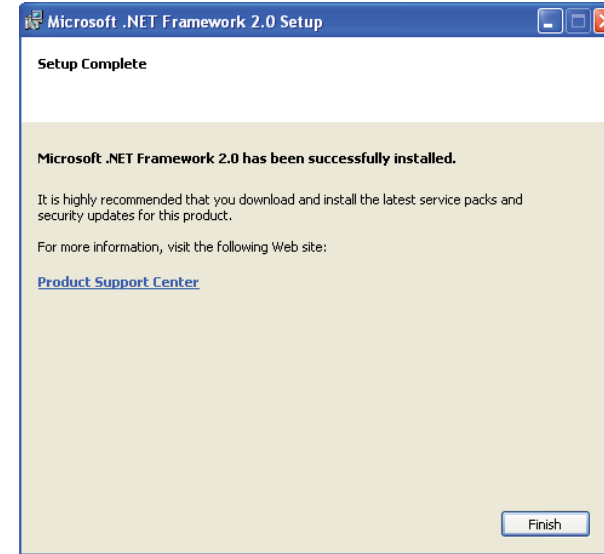


Select [Finish]


4. Install Chipset and Video Driver

- ※ Before installation, make sure to [Microsoft .NET Framework (version 2.0)] first.
- ATI Display Driver / South Bridge/IXP Driver / HDMI Audio Driver
 - / Catalyst Control Center / ATI Level limited / Install ATI AVIVO / HDMI Audio Driver Utility


/INSTALL/Chipset/M690E-T_SB600_XP32-6Lang_v8.477_840/XP32-6Lang/Setup.exe

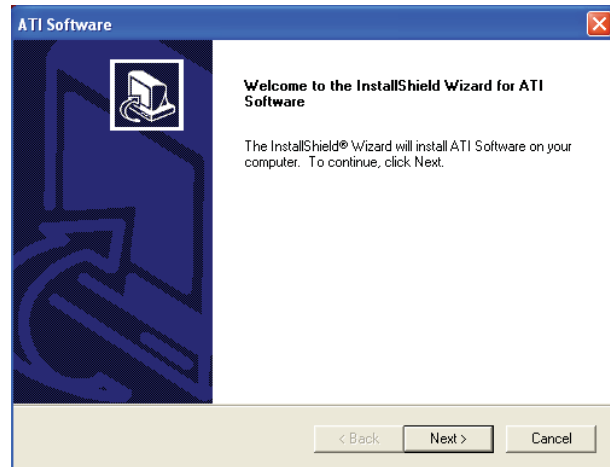

Select [Next]

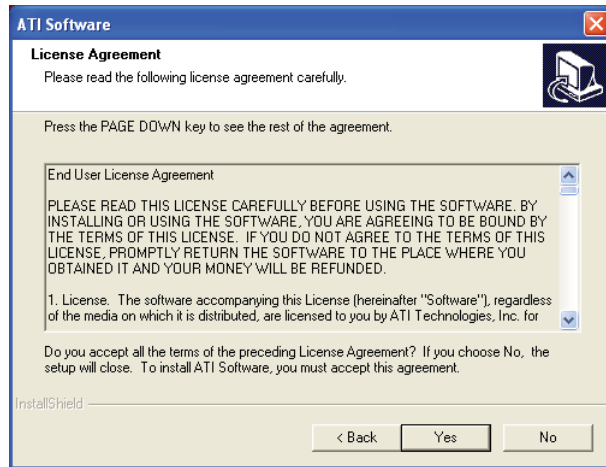


Select [Next]

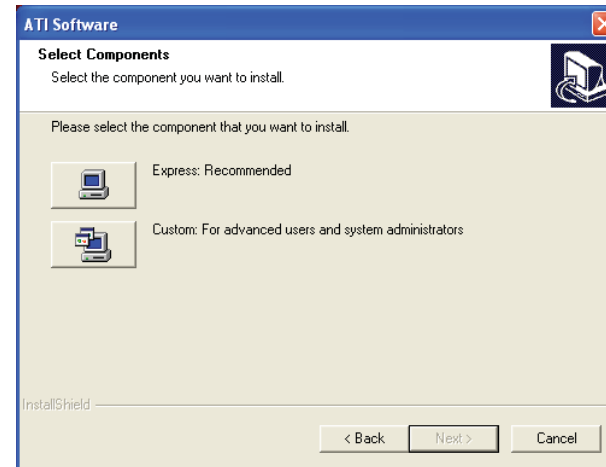


Select [Express: recommended]



Select [Next]

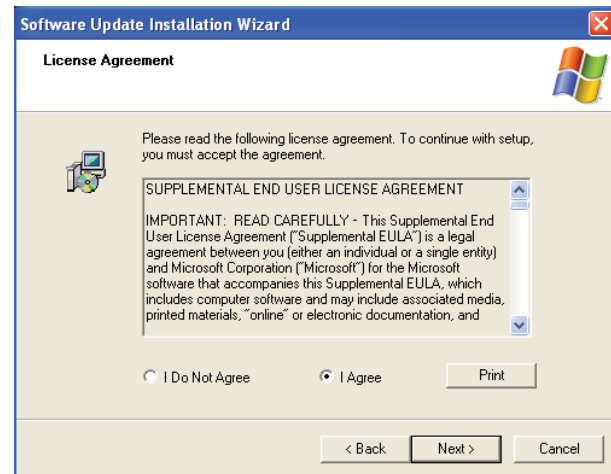


Select [I Agree] and then [Next]

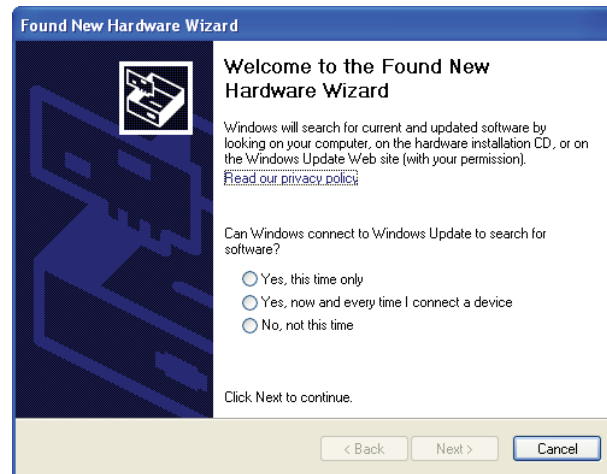

Select [Cancel]




Select [Cancel]

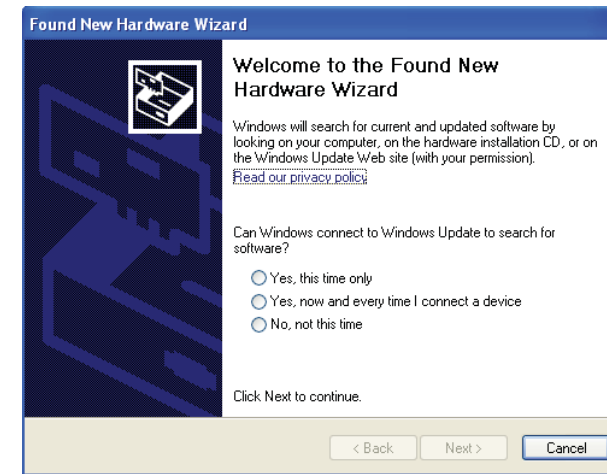

Select [Cancel]

※ While the program is being installed, a new hardware search wizard pops up. Cancel it to continue.

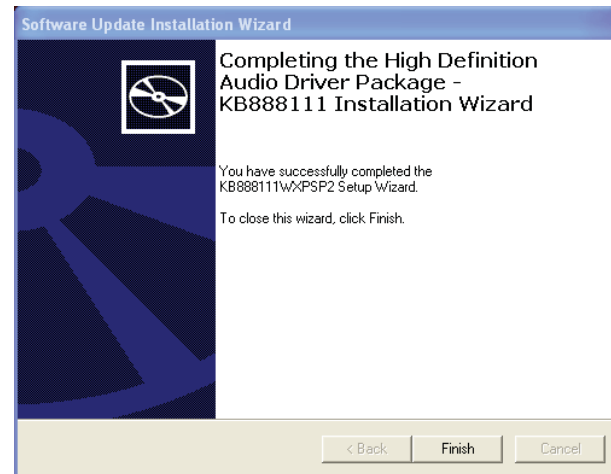


Select [Finish]




Select [Finish]

5. Install Audio Driver

Run /INSTALL/Audio/WDM_R192/Setup.exe.

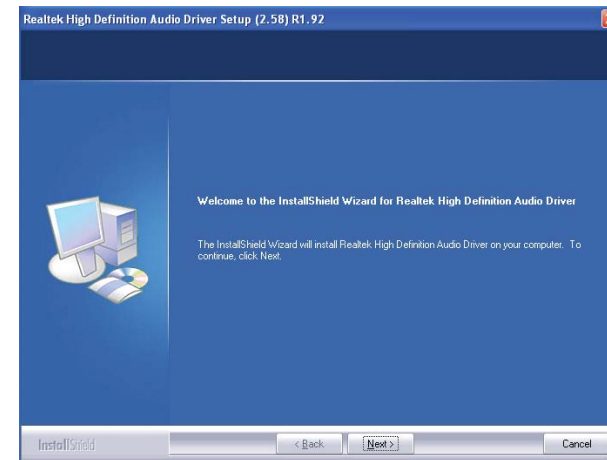

Select [Next]

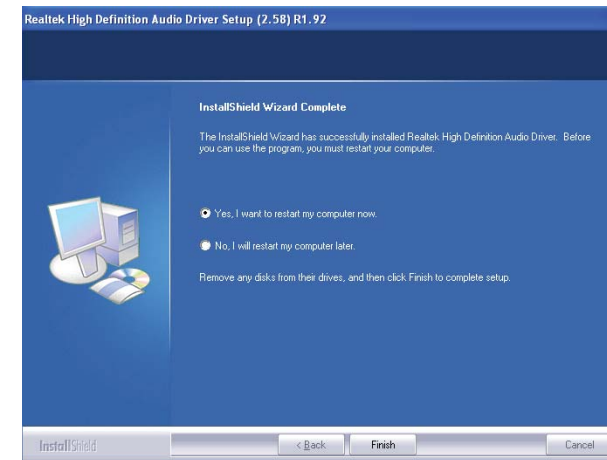


Select [Finish]

6. SDA Standard Compliant SD Host Controller Driver Update

※ It is required to install WiFi driver.


Go to Control Panel > System > Hardware > Device Manager.

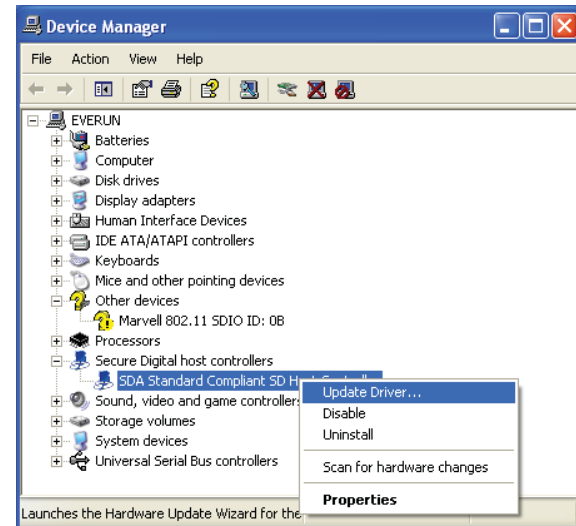


Select [SDA Standard Compliant SD Host Controller] and click the right button of the mouse.
Select [Driver Update] from the pop-up menu.




Select [Yes, now and every time I connect a device]
and then [Next]

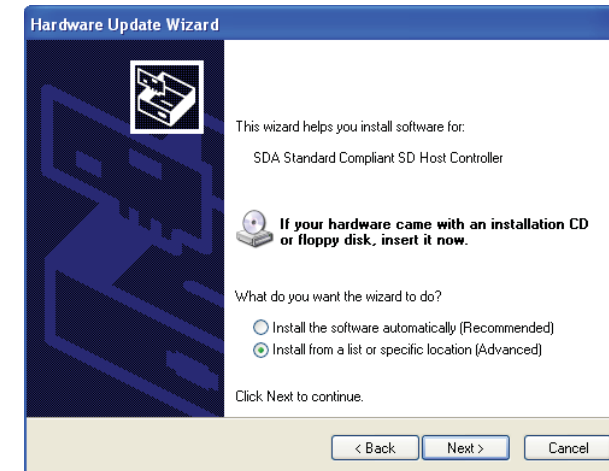


Select [Install from a list or specific location
(Advanced)] and then [Next]

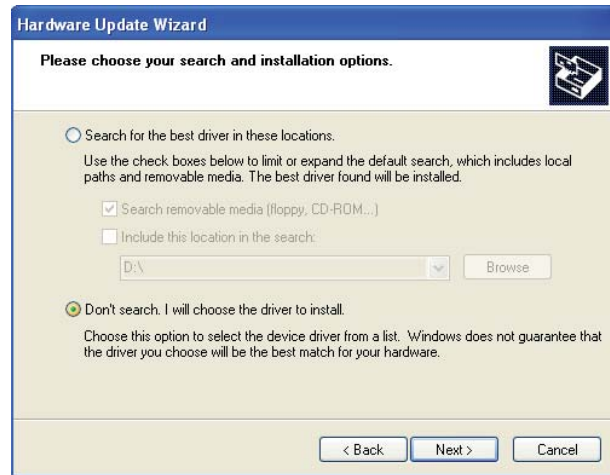


Select [Don't search. I will choose the driver to install] and then [Next]

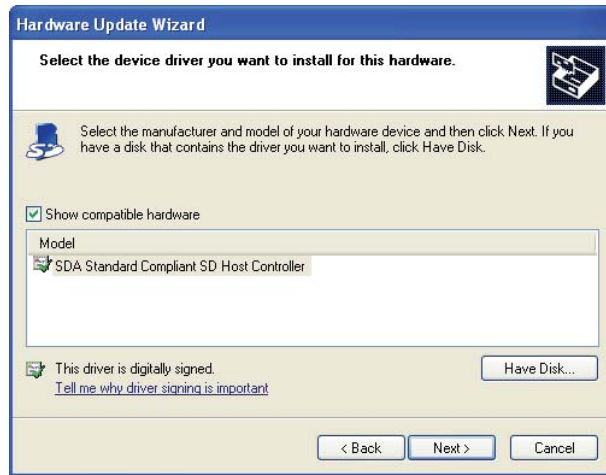

Select [Have Disk]

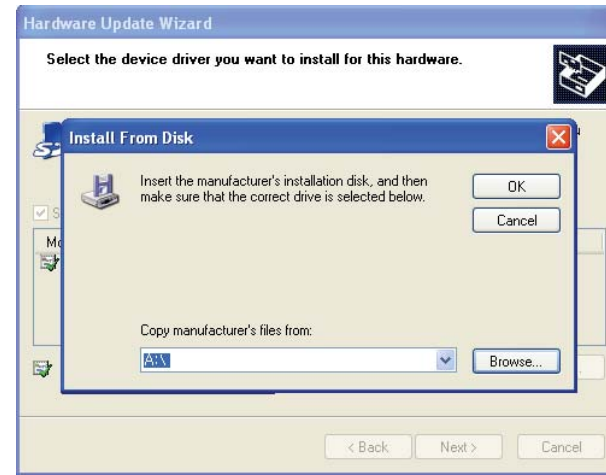


Select [Browse]

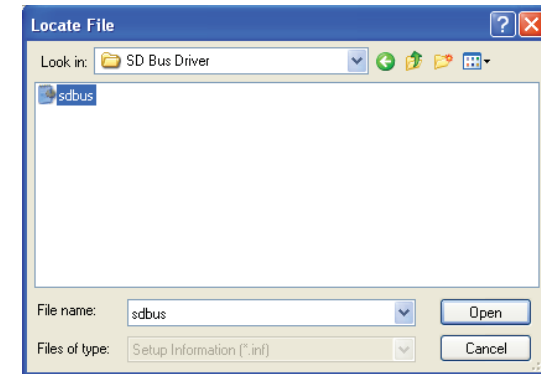

Select /INSTALL/SD Bus Driver/sdbus.inf from [Find a file] and then [Open]




Select [OK]

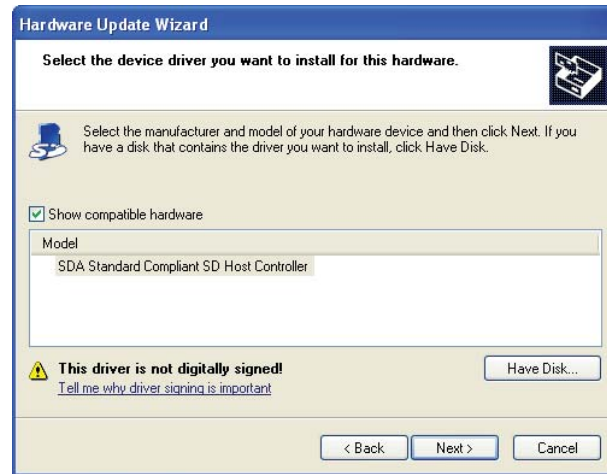

Select [Next]



Select [Continue Anyway]

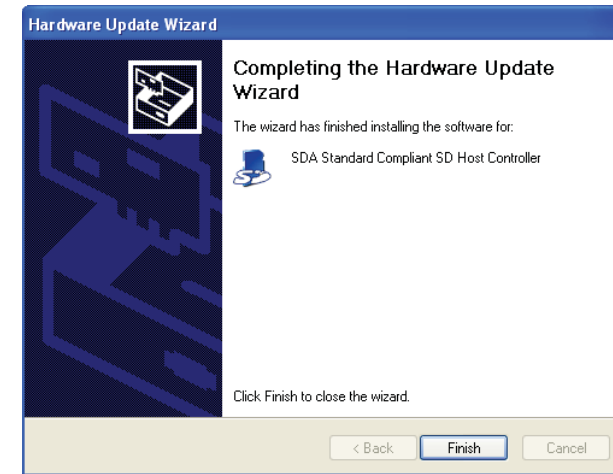


Select [Finish]

7. Install WiFi driver

※ Make it sure to update [SDA Standard Compliant SD Host Controller] first before installing WiFi.


Go to Control Panel > System > Hardware > Device Manager.

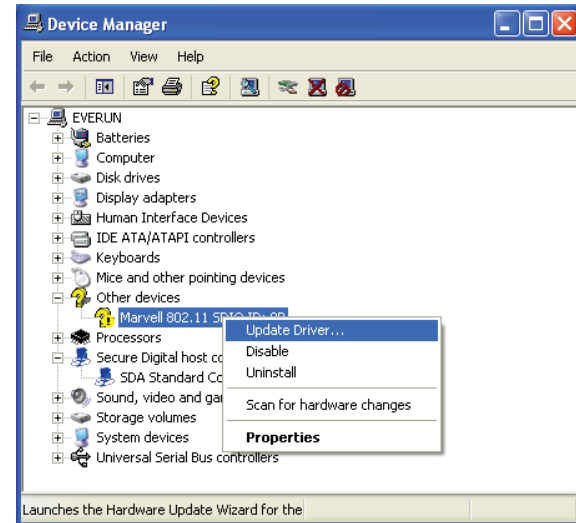


Select [Marvell 802.11 SDIO ID:0B] and click the right button of the mouse. Select [Driver Update] from the pop-up menu.




Select [Install from a list or specific location (Advanced)] and then [Next]

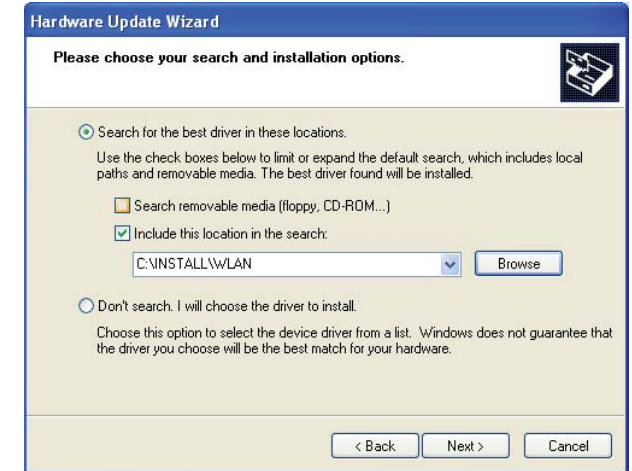

Select [Search for the best driver in these locations]
Mark the checkbox of [Include this location in the search]
and select [Browse]

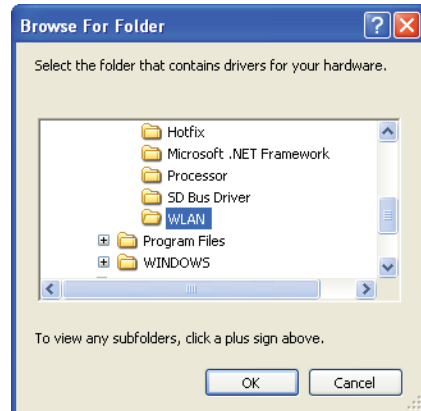


Select the folder /INSTALL/WLAN from [Find Folder] and then [OK]

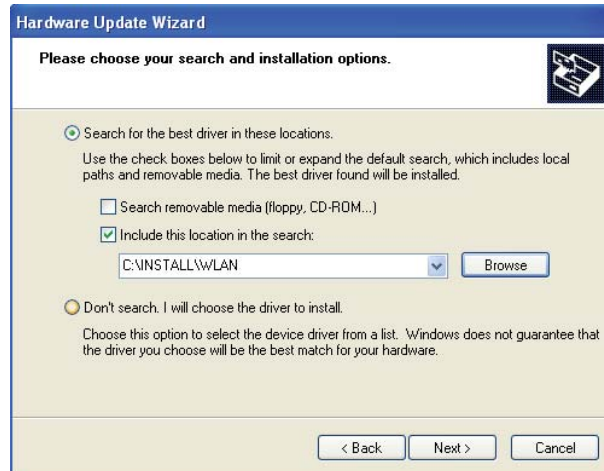

Select [Next]




Select [Continue Anyway]

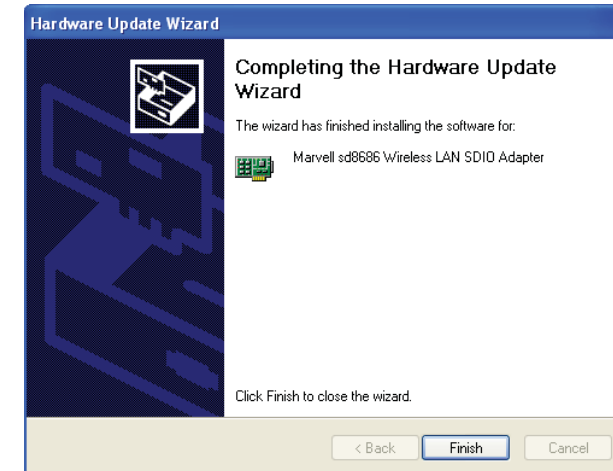


Select [Finish]

When [Marvell sd8686 Wireless LAN SDIO Adapter] Displays as shown above from [Network Adapter] in Device Manager, the wireless LAN driver is properly installed.

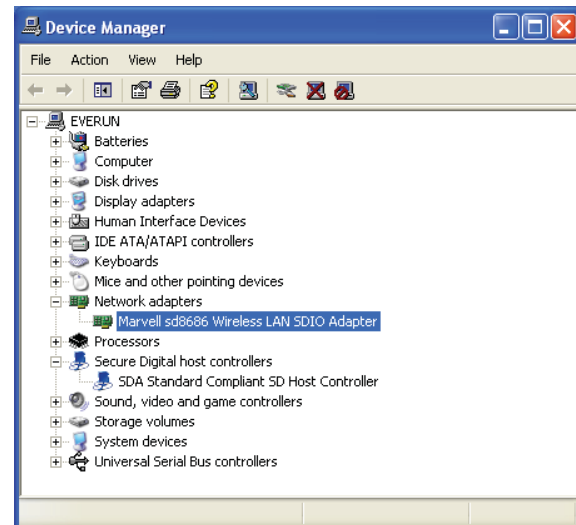


Change a [Power Save Mode] setting of wireless LANs to maintain power management sufficiently.


Run Control Panel > System > Hardware > Device Manager

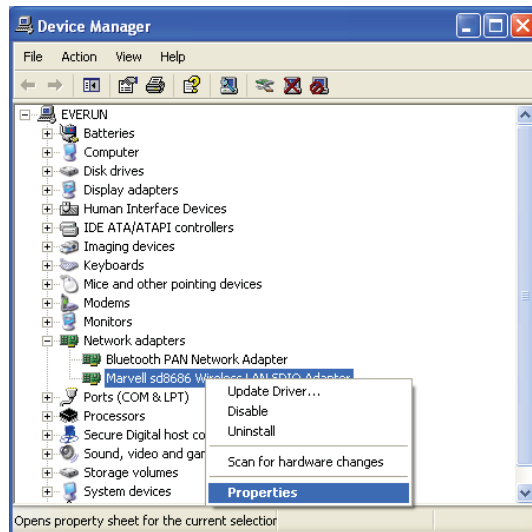


Select [Marvell sd8686 Wireless LAN SDIO Adapter] from [Network adapter] item, and click the right button of the mouse. Select [Properties] from the pop-up menu.

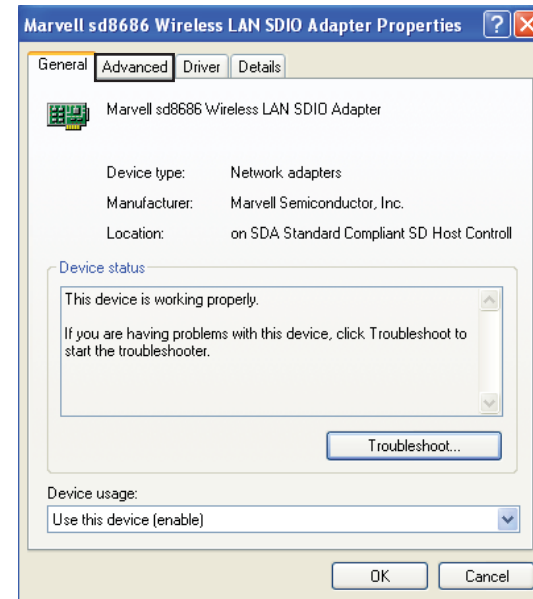


Select an [Advanced] tab

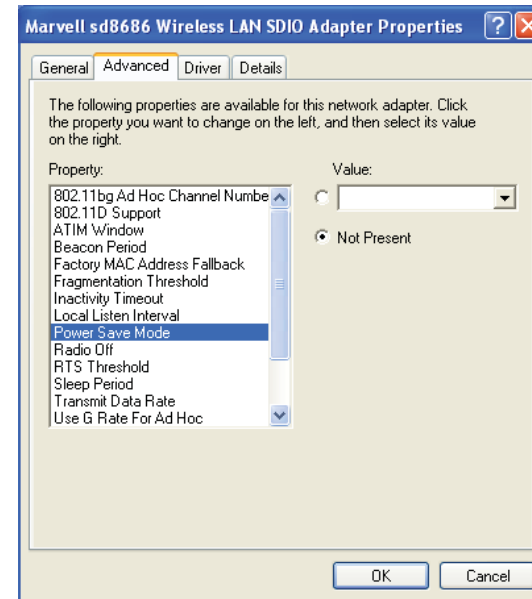

Select a [Power Save Mode] item from [Property]

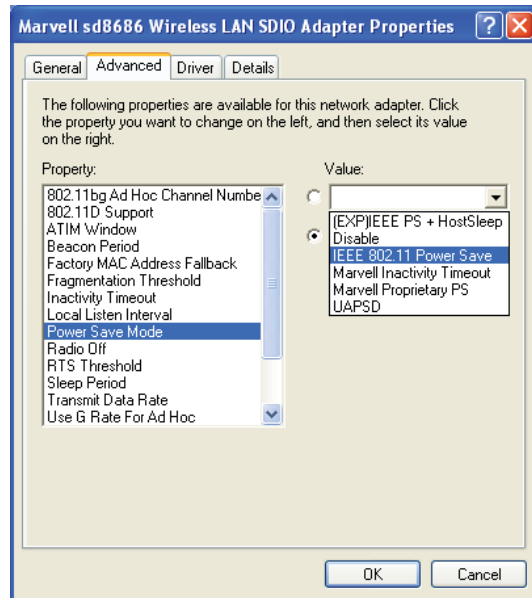

Select [IEEE 802.11 Power Save] out of [Value] items.

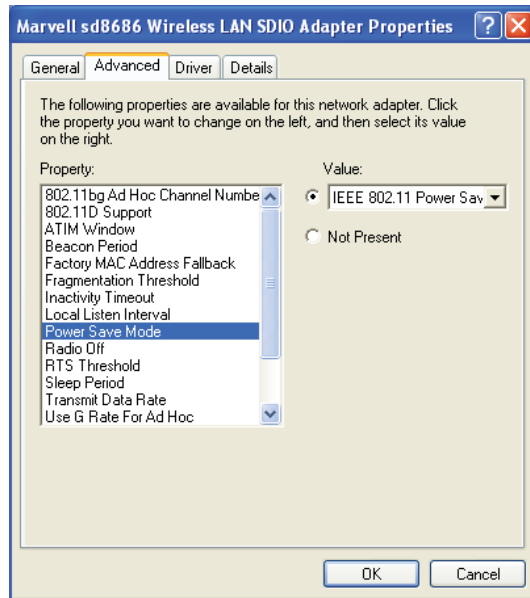


Select [OK]

- ※ When internet speed gets slow or its connectivity is not stable, change [Power Save Mode] into [Disable].
- ※ You can change the settings of [Power Save Mode (IEEE 802.11 Power Save)] and [Normal Mode (Disable)] in the control program (CoxWin).

8. Install BlueSoleil, a Bluetooth Utility

Run /INSTALL/Bluesoleil_3.2_VoIP_Multilingual_070406/setup.exe.

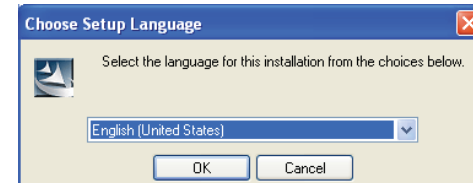


Select a language and then [OK]




Select [Next]




Select [I accept the terms in the license agreement]
and then [Next]

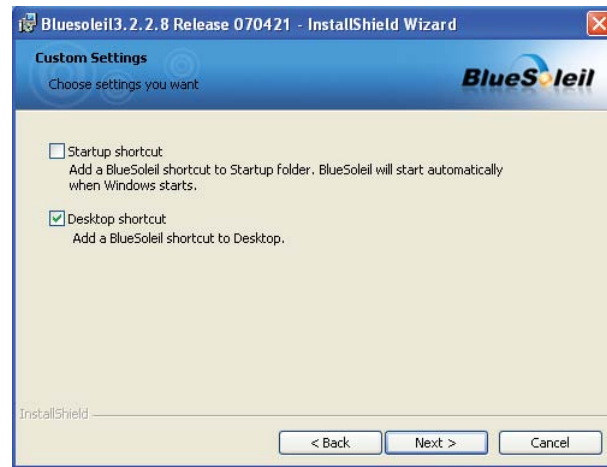


Select [Next]

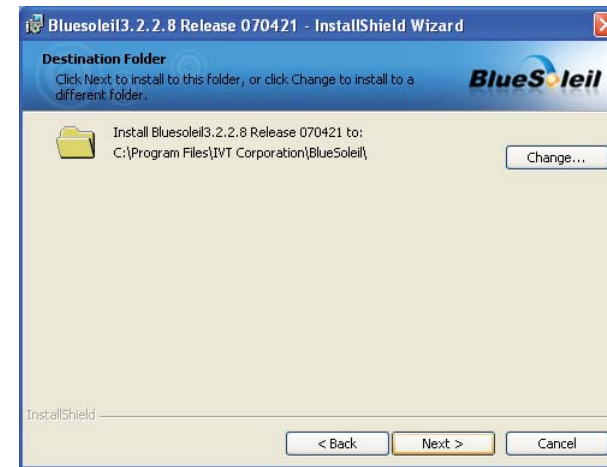

Select [Next]

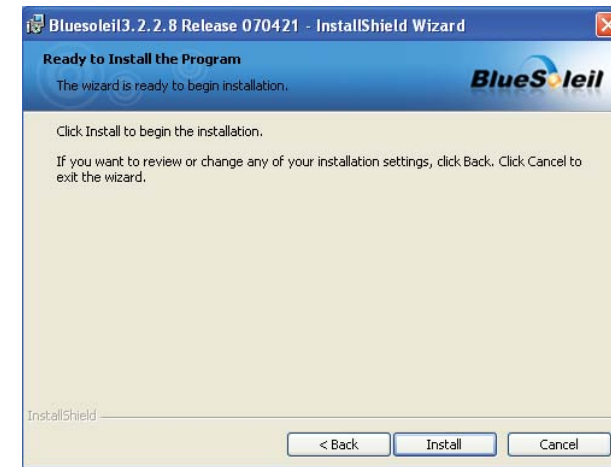

Select [install]

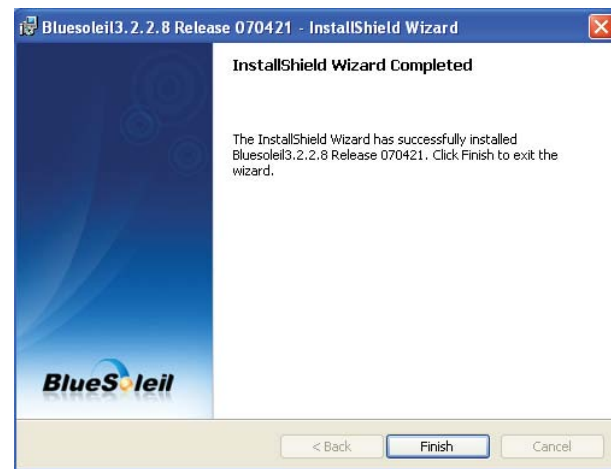


Select [Finish]


9. Install Windows XP Update

KB918005 (/INSTALL/Hotfix/WindowsXP-KB918005-v4-x86-en.exe)


It solves the problems that battery life reduces in a specific environment when a specific USB 2.0 device is connected in Windows XP-based portable computer. Once its update is done, you should restart your computer.

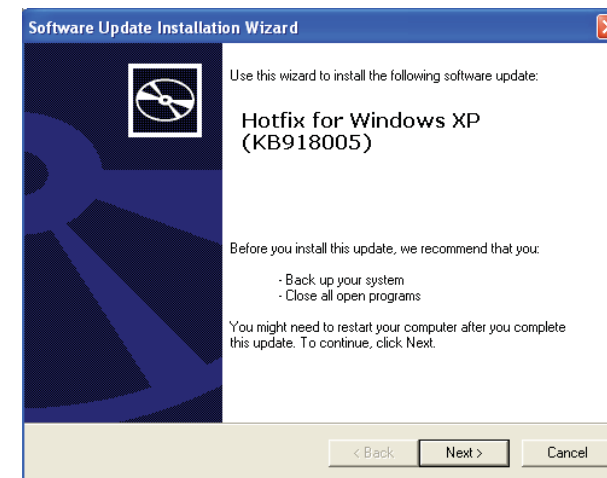

Select [Next]

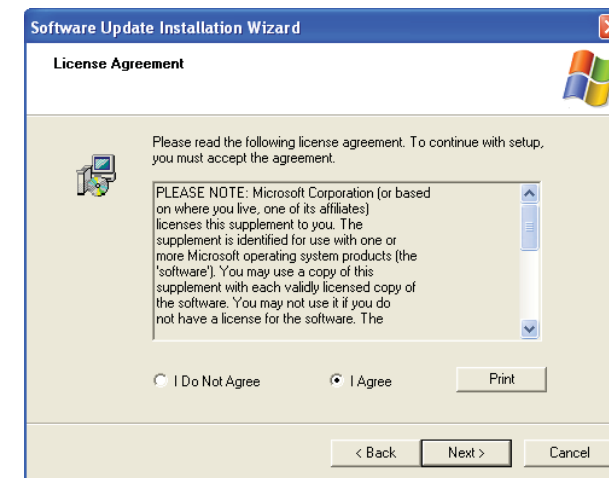


Select [I Agree] and then [Next]

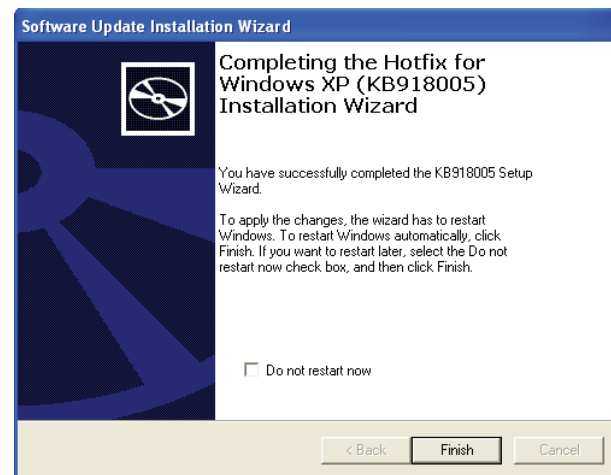


Select [Finish] and restart the system

KB896256 (/INSTALL/Hotfix/WindowsXP-KB896256-v4-x86-en.exe)

Please install it only in the dual core product.
It supports the function of processor power control and solves the problems that its performance can be lower in Windows-based system where the multi-processor is installed.
Once its update is done, you should restart your computer.

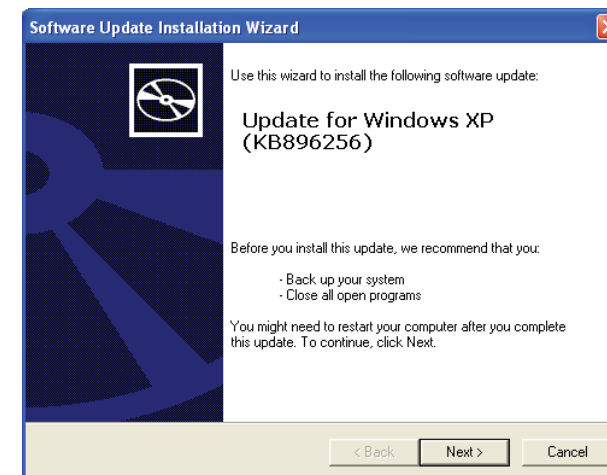

Select [Next]

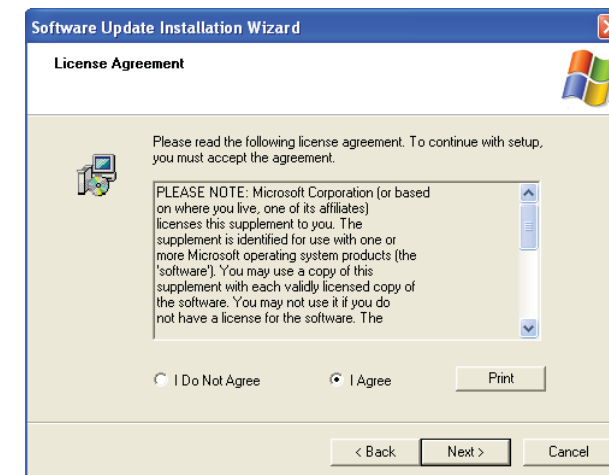

Select [I Agree] and then [Next]



Select [Finish] and restart the system

KB916199 (/INSTALL/Hotfix/windowsxp-kb916199-v2-x86-en.exe)

Please install it only in the dual core product.


If you press the window or adjust the size of the window when the dual core processor or hyper threading processor is installed, it solves the problems that XP didn't respond to.

Once its update is done, you should restart your computer.

Run /INSTALL/Hotfix/windowsxp-kb916199-v2-x86-en.exe



Select [Next]

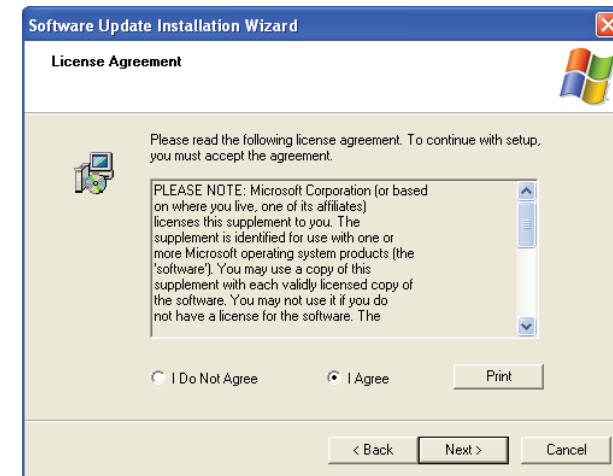

Select [I Agree] and then [Next]



Select [Finish] and restart the system

10. Re-install Control Program (CoxWin)

For update, click the right button of CoxWin icon displayed in the tray icons (at the right bottom corner of the screen), and a pop-up menu is shown. Select "Exit" to finish CoxWin that is running.

If you install it without finishing, it will not be installed properly.
(An error message "An error occurred during the move data process:-132" occurs.)
Once it is done, go to Start > Programs > CoxWin > CoxWin or reboot it.



CoxWin icon

Q&A

Specification / RF Specification

Warranty and Repairs

Q&A

Windows System

Q: Which Windows OS System is compatible in this product?

A: Windows XP Home Edition or Vista.

Q: Are there any programs necessary other than Windows XP?

A: CoxWin, a control program of this product, and device drivers are required.

Others can be downloaded from manufacturer's website.

Q: It has some tears on Windows labels.

A: Registered labels are designed to be shown as torn for its security.

Network

Q: Can I use a wired LAN for it?

A: You need to buy optional portable charger or a wired LAN card of USB type.

Q: How can I use Internet outside?

A: You can use wireless internet services provided by some internet providers using the built-in wireless LAN or public APs from schools or public organizations. Or you can use internet using 3G like HSDPA and WiBro cards. (Contact your local carriers)

* However, you can use HSDPA and WiBro devices only in some specific models.

Q: How can I have access to wireless AP?(For example, wired / wireless router)

A: You should know the name of the router(SSID). In some cases, it requires a security password.

Q: Why is my network often disconnected?

A: Wireless network has big receiving rate due to the neighboring environment. Move to the other place to use it.

Power Unit and Battery

Q: Can I use it with the charging adapter plugged into it?

A: If the battery is plugged into the main body, power is supplied simultaneously to the battery and the device.

In this case, the charging time becomes longer than when you charge the battery with the device off, but it doesn't give any effect to the device. When you charge it in use, heat is very likely to occur. So it is recommended to charge it with the device off.

Q: The battery becomes hot while being charged.

A: It produces heat due to its chemical response when it is charged or discharged. But it is safe as it has a protective circuit that blocks power supply at a certain temperature.

Q: What is the battery life?

A: It can be different depending on its using environment and conditions, but it is about 300 times including charging and discharging.

Q: Can I keep having the adapter plugged into the socket?

A: You may do so to prevent power loss. But we recommend to remove it when you don't use it.

Q: Can I use a different product with the same standard for the adapter?

A: Its polarity can be different even though its output voltage and power supply are the same.
So do not use a different product as possible.

Q: How can I set the warning mark of low voltage?

A: Click the icon of Control Program (CoxWin), and it displays the setting for low voltage warning. It is displayed as %.
You can set it at Control Panel > Power Options of Windows as well.

Q: How long is it for battery to be fully charged?

A: It will take about four hours.

Q: How long is battery warranty?

A: It is six months after purchasing it.

Q: How can I check battery life?

A: If its time gets shorter or swollen by bits, it almost comes to an end.
In this case, replace it with a new one.

External devices

Q: Can I use all the devices using USB?

A: You can use the keyboard, mouse and memory stick with no problems. But sometimes, such devices as external disk and CD-ROM need additional power supply.

Q: Can I use an external USB CD/DVD-ROM?

A: Yes, you can. Depending on the devices, you need additional power supply. Some devices are incompatible.

Q: Is an external HDD booting supported?

A: It is possible if it is an external USB type. You should format USB storage unit for making it bootable and set it to a startup disk.

GPS Receiver and Navigation

Q: Can I use any GPS receiver?

A: You can use USB or Bluetooth typed receiver. But they can have some differences in their receiving rates.

Q: Which map can I use for the product?

A: If it is a PC version (Windows XP) product, you can use it.

Q: How can I connect to GPS receiver?

A: Go to Control Panel > System > Hardware > Device Manager, and mark the checkbox of 'Port' to set it to the same port and its speed to 9600. For others, see the manual.

Q: It doesn't receive well.

A: If you don't use it for a long time, its receiving is delayed. If it doesn't work even after 30 minutes, move its location.
If it still doesn't work, go to Customer Support to have it checked.

Adjusting LCD and Screen

Q: What is its basic resolution?

A: It is 1024 X 600. You can change it in [Display Settings].

Q: How can I control LCD brightness?

A: You can control it by pressing Fn key 6 (darker) or 7 (brighter) from the keyboard.

You can also control it in the control program. (CoxWin)

Q: How can I capture the screen?

A: Press Fn key and P button from the keyboard to capture the screen.

Q: When I touch it with Stylus Pen, the cursor is trembling.

A: It is normal that the pressure of touch screen is not conveyed only to a point, but to all the neighboring pixels.

Q: My mouse's point and the touched point are different.

A: You should make a calibration from the control program. (CoxWin).

Q: My touch screen has some scar in it. Do I have to exchange its LCD?

A: As it is All-in-one system, you should exchange it.

Q: Can I use a protective film for LCD?

A: Depending on the kinds of film, some touch senses are poor, or some film make the screen darker.

You should use the recommended film provided by the manufacturer or the stores.

Bluetooth

Q: Can I connect it to all the devices with Bluetooth mounted?

A: Yes. You can connect it to most of the devices.

Q: How can I connect it to Bluetooth devices?

A: Run Bluetooth devices to operate and connect Bluetooth program, and it will find them automatically.

Q: It often disconnects while connecting to Bluetooth.

A: Bluetooth is a wireless local area network device. Its receiving rate to the neighboring obstacles changes big.

So it is recommended for you to use it near the system as possible as you can. For more problems, go to Customer Support to have it checked.

About options

Q: Hardware (CPU, RAM) is upgradable?

A: No. The main boards are different for each model.

Q: Information of the computer displays different RAM capacity.

A: It shares main RAM with VGA. So it deducts as much as assigned to VGA.

Q: It is getting slower than I used it for the first time.

A: Please check viruses or the programs installed by a user.

Even if it is slow after reinstalling Windows, you should go to Customer Support to have it checked.

Specification

| | | |
|-----------------------|--|----------------------|
| | | |
| CPU | AMD Turion 64X2 Dual 1.2GHz / 1.0GHz | Sempron 1.2GHz |
| Memory | 1GB DDR400 (VGA Shared) | |
| Storage | 12GB SSD UDMA66 / | |
| | 30GB / 60GB/ 80GB HDD UDMA100 | |
| LCD | 7" Touch screen, Resolution | 1024X600, 262K Color |
| Wireless LAN | 802.11b/g | |
| Bluetooth | 2.0 + EDR | |
| Input devices | Touch screen | |
| | Optical mouse | |
| | Qwerty keyboard | |
| Camera | 1.3M Pixels | |
| External Connectivity | USB Ax2, USB mini B, VGA OUT, SD card Slot | |
| Video | ATI 690 RS690E (64MB SidePort RAM + Shared RAM) | |
| Audio | Realtek High Definition Audio | |
| | 0.6Wx2 Stereo built-in speaker, Stereo earphone, | |
| | Built-in microphone, external microphone | |
| Battery | Standard capacity : 3.7V 5600mAh Li-Polymer | |
| Power | AC100~240V 50/60Hz | |
| Power consumption | Maximum 35W (Charged state) | |
| Size | 200 x 118 x 27.5 | |
| Weight | 742g | |

The specification of this product is subject to change without notice for improving its performance.

FCC RF Exposure Information

In August 1996 the Federal Communications Commission(FCC) of the United States with its action in Report and order 96-326 adopted an updated safety standard for human exposure the radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of EVERUN NOTE complies with the FCC guidelines and those international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage your EVERUN NOTE, or result in violation of FCC regulations.

EVERUN NOTE was tested for typical body-wom operation using the optional belt-clip / holster placed touch(0cm) from the body. The use of non-tested accessories or other body-wom operations may not comply with FCC exposure requirements and should be avoided.

Contact your local dealer for optional accessory items.
For more information about RF exposure, please visit the FCC website at www.fcc.gov

FCC Radio Frequency Emission
This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID : V HTEVER70
EVERUN NOTE. More information on the phone's SAR can be found from the following FCC website: [http:// www.fcc.gov/oet/fccid](http://www.fcc.gov/oet/fccid)

USER INFORMATION

Acknowledging Special Precaution and the FCC Industry Canada Notice

Cautions

Modification not expressly by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance Information

This device complies with part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received.

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and, on the user is encouraged to try to correct the interference by one or more of the following measure:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warranty and Repairs

You can get warranty services for this product from the designated Customer Service Centers.

Warranty may not be applied to user's errors. Warranty is limited to the hardware. We do not warrant its Windows OS and 3rd party software.

Warranty period

1. Main body : One year after purchase
2. Battery and other peripheral parts from the main body : Six months after purchase

Out of Free Warranty


1. Found superficial scars on the product
2. Failure by careless use of power (using non-genuine adapter)
3. Using a different OS other than the original OS installed by the company
4. Ignoring the precautions for use of the products
5. Warranty label is damaged
6. Disassembling or altering the product voluntarily
7. Software errors, viruses or malicious cords
8. The product reported as stolen

Warranty Card


| | | |
|----------------|------|-------------|
| Product name : | | Model name: |
| Purchase date: | | (dd/mm/yy) |
| Customer name: | Tel: | Address: |
| Seller name: | Tel: | Address: |

When you want repairs on the product, you can obtain warranty service fully with this card provided. Please keep this card with you at all times.

Serial Number

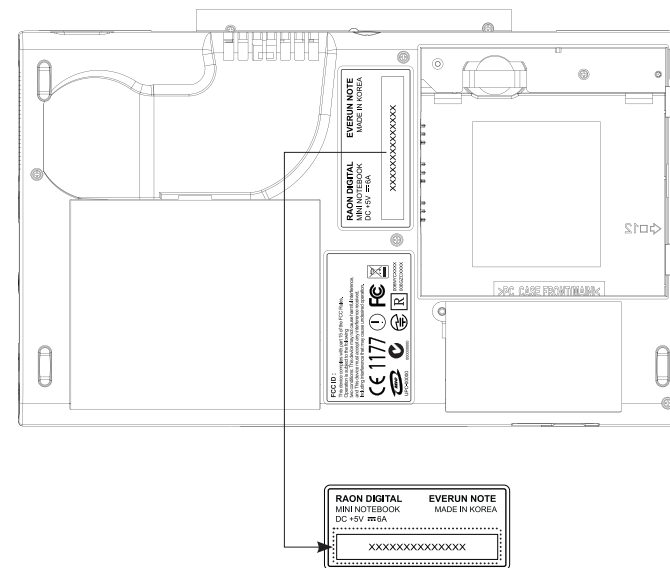

Serial Number(Main body)

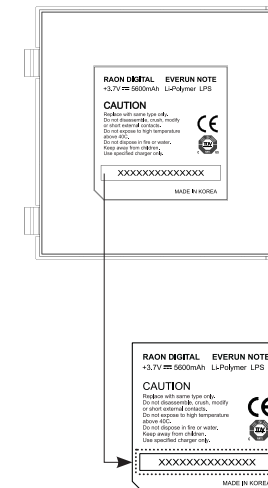

Serial Number(Battery)



RAON Digital Co., Ltd.

18th Floor, KINS Tower, 25-1 Jeongja-Dong, Bundang-Gu, Seongnam-City, Gyeonggi-Do 463-811, Korea

TEL +82-31-782-3800 FAX +82-31-782-3810

E-mail salesinfo@raondigital.com

www.raondigital.com

EVERN

The compact premium experience