

FIND IT FAST!

Magic Finder™


Thank you for purchasing MagicFinder™, the revolutionary new device that will help you find your lost items anytime, anywhere!



- **2 Way Tracking** - Lost your phone? Don't worry! Just press the button on the back of any paired MagicFinder™ and it will make your phone sound an alarm and vibrate so that you can locate it quickly and easily.


Syncing the MagicFinder™ to your iOS/Android Device:

- 1: Remove the battery insulator from the MagicFinder™ by take off the clear plastic sheet on the bottom of the battery.
- 2: Download the free MagicFinder™ App from the App store.
- 3: Turn on the Bluetooth connection on your smart phone.
- 4: Open the MagicFinder™ App and press the (+) sign on the top right corner to pair the MagicFinder™ to your smart device. This will take approximately 30-60 seconds.
- 5: You can pair up to 8 MagicFinder™ devices to your smart phone simultaneously.

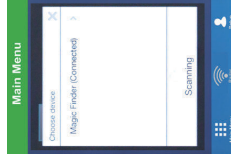

Changing the Battery:

MagicFinder™ uses a CR2032 standard watch battery. To change the battery locate the battery cover located at the back of MagicFinder™. Use a coin to open and lock the battery cover as per the direction of arrow. Slide out the old battery and replace it with a new one. One side of the battery is marked with a (+), the positive side. Carefully place the battery into the device with the same side down as the old battery. The MagicFinder™ App features step by step instructions on how to change the battery.

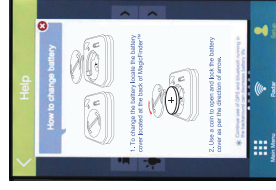


- To access the guide:
- Select the "Setup" icon at the bottom of the main menu screen
 - Press the "Help" button located next to the light bulb icon.
 - Select Basic user instructions.

Customizing your MagicFinder™ Icon:


• Changing Image:

- Select the icon of the MagicFinder™ on the main menu screen of the App.
- Press the image icon and select the camera or album function to upload the image that you want to use.

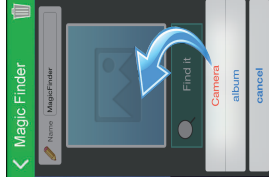



• Renaming:

- Select the icon of the MagicFinder™ on the main menu screen of the App.
- Press the text bar to the right of the pencil icon at the top of the page and type in the name that you want to use.

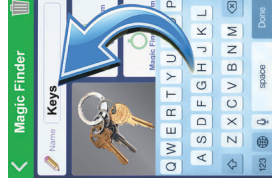

Finding Lost Items:

- **By Radar** - The radar feature provided in the MagicFinder™ App will allow you to use your smart device to visually track the distance to your lost item/s. To track an item/s using the radar function simply press the radar icon location at the bottom of the main menu screen.
- **By Sound** - To track your lost item by sound, go to the main menu screen and select the icon of the item that you want to track. Then press "Find It" to make the MagicFinder™ device attached to the lost item sound an alarm and light up.

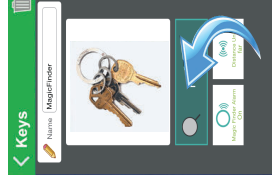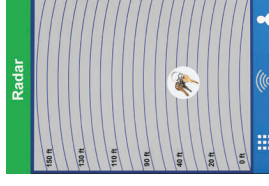

WARNING:

**CHOKING HAZARD - Small parts.
Not for children under 3 years.
Use with adult supervision only.**

MagicFinder™ is manufactured in China and distributed by:



**300 Roundhill Drive Suite 1
Rockaway, NJ 07866**

Customer Service line at
1-973-531-4421

Troubleshooting:

The MagicFinder™ App features a helpful troubleshooting guide. To access the guide:

- Select the "Setup" icon at the bottom of the main menu screen
- Press the "Help" button located next to the light bulb icon.
- Select the Troubleshooting Guide.

Quick Tip:

If you are unable to sync the MagicFinder™ to your smart device please check to make sure that the battery is securely in place and then try to pair it again. If it still does not pair try replacing the battery with a new one. If the MagicFinder™ still will not pair to your smart device please contact our customer service team at 1-973-531-4421 ext. 14 for assistance.

Smart Device Requirements:

iOS/Android device with Bluetooth 4.0

Specs:

Technology: Bluetooth 4.0

Range: up to 150 feet in an open area

Battery type: CR2032 watch battery

Temperature Range: 5°F-150°F

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.