
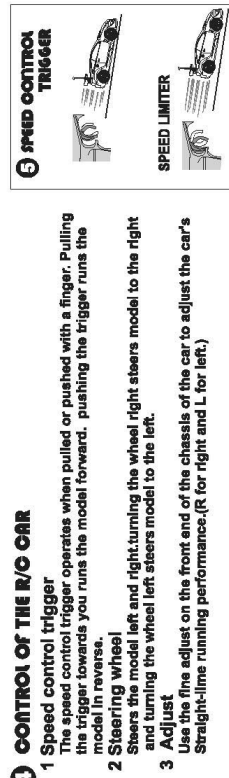


User manual

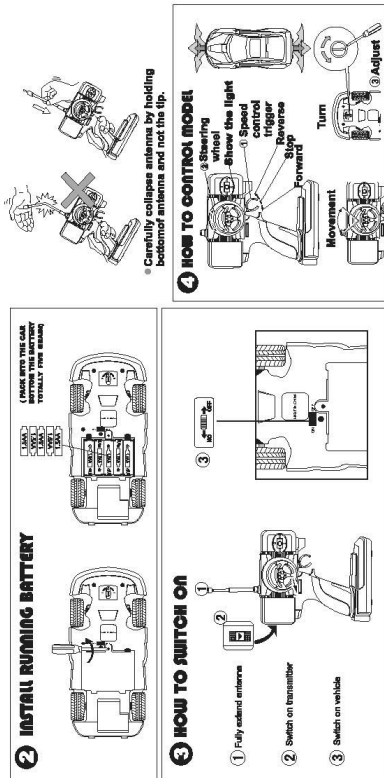

CAUTION

The car uses Ni-Cd batteries and is capable of reaching high speeds. Improper operation may be dangerous. Please observe the following warnings.

WHEN STORING RC MODEL

- Never store RC model near fire.
- Never store RC model in a damp area, out doors or in the rain.

TAKE CARE WHEN USING NI-CD BATTERIES

- Enormous amounts of current can flow in the circuits when using Ni-Cd batteries. Improper handling can cause serious damage and accidents. Always follow the instructions included with your Ni-Cd batteries and change for safe operation.

CAUTIONS WHILE RUNNING RC CAR

- Make sure that no one else is using the same frequency as yours in your running area. Using the same frequency causing damage to the transmitter and car.
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WHEN STORING RC MODEL

- Never run an RC model in the street or crowded areas. Running an RC model in these areas can cause serious accidents and injuries.
- Avoid running the RC model in standing water or rain. Moisture in mechanics can cause malfunction.
- If you have control difficulties with correctly installed fresh batteries, it may be caused by radio wave interference. Change the running location or time to operate your RC model.
- If you have thunder or see lightning, immediately stop running the RC model and collapse transmitter antenna.
- Follow these basic rules for safe and enjoyable RC operation. Please read these instructions for future reference.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



ITEM NO.9023

TUNER RACER

SCALE 1:16

● A PARENT OR SUPERVISING ADULT SHOULD READ THE HANDING INSTRUCTIONS

TRANSMITTER

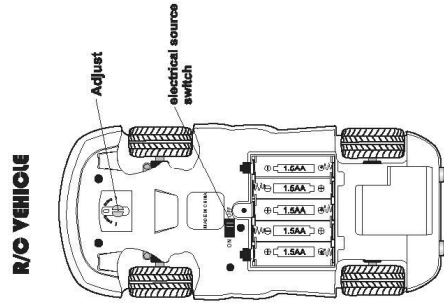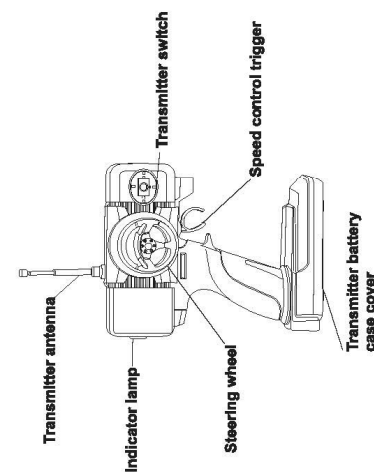


HOW TO INSTALL TRANSMITTER BATTERY

Use a 9v battery for the transmitter. Always use fresh batteries and install properly.

- Open transmitter battery cover.
- Insert 2 "AA" battery noting correct polarity. If power does not work properly, reinsert battery and make sure that connections are secure.
- Close transmitter battery cover.

● If the switch is turned on and the indicator lamp does not light, check battery. If battery is properly installed and indicator lamp fails to light, battery may be depleted. Install fresh battery for playing.

● Take out the battery after playing.

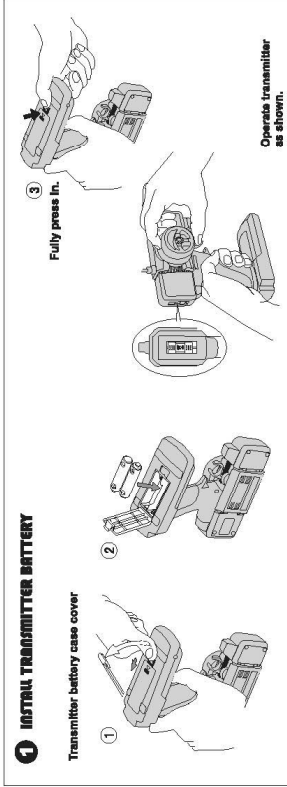

MADE IN CHINA