

FIGURE 1
LCD TV (M/N: LCD19W57DCA)
COVER REMOVED



FIGURE 2
LCD TV (M/N: LCD19W57DCA)
MAIN BOARD (COMPONENT SIDE)



FIGURE 3
LCD TV (M/N: LCD19W57DCA)
MAIN BOARD (SOLDERED SIDE)



FIGURE 4
LCD TV (M/N: LCD19W57DCA)
CHIP



FIGURE 5
LCD TV (M/N: LCD19W57DCA)
CRYSTAL



FIGURE 6
LCD TV (M/N: LCD19W57DCA)
LABEL ON TUNER



FIGURE 7
LCD TV (M/N: LCD19W57DCA)
HIGH VOLTAGE BOARD (COMPONENT SIDE)

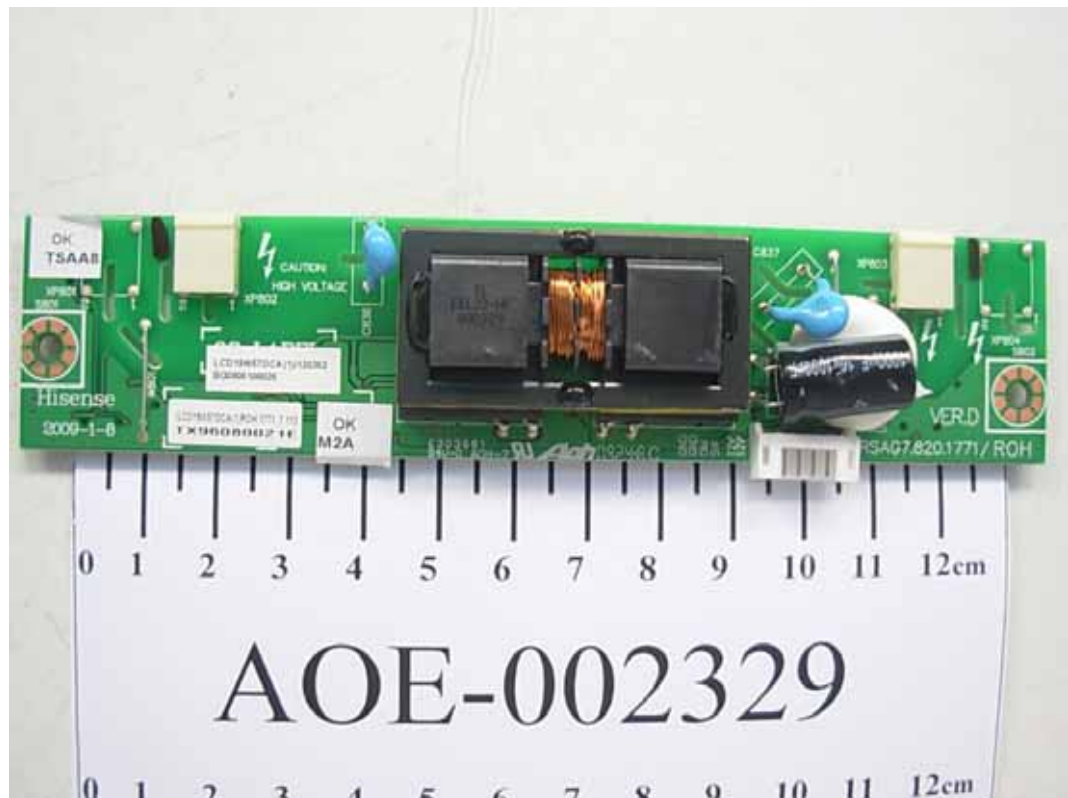


FIGURE 8
LCD TV (M/N: LCD19W57DCA)
HIGH VOLTAGE BOARD (SOLDERED SIDE)

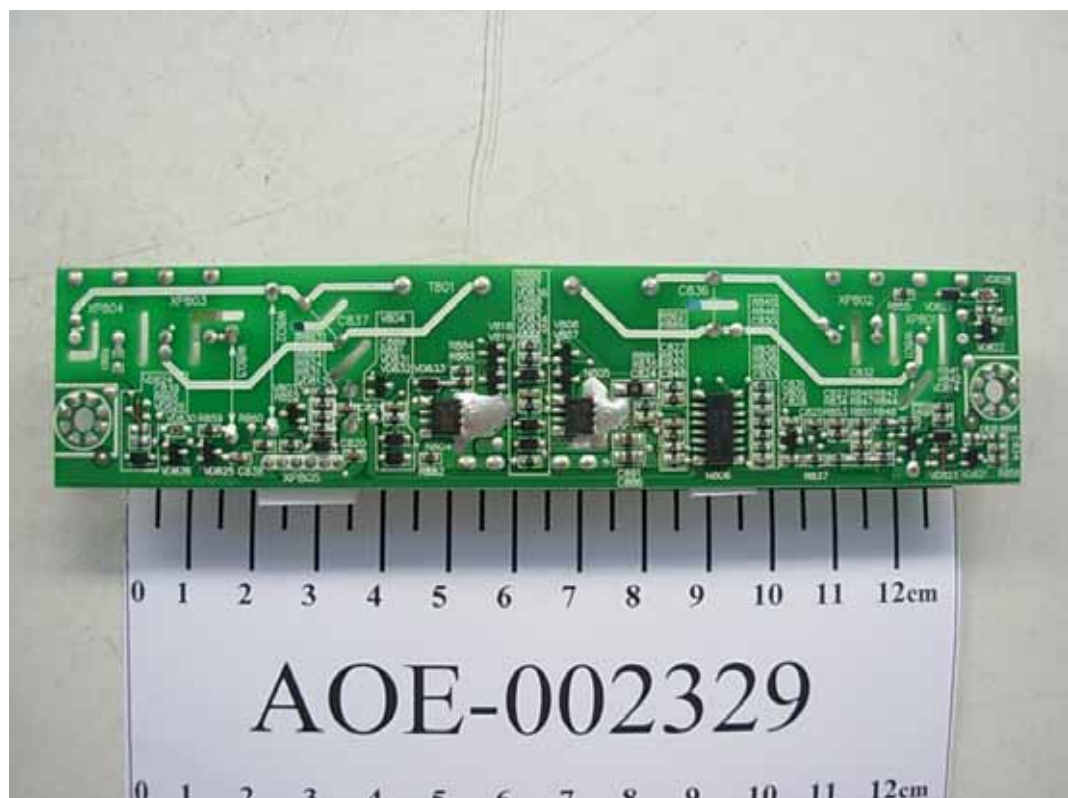


FIGURE 9
LCD TV (M/N: LCD19W57DCA)
LED BOARD (COMPONENT SIDE)

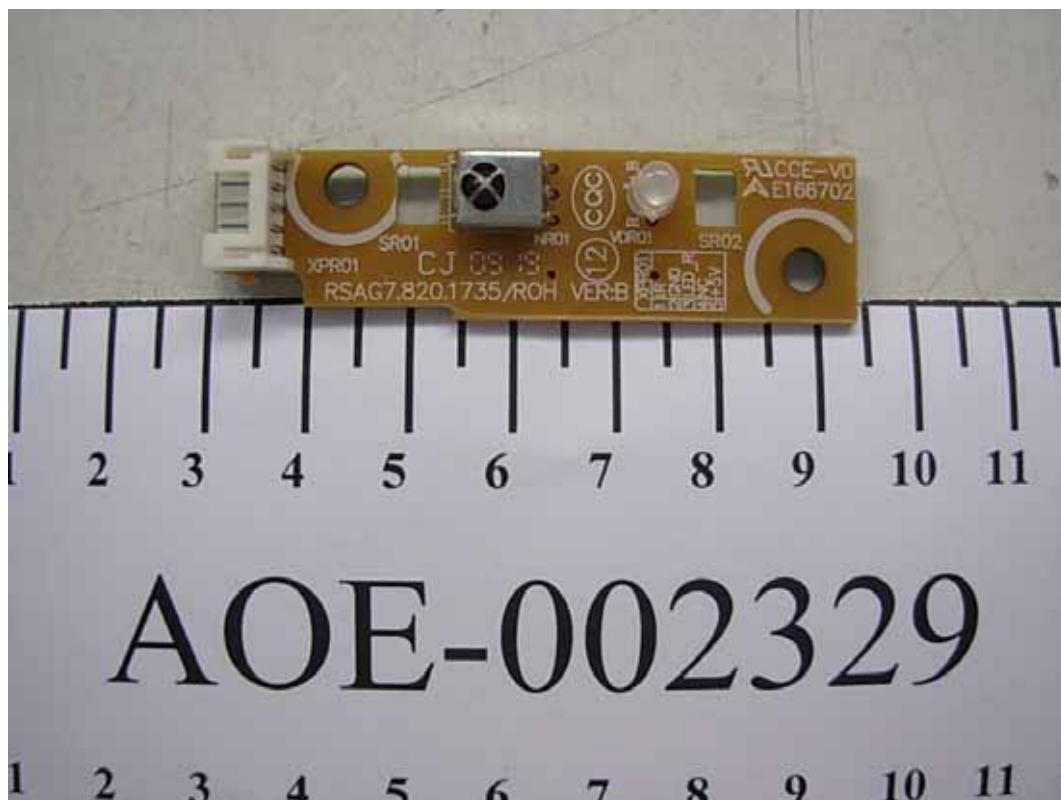


FIGURE 10
LCD TV (M/N: LCD19W57DCA)
LED BOARD (SOLDERED SIDE)

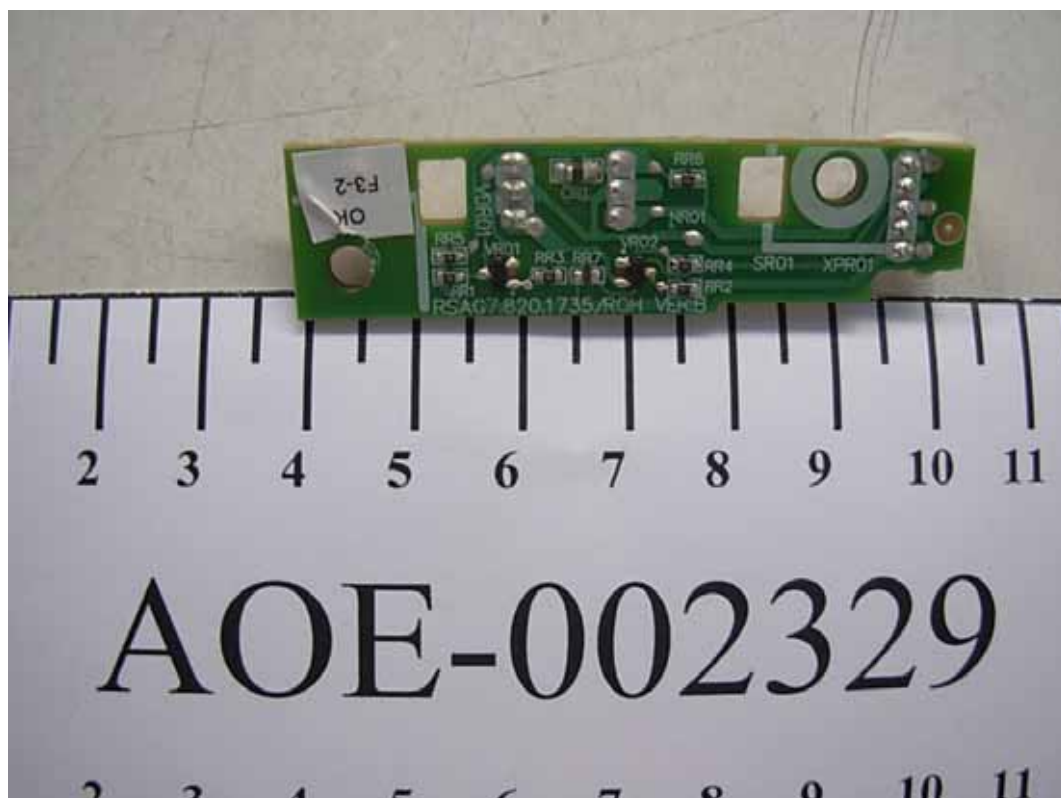


FIGURE 11
LCD TV (M/N: LCD19W57DCA)
BUTTON BOARD (COMPONENT SIDE)



FIGURE 12
LCD TV (M/N: LCD19W57DCA)
BUTTON BOARD (SOLDERED SIDE)

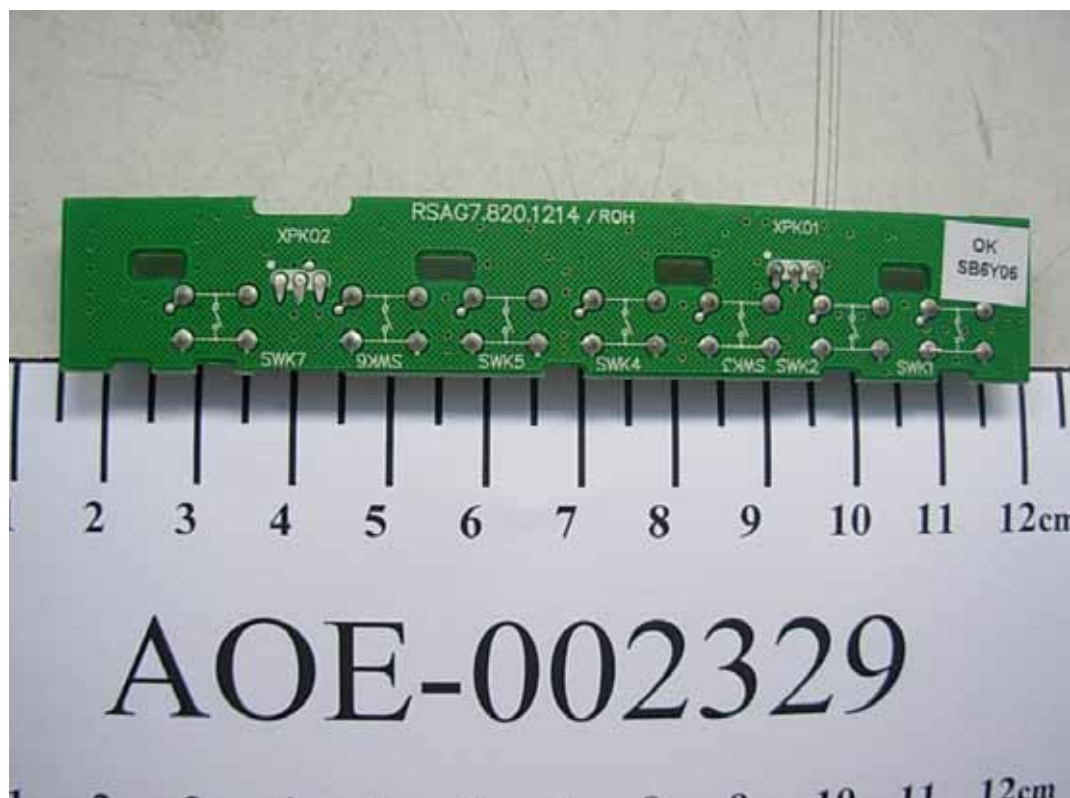


FIGURE 13
LCD TV (M/N: LCD19W57DCA)
PANEL BOARD



FIGURE 14
LCD TV (M/N: LCD19W57DCA)
LABEL ON PANEL



FIGURE 15
LCD TV (M/N: LCD19W57DCA)
DVD FRONT



FIGURE 16
LCD TV (M/N: LCD19W57DCA)
DVD BACK



FIGURE 17
LCD TV (M/N: LCD19W57DCA)
ADAPTER FRONT VIEW



FIGURE 18
LCD TV (M/N: LCD19W57DCA)
ADAPTER BACK VIEW



FIGURE 19
LCD TV (M/N: LCD19W57DCA)
LABEL ON ADAPTER



FIGURE 20
LCD TV (M/N: LCD19W57DCA)
ADAPTER AC IN PORT



FIGURE 21
LCD TV (M/N: LCD19W57DCA)
ADAPTER COVER REMOVED



FIGURE 22
LCD TV (M/N: LCD19W57DCA)
POWER BOARD (COMPONENT SIDE)



FIGURE 23
LCD TV (M/N: LCD19W57DCA)
POWER BOARD (SOLDERED SIDE)



FIGURE 24
LCD TV (M/N: LCD19W57DCA)
DEBUG 1



FIGURE 25
LCD TV (M/N: LCD19W57DCA)
DEBUG 2

