

OWNER'S MANUAL



Everything YOO need to know about your
YOOSTAR ENTERTAINMENT SYSTEM



CONTENTS

Getting Started	
What's included	
Unpack your Yoostar Studio in a Box	
Assemble Your Camera	
Install the YooStar Immersive Technology software.....	
Connect YOOSTAR Camera to your Computer.....	
Setting up Your Green Screen.....	
Configure your YooStar studio	
Position your YooStar Camera	
Position your YooStar Green Screen.....	
Register your YooStar Entertainment System.....	
Recording Tips and Frequently Asked Questions (FAQs).....	
Prevent the Camera from Falling.....	
Prevent the Camera from Overheating	
Connect YOOSTAR to your TV	
Electrical Safety.....	
To avoid damaging the USB camera cord.....	
Federal Communications Commission (FCC) Statement	

GETTING STARTED

Welcome to YOOSTAR!

If you're reading this then **YOU** are a proud owner of the Yoostar entertainment system. You're only minutes away from becoming the star you were always destined to be. Just follow the easy guide below and get ready for an experience of a lifetime.





UNPACK YOUR YOOSTAR STUDIO IN A BOX

Inside the Yoostar box you'll find everything you need for your very own Hollywood studio. Included here are –

- Yoostar camera
- Green screen
- Portable green screen frame
- Remote control
- Alternate screen clip adapter
- Alternate tripod adapter



ASSEMBLE YOUR CAMERA

Attach the base to the camera neck by aligning and inserting into neck into the tripod base and screwing the connecting bolt securely.

With the stand completed connect the camera head on top of the neck by squeezing the clips located beneath the camera head. Place camera head on top of pivot located in center of the red platform on top of neck. When positioned release clip so camera head attaches to neck securely. (Repeat this when connecting camera head to optional clip adapters supplied here).

Holding camera securely train USB cable into channel located on back of neck and place tail securely into clip located on rear top of tripod stand.

Slide the remote control onto the back of the Yoostar camera.





POSITION YOUR YOOSTAR CAMERA

The Yoostar camera is designed to stand vertically on your desk and/or tabletop next to your computer or laptop.



CONNECT YOOSTAR TO YOUR COMPUTER

Insert the USB cable from the Yoostar camera into the appropriate USB dock on your computer.



CONNECT YOOSTAR TO YOUR TV

To connect to a high-definition or standard-definition TV or monitor, you need to purchase the appropriate cables below after evaluating the necessary connections between your TV or monitor and your computer.

The Yoostar entertainment system is compatible with all the following connections:

- Component HD AV Cable
- 360 Component HD AV Cable
- 360 HDMI Cable
- DVi/HDMI Cable

CAUTION

Before using the Yoostar camera, be sure to remove the clear plastic film that covers the lens. This protective seal can prevent the clarity of filming when you try to load a disc.



CAMERA CARE

Prevent the Camera from Falling

To reduce the risk of the camera falling and damage to the camera itself, set up the Yoostar camera according to these instructions. Place the camera on a surface that:

- Is flat and level.
- Is stable and not likely to tip over.
- Allows all three feet of the base to be in contact with the surface.
- Is not likely to allow the camera to slip or slide off.
- Is clean and free of dust and debris.

If the surface or camera feet become dirty or dusty, clean them with a dry cloth. If the camera is in a fully extended position vertically, put it on a surface where it is not likely to fall if it tips over.

Arrange all cables and cords.

When the Yoostar camera is not in use, keep camera in DOWN position. You may want to disconnect the USB camera cable if you are using a laptop to prevent a pull on

Prevent the Camera from Overheating

Do not place the camera near any heat sources, such as radiators, heat registers, stoves, or amplifiers.

Avoid Smoke and Dust

Do not use the camera in smoky or dusty locations. Smoke and dust can damage the lens of the Yoostar camera.

Electrical Safety

Always connect the power cords according to the following instructions:

- Fully insert the USB cord into your computer's appropriate port until it clicks.

As with many other electrical devices, failure to take the following precautions can result in serious injury or death from electric shock or fire or damage to the Yoostar entertainment system.

To avoid damaging the USB camera cord:

- Protect the USB cord from being pinched or sharply bent, particularly where they connect to the computer source.
- Do not jerk, knot, sharply bend, or otherwise abuse the camera cable.
- Do not expose the camera cable to sources of heat.
- Do not wrap power cords around the power supply unit.
- Keep children and pets away from the power cords. Do not allow them to bite or chew on them.
- When disconnecting the power cords, pull on the plug—do not pull on the cord.
- Do not let the power supply hang from either power cord.
- If a power cord or power supply becomes damaged in any way, stop using it immediately and contact Xbox Customer Support for a replacement.

Unplug your Yoostar camera during lightning storms or when unused for long periods of time.

Connect Your Yoostar camera to Your Computer

To connect your camera to your computer, insert the controller cord connector into either controller port on the front of the console. To disconnect, pull the USB cable out. Be careful to hold the camera securely when pulling out the USB cable.


Note

Do not touch camera plate with your fingers or allow metal parts to touch them. Doing so may damage the lens and performance of the Yoostar camera. Clean only with a dry or slightly damp cloth. Using cleaning solutions or attempting to clean connectors may damage your controller.



SETTING UP YOUR GREEN SCREEN

Remove the Yoostar green screen frame and green screen from the Yoostar package.

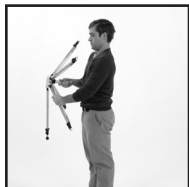

Assemble the green screen stand

Hold green screen stand securely by back support. Slide out one leg to full extended position. Repeat and slide out second leg. When two legs are fully extended and locked place on floor and continue same for third and fourth leg of green screen stand.



When stand is completed place green screen on floor and hook both right and left corner tabs onto frame. Lift green screen and hook corner tab on top left leg of frame. Repeat same with top right leg.

Position green screen as directed in application.



page 8


INSTALLING SOFTWARE

Open software

- Users have a 10 day free trial before software must be registered
- Enter serial number from Certificate of Authenticity in the box
- Create User Name
- Enter valid e-mail address (address is used to confirm registration)
- Enter password
- Confirm password
- Press REGISTER

Cascade

- Explain two cascades
- Need copy here, Need copy here, Need copy here, Need copy here, Need copy here, Need copy here, Need copy here, Need copy here
- Your Clips
- Your Performances
- Show navigation of cascade
- Mouse
- Keyboard (arrows, page up / dn, Home, End)
- Remote (arrows, Play, Rec, Select)
- Show how the Your Performances Button works
- Changes content in cascade to show recorded performances
- Your Performances cascade works the same as the Your Clips Cascade
- Show how the Filters work
- Click on Movies (show cascade showing only movies)
- Click on TV (show cascade showing only tv)
- Show how the Search box works
- Enter an actor's name, movie name, director's name etc...
- Filters cascade to show only results matching your search criteria

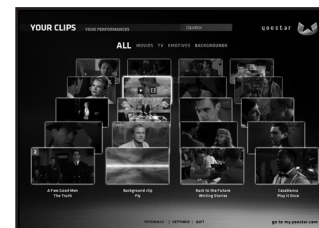

page 9



TEXT IS JUST DROPPED IN FOR NOW
NOT FORMATED YET

- Preview a clip
- Click the play button on the cascade image
- Click the (x) or the video to close the player

Settings

Show how Settings work

Click on settings button

Discuss each of the settings

General Settings

Speaker volume – Controls audio output levels

Mic Level – Controls audio input levels

Subtitles - Turns teleprompter on or off

Mirror Camera – sets camera to work as a mirror image instead of normal visual

Cascade Movies – Turns on / off the mini movies on

the cascade

Cascade Sound – Turns on / off the mini movie

sounds on the cascade

User Accounts

Add user accounts

Each user account must be validated with an account at Yoostar.

com

Parental Controls

A pin number must be set the first time the Parental Controls are

used

Parental Controls determine what level of content is visible in the

Cascade

Setting Movie Ratings to “G” will only show G rated movies in

the Cascade

Record

From the Your Clips Cascade

Select a clip to perform

Double click on an image – or –

Click on the details button – or –

Use the remote to navigate to a clip and press the select button

Show and describe “pick a role” screen

Description of the clip

Preview of the clip

Roles available from this clip

Print Script

Show camera setup

Select a role to play

Double click on a role image

Highlight a role image and click record

Step in process

Ensure the camera is completely showing the greenscreen

Nothing should be showing in the image but the greenscreen

Adjust the camera or greenscreen if necessary

Position yourself in the chalk outline on the screen

Press the record button

Using your Remote, press the REC button

Using your Mouse, click the REC button

Using your keyboard press the Space Bar

Step completely out of the scene

Make sure that the greenscreen is the only thing showing in the camera frame

Press the Record Button

Using your Remote, press the REC button

Using your Mouse, click the REC button

Using your keyboard press the Space Bar

Position yourself back into the scene and within the Chalk Outline

Press the Record Button

Using your Remote, press the REC button

Using your Mouse, click the REC button

Using your keyboard press the Space Bar

After the countdown ends the scene begins

Following the teleprompter, record your scene



When recording ends you have several options

Preview your scene

- Click on the Play button on the image
- Using your remote press the Play Button

Try the scene again

- Click on the Try Again Button
- Using your remote move to highlight the Try Again button and press Select

Save your Performance as is

- Click on the Save Button
- Using your remote move to highlight the Save button and press Select

o Delete the recorded scene

- Click on the Delete button – or –
- Using your remote move to highlight the Delete button and press Select

o Add an Introduction to your performance

- This will save your performance and allow you to record and introduction
- Click on the Add Intro button – or –
- Using your remote move to highlight the Add Intro button and press Select

Add Intro

- An intro can be added to a performance from two different places in the application
- Using the Add Intro button at the completion of a Recording
 - o Using your Remote, navigate to the Add Intro Button and press Select
 - o Using your Mouse, click the Add Intro button
 - o Using your keyboard navigate to the Add Intro Button and press Enter
- After pressing the Add Intro button complete the Step In Step Out process as follows:
 - o Ensure the camera is completely showing the green-screen
 - Nothing should be showing in the image but the greenscreen
 - Adjust the camera or greenscreen if necessary
 - o Position yourself in the chalk outline on the screen
 - o Press the record button
 - Using your Remote, press the REC button
 - Using your Mouse, click the REC button
 - Using your keyboard press the Space Bar
 - o Step completely out of the scene
 - Make sure that the greenscreen is the only thing showing in the camera frame
 - o Press the Record Button
 - Using your Remote, press the REC button
 - Using your Mouse, click the REC button
 - Using your keyboard press the Space Bar
 - o Position yourself back into the scene and within the Chalk Outline
 - o Press the Record Button



Using your Remote, press the REC button

Using your Mouse, click the REC button

Using your keyboard press the Space Bar

- After the countdown ends the Intro begins
- You have 15 Seconds to record your Intro
- When recording ends you have several options
 - o Preview your Intro
 - Click on the Play button on the image
 - Using your remote press the Play Button
 - o Try the Intro again
 - Click on the Try Again Button
 - Using your remote move to highlight the Try Again button and press Select
 - o Save your Intro as is
 - Click on the Save Button
 - Using your remote move to highlight the Save button and press Select
 - o Delete the recorded Intro
 - Click on the Delete button – or –
 - Using your remote move to highlight the Delete button and press Select
- After your selection, you are returned to the Manage Performances screen

Manage Performances

- After Saving a Performance you will be placed on the Manage Performance Screen
 - o The Manage Performance screen is used to manage the details of your performance:
 - Using the mini cascade you select a performance to work with
 - Upload your performance to YooStar.com
 - Select a performance and press the Upload button
 - Preview your performance
 - Pressing the play button on the image
 - Select a thumbnail to represent the specific performance
 - Add metadata (Title, Description, Category, Tags) about your performance
 - Record an Intro or change an existing one



Upload

- Click on the UPLOAD button
 - o In order to upload your performance, you must have an active account at YooStar.com
 - o Select a User Name to upload the performance to
User must be setup on YooStar.com
 - o Use the Add Button to add a user to upload to
A new user must have an active account on YooStar.com
 - o Set the permissions for this video
 - Public – All active members of YooStar.com can see your performance
 - Private – Only you can see your performance on YooStar.com
 - Friends – Only members who are your friend can see the video
 - o Click the Upload Now button
Your performance will be uploaded to YooStar.com
 - o Before your performance is visible on YooStar.com it must pass several system checks
YooStar.com does not allow any inappropriate content on our site

Federal Communications Commission (FCC) Statement

This equipment has been tested. And it found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses and radiates radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio /TV technician for help.

Warning: A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



BACK COVER