



*innovative* technology.

# FilmScan35 II



*-Patent pending-*

## User Manual

## *Index*

|  |                  |
|--|------------------|
| <b><i>I. Unpack FilmScan35 II.....</i></b>               | <b><i>2</i></b>  |
| <b><i>II. Install film into the film holder.....</i></b> | <b><i>3</i></b>  |
| <b><i>III. Quick Start.....</i></b>                      | <b><i>7</i></b>  |
| <b><i>IV. Operation Guide.....</i></b>                   | <b><i>12</i></b> |
| <b><i>V. Specification .....</i></b>                     | <b><i>29</i></b> |

# I. *Unpack FilmScan35 II*



FilmScan35 II



Negative Film Holder



Slide Film Holder



USB power core



USB cable



Clean brush



User manual

## NOTE

- ✧ *We strongly suggest using a clean, dry, non-alcohol cotton swab to clean the glass surface periodically to produce a clear image during operation.*
- ✧ *Clean dust from filmscanner backlight, to use the clean brush to wipe the dust.*
- ✧ *Dust or dirt from the negative, slide films and cover trays may affect the scanned image quality, please make sure the materials are cleaned before inserting into the scanner.*
- ✧ *Please find recommend, professional purger from photo store to clean the dust on films if any to avoid damaging the only one copy of old films.*





- ***Install the negative film into holder:***

1. *Open the film holder as illustrated*



2. *Install film into negative film slot*



3. *Close the film holder*




## **NOTE**

- ✧ To avoid mirror image, follow the serial numbers (from left to right) on top of film when install negative film into holder



**Figure 1**

- ✧ If the image is upside down [see fig. 2], the image can be corrected by Flip function in hard key of device before capture, or enter playback edit menu after capture [see fig. 3.4].

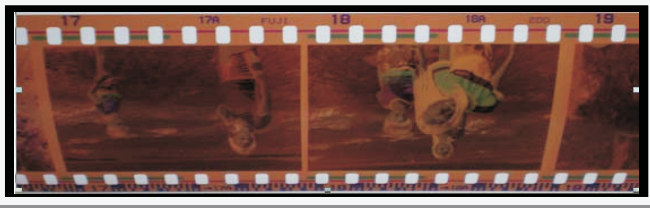

**Figure 2**

**Down/Flip button**

(Flip hard key)



Flip



- *Press hard key on top of device in live view*

**Figure 3**



- *Playback mode menu*

**Figure 4**

### ***III. Quick Start***



-7-



1. *Put Film onto the film cartridge*



2. *Insert the film cartridge into FilmScan35 II*



3. *Connect USB cable to FilmScan35 II*



4. *Turn on Device by power button*



5. *Press OK button to capture the image*



6. *Follow the menu on display for scanning*



7. *After finished the capture, take out the SD card which stored capture images*




8. *Or read pictures from PC by MSDC mode*




## IV. Operation Guide

### Home: Main menu

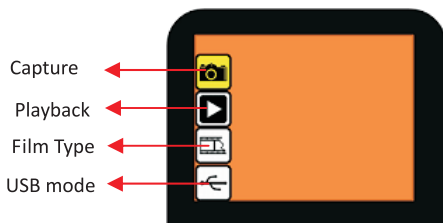


- Capture: capture mode (default)
- Playback: playback mode
- Film Type: define the film type which loaded in cartridge
- USB mode: MSDC (Mass Storage Device Class) mode

### Home: No SD card

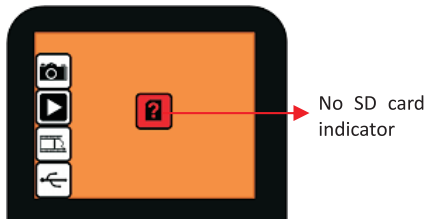


If there's no SD card been inserted to device, a warning icon NO SD card will be shown on display when enter main menu.

## 1. Capture

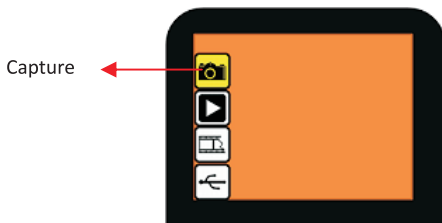

*After welcome page, above menu will remain for 5 sec. User can press up/down button for desired menu. Or system will auto enter Capture mode if there is no action during this 5 second period.*

### 1.1 Capture: Mirror/Flip (Hard Key)

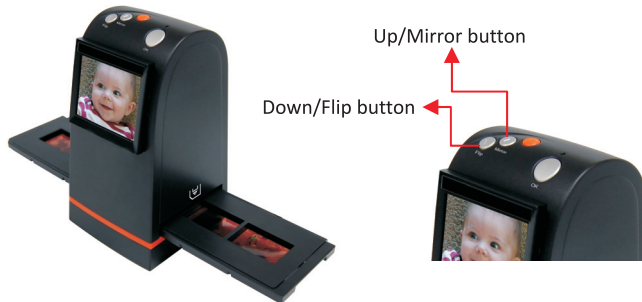




Mirror



- *Press Up/Mirror button to change image left to right*

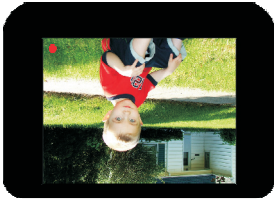

Flip



- *Press Down/Flip button to upside down image*