





Model BNRV100 Unit

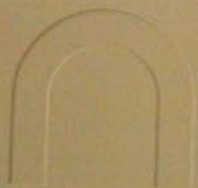



Battery Replacement

1. Remove the screw with a small screwdriver.
2. Remove the battery, pull up at top edge by the white circle cut-out.
3. Install the battery with Barnes & Noble logo FACE UP.
4. Insert the bottom of the battery first, align two metal tabs on each end with the two openings in the battery compartment.
5. Insert and tighten the screw with a small screwdriver.



nook

micro

BARNES & NOBLE

781-222-6666

40000250

