




**P516-098**



## **WIRELESS PORTABLE READER (WPR)**

**INSTRUCTIONS FOR WPR400**

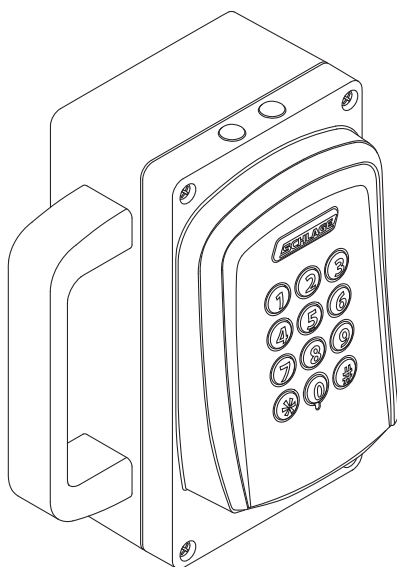

Para el idioma español, navegue hacia [www.schlage.com/support](http://www.schlage.com/support).

Pour la portion française, veuillez consulter le site [www.schlage.com/support](http://www.schlage.com/support).

CONTENTS

Overview..... 3

Getting Started ..... 3

WPR400 Operation ..... 4

    WPR400 Range ..... 4

    Connecting a Reader to the WPR400 ..... 4

    Connecting the RF Board to the Main Board ..... 5

    Permanently or Temporarily Mounting the WPR400..... 5

Handheld Device (HHD) ..... 6

Linking to a PIM400 (Reader mode only)..... 7

Re-linking The WPR400 ..... 7

Changing the RF Channel ..... 8

Enabling Dynamic Channel Switching..... 8

Resetting To Factory Defaults..... 9

WPR400 LED Reference..... 9

    Link Mode LED Reference ..... 9

    Normal Operation LED Reference..... 9

Test Mode (No Credential Reader required)..... 10

    Linking to the PIM400-TD2 in Test Mode ..... 11

    Using the WPR400 in Test Mode..... 12

    WPR400 Test Mode LED Reference ..... 12

    Improving RF Communications ..... 12

Batteries ..... 13

    Charging Batteries..... 13

    Installing or Replacing Batteries..... 13

Troubleshooting ..... 14

FCC/IC Statements ..... 15




---

## OVERVIEW

---

The WPR400 is a Wireless Access Point Module (WAPM) designed to interface with access control panels through a PIM400. The WPR400:

- Communicates with the PIM400 via RF (radio frequency).
- May be linked only to a PIM400.
- Is powered with rechargeable batteries.
- May be used with all credential readers in the AD-Series product line.
- When attached to a credential reader, normally operates in on-line (Reader) mode. Information contained in the user credentials is passed to an access control panel (ACP), which controls WPR400 LEDs. The ACP maintains the audit trail.
- May be operated in Tester mode, with or without a credential reader. In Tester mode, the WPR400 continually tests the quality of the RF link with a PIM400.

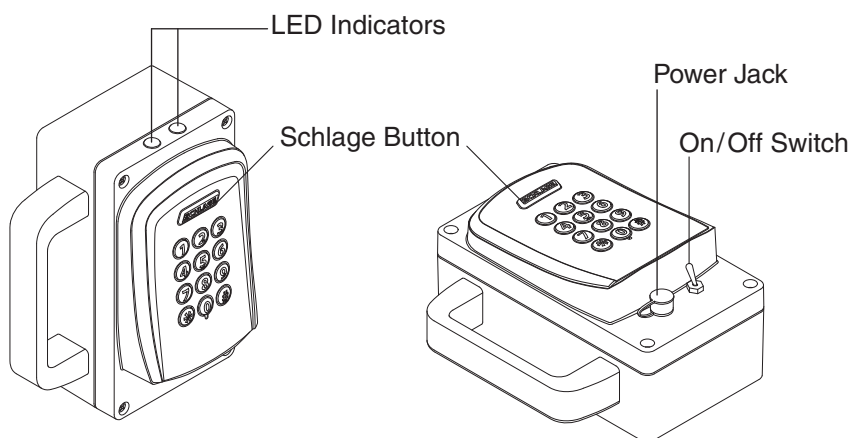

---

## GETTING STARTED

---

Follow these steps when setting up a WPR400.

1. Install the PIM400 (PIM-TD2 or PIM-485). Refer to the User Guide that came with the PIM400, or visit [www.schlage.com/support](http://www.schlage.com/support), for more information.
2. Make sure PIM400 power is properly connected.
3. The WPR400 is shipped with batteries installed and ready for configuration. If the batteries need charging or replacing, please see *Batteries* on page 13. Make sure batteries are fully charged before use.
4. Familiarize yourself with the information contained in this user guide.

**! Save this user guide for future reference.**

## WPR400 OPERATION



### WPR400 Range

For optimum performance, the WPR400 should be operated within the following range limits:

- Maximum distance between the PIM400 and WPR400 is 200 feet (61 meters) horizontally on the same floor in a building with normal construction materials.
- For a line-of-sight installation, maximum distance is 1000 feet (305 meters).


### Connecting a Reader to the WPR400

1. Connect the reader cable to the reader as shown below.
2. Secure the reader to the front cover using the screws and washers provided.

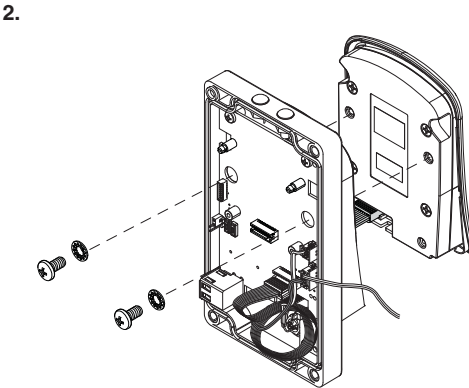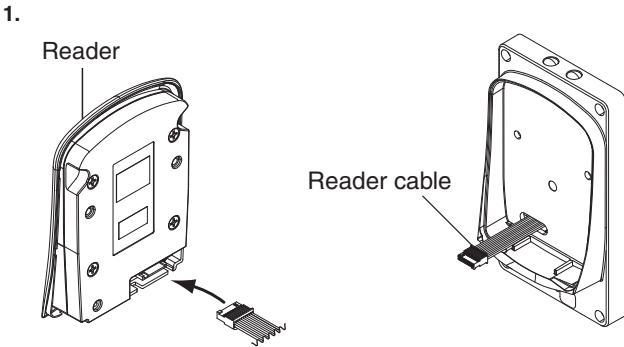

## **Connecting the RF Board to the Main Board**

1. While maintaining a proper electrical connection, push the RF board onto the support posts and secure with screws provided.

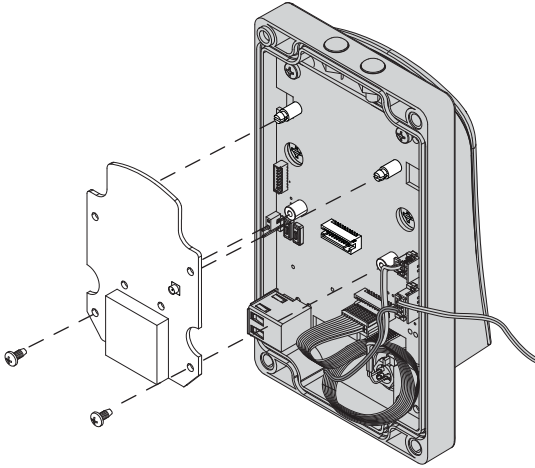

## **Permanently or Temporarily Mounting the WPR400**

- Mount the WPR400 using screws or Velcro® strips.
- The WPR400 should always be mounted **at least one inch away from any metallic surface**.
- Place the WPR400 in a position where it was successfully link tested.

### **Permanent mounting with screws:**

1. Remove the WPR400 cover.
2. Using the base as a template, mark the mounting holes.
3. Drill a hole at each mark and use a wall anchor and screws (not provided) to attach the WPR400.
4. If mounted on a metallic surface, use one inch non-metallic spacers (not provided).

### **Temporary mounting with Velcro® strips:**

1. Attach adhesive Velcro® strips ("hook" side) to the WPR400's base.
2. Attach the other adhesive Velcro® strips ("loop" side) to the mounting surface, positioned according to the placement of strips on the WPR400's base.
3. Press the WPR400 to the mounting surface with both sets of strips aligned.


# HANDHELD DEVICE (HHD)

The HHD can be used to configure credential reader settings.


For information about the HHD and credential reader settings, see the Schlage Utility Software User Guide at [www.schlage.com/support](http://www.schlage.com/support).

To connect the HHD to the WPR400:

- 1. Turn off the WPR400 power switch.
- 2. Loosen the 4 screws and remove the WPR400 cover.

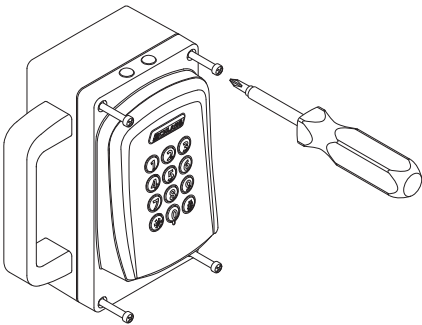

- 3. Connect the HHD to the WPR400 USB port.

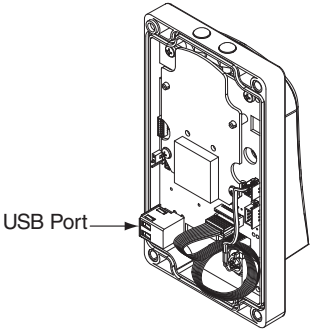

- 4. Log in to the SUS software. (See the Schlage Utility Software User Guide at [www.schlage.com/support](http://www.schlage.com/support).)
- 5. Turn on the WPR400 power switch. Wait for the WPR400 to complete the power-on reset and the LEDs to stop blinking.
- 6. Press the credential reader Schlage button two (2) times quickly.

➔ *The WPR400 is communicating with the HHD when the Schlage button blinks red and the HHD display indicates "WPR400" at the bottom of the main screen.*



- 7. The SUS software is now available to view or edit credential reader settings or update firmware.

---

## LINKING TO A PIM400 (READER MODE ONLY)

---

➔ *Each time it is turned on, the WPR400 will check the quality of its link to a PIM400, if a link had previously been made. If the previous link to a PIM400 cannot be re-established or it does not exist, the WPR400 will automatically attempt to link to a PIM400.*

Only one WPR400 or other WAPM can be linked at a time. Ensure that no other PIM400s are in link mode during this process.

1. Make sure the batteries in the WPR400 are charged. If necessary, see *Charging Batteries* on page 13.
2. Turn off the WPR400.
3. Make sure that the PIM400 is in link mode. See *Link Mode* in the PIM400 User Guide for more information.
4. Turn on the WPR400. The WPR400 will go through a power-on initialization and then automatically attempt to link to a PIM400.
5. If the link is successful, the Schlage button will blink green, and the beeper will sound. The number of green blinks/beeps indicates the RF channel number.
6. If the link fails, the WPR400 Schlage button will blink red three (3) times and five (5) short beeps will sound. The PIM400 will remain in link mode, so the link may be attempted again.
  - ➔ *The WPR400 will fail to link if the PIM400 is not properly set to link mode. The LEDs on the PIM400 will alternately blink red and green.*
  - ➔ *The WPR400 will fail to link if it is not in RF range of the PIM400. Move the WPR400 closer to the PIM400 location. (Do not exceed 200 feet (61 meters) distance between the WPR400 and the PIM400. Do not locate the WPR400 and the PIM400 on separate floors of a building.)*
7. Test the WPR400 for normal operation by presenting a valid credential. The Schlage button will light green.

---

## RE-LINKING THE WPR400

---

Re-linking the WPR400 is required when:

- the WPR400 or PIM400 is moved or replaced.
- the RF channel is manually changed in the PIM400. (See *Changing the RF Channel* on page 8 for more information.)
- Dynamic Channel Switching is activated in the PIM400. (See *Enabling Dynamic Channel Switching* on page 8 for more information.)
- after the WPR400 or PIM400 has been Factory Default Reset.

To re-link, repeat the linking procedure (Linking to a PIM400 (Reader Mode Only)) shown above.

## CHANGING THE RF CHANNEL

---

**!** *Changing the RF channel will terminate links with other WAPMs previously linked to the PIM400.*

The WPR400 radio frequency (RF) channel is controlled by the PIM400 it is linked with. The RF channel in use may be changed on the PIM400 through the Schlage Utility Software (SUS).

Follow these steps to change the RF channel on the WPR400.

1. Connect the Handheld Device (HHD) to the PIM400.
2. Login to the Schlage Utility Software (SUS) application.
3. The SUS will display "AD400" when communicating.
4. Select "Device Options".
5. Select "PIM Properties".
6. Select the "Edit" tab.
7. Select a new/different RF channel.
8. Save your selection.
9. Select the "Link" tab.
10. Select a "Door Address" and click on the "Link" button.
11. Disconnect the HHD from the PIM400 and try to link again using the new RF channel.

---

## ENABLING DYNAMIC CHANNEL SWITCHING

---

**!** *Enabling Dynamic Channel Switching will terminate links with other WAPMs previously linked to the PIM400.*

Dynamic Channel Switching (DCS) is controlled by the PIM400 the WPR400 is linked with. DCS may be enabled on the PIM400 through the Schlage Utility Software (SUS).

Follow these steps to enable Dynamic Channel Switching on the WPR400.


1. Connect the HHD to the PIM400.
2. Login to the SUS application.
3. When communicating, the SUS will display "PIM400-485-RSI" for the PIM400-485, or "PIM400-TD2" for the PIM400-TD2.
4. Select "Device Options".
5. Select "PIM Properties".
6. Scroll down to the "Dynamic Channel Switching" menu.
7. Select one of three (3) "Enable Channel".
8. Save your selection.
9. Disconnect the HHD from the PIM400 and try to link again using the Dynamic Channel Switching selection.



## RESETTING TO FACTORY DEFAULTS

**! All information in the WPR400 will be deleted and reset to factory defaults!**

1. Remove the WPR400 cover.
2. Press and hold Schlage button until two (2) beeps sound (10 seconds).
3. Release the Schlage button.
4. Press and release the Inside Push Button (IPB) three (3) times. The top LEDs will flash when the reset is complete.
5. Replace the cover.

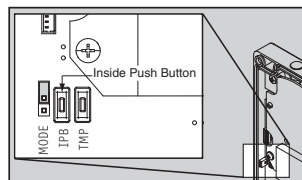

## WPR400 LED REFERENCE

### Link Mode LED Reference

Schlage LEDs	Beeps	Action
1 Red, 1 Green	0	One link request was sent to find a PIM400 in link mode. This action will repeat twice, then stop.
1 Green	0	Successful RF packet transmission
1 Red	0	Unsuccessful RF packet transmission
Z Green <sup>1</sup>	Z <sup>2</sup>	Linking was successful
3 Red	5	Linking was unsuccessful

<sup>1</sup> Z = RF channel number on which the WPR400 is linked (1-10). The RF channel of each PIM400 in the area should be known and recorded.

<sup>2</sup> Number of beeps should match the RF channel number of the PIM400.



### Normal Operation LED Reference

Schlage LEDs	Action
Green	A valid credential was presented to the WPR400 reader
Red	An invalid credential was presented to the WPR400 reader

## TEST MODE (NO CREDENTIAL READER REQUIRED)

! **Disconnect the battery from the WPR400 while configuring this mode. (See Steps 1 and 2 under Installing or Replacing Batteries on page 13.)**

- Test mode is selected by opening the WPR400 and placing a jumper across the two pins of the “Mode” connector located on the main circuit board.

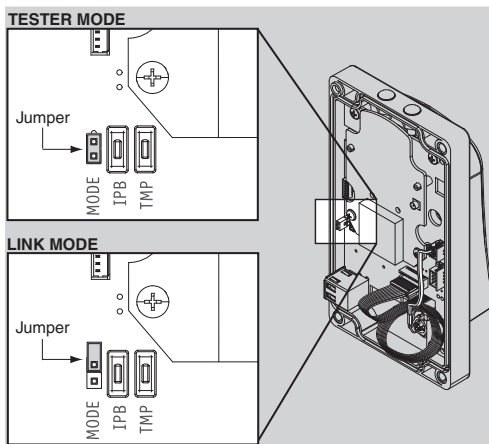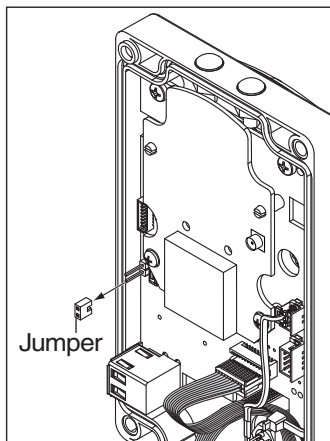


➔ **Reassemble the WPR400 before powering on.**

- When powered on, the WPR400 will automatically enter Test mode.
- If the link fails, the Schlage button will blink red three (3) times and five (5) short beeps will sound. The PIM400 will remain in link mode, so the link may be attempted again from the WPR400.
- To re-attempt WPR400 linking:
  - Without a reader attached, cycle the WPR400 power switch.
  - With a reader attached, present any credential OR press any number on the keypad.

## **Linking to the PIM400-TD2 in Test Mode**

1. Mount the PIM400-TD2 to the wall (or ceiling) in the exact location and in the same manner that the PIM400-TD2 or PIM400-485 would be located and mounted (mounting hardware not included).
2. Remove the cover from the PIM400-TD2.
3. Connect the bare leads from the power supply to J2 (DC Power) screw terminal on the PIM400-TD2.
4. Connect the power supply to 120 VAC.
5. Press and release LINK 1 switch (SW2) to link Access Point 1, or LINK 2 (SW3) to link Access Point 2. The corresponding LED (LED1 for LINK1; LED2 for LINK2) blinks red and green. This indicates that the PIM400-TD2 is in Link Mode. To abort Link Mode, press the same switch again.

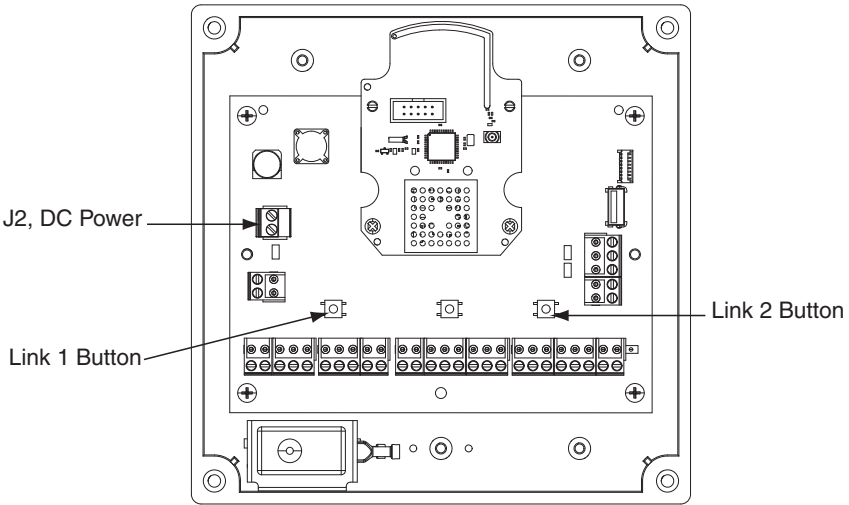

**PIM400-TD2 Printed Circuit Board (PCB)**

WPR-400 Wireless Portable Reader User Guide

Using the WPR400 in Test Mode

→ Do not attempt a pre-installation test if the WPR400 batteries are low. See Batteries on page 13 for information on charging the batteries.

→ Always locate the WPR400 in the intended mounting position(s) before and during the linking process.

1. The WPR400 should be held in place at the exact spot where the WAPM (WPR400, WRI400 or WSM400) will be installed. (Always hold the WPR400 by the handle, not by the housing.)
2. Test on the intended door with the door open and with the door closed.
3. Turn on the WPR400. It will perform a power-on test and then automatically enter Test mode. It will then send 200 test packets to check the quality of the RF link. A successful link will produce more green than red LED blinks during the link transmissions. See *WPR400 Test Mode LED Reference* below for more information.
4. For each new link test, the WPR400's power must be cycled off, then on.

TIP

The first time you test the link to the PIM400-TD2 with the WPR400 in Test mode, do so within close proximity so that you can observe a successful link result before linking at a remote distance.

WPR400 Test Mode LED Reference

In Test mode, the WPR400's LEDs will blink to indicate RF communication quality as follows:

Schlage LEDs	RF Communication Quality
Solid green, fast green blinks, or green with very few red blinks	Good link
Solid red or fast red blinks	Poor or no link
10 fast red blinks	Low Battery, Test Incomplete (see <i>Batteries</i> on page 13)

A successful transmission rate greater than 85% is needed for a successful link and to ensure that more than 99.6% of all RF transmissions will be completed error-free. If the RF transmission is poor or unsuccessful, attempt modifications to improve the transmission. See *Improving RF Communications* below.

Improving RF Communications

1. Ensure that the distance between the PIM400 and the WPR400 does not exceed 200 feet (61 meters). The PIM400 and the WPR400 should not be located on separate floors in a building.
2. If the linking problem still exists and the PIM400 is in a closet, move it outside the closet where a Schlage Remote Antenna could be located. This will eliminate the RF attenuation from the closet wall. If this allows linking, then the PIM400-TD2 or PIM400-485 should be mounted outside the closet. If it is not desirable to mount the PIM400-TD2 or PIM400-485 outside the closet, then mount it in the closet with the Schlage omnidirectional (remote) Antenna mounted outside the closet.
3. If the linking problem still exists, use a PIM400-TD2 with a Schlage directional (remote) antenna aimed at the non-linking WPR400 tester location.
4. Finally, move the PIM400 to another workable location nearer to the test site, then test again.


## BATTERIES

### Charging Batteries

→ Turn off the WPR400 before charging the battery.

1. Open the power jack cover.
2. Plug the battery charger in to the power jack.
3. Connect the battery charger to 120 VAC.


→ Full battery charge will take approximately 4-8 hours.

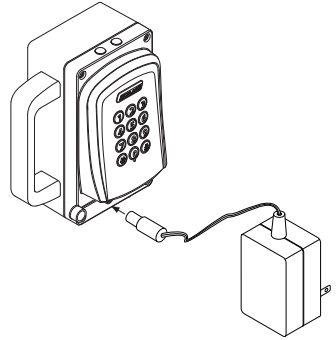


### Installing or Replacing Batteries

1. Remove the WPR400 cover.
2. Disconnect the battery pack.
3. Remove the battery retainer and the old battery pack.


1.

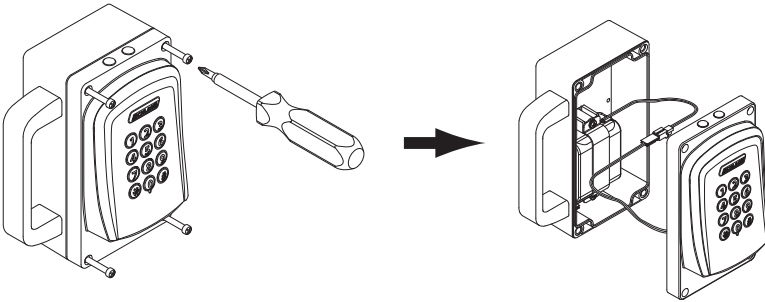

2.

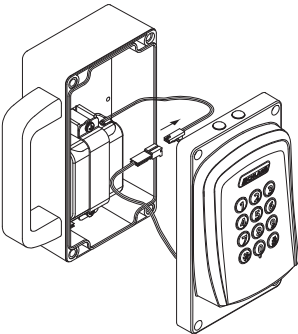

3.

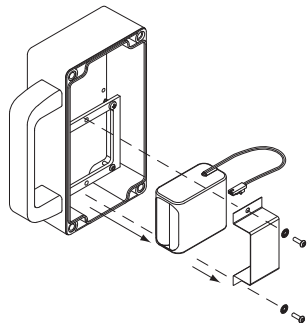


## BATTERIES, Continued


---

4. Position the new battery pack in the same location as the old battery pack.
5. Connect the new battery pack.
6. Carefully pack the battery wires, and reattach the battery retainer.
7. Reattach the WPR400 cover making sure no wires are pinched.


4.

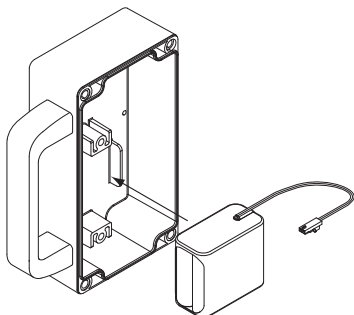


5.

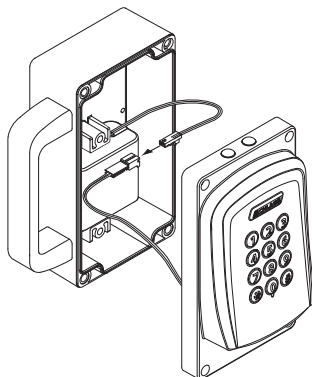

6.

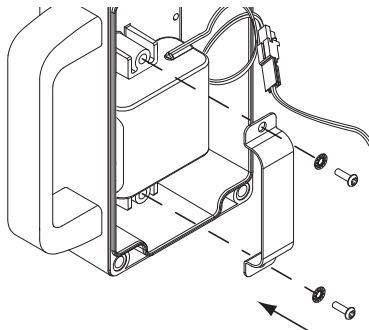

7.

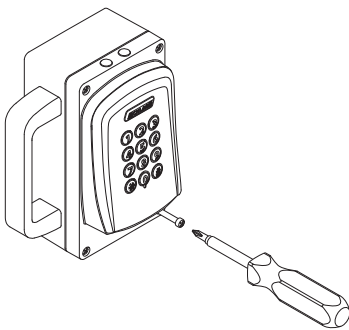

---

## TROUBLESHOOTING

---

For troubleshooting, browse to [www.schlage.com/support](http://www.schlage.com/support).

---

## FCC/IC STATEMENTS

---

The communication module is a 900 MHz transceiver for electronic locks and non-lock devices. The communication module links the access device to the Access Control Management System, with feedback control to the Access Device via a wireless means. The module contains the embedded firmware implementing the radio physical and data layers. The antenna associated with this module is a PCB trace inverted-L with a measured gain of 5.7 dBi.

### Specifications of the radio module:

Power Output: 19.6 dBm

Operating Frequency: 906 -924 MHz

Modulation: BPSK

**NOTE:** The intended use of this module is not for the general public. It is generally for industry/commercial use only. This transceiver is to be professionally installed in the end product by Ingersoll Rand, and not by a third party. The Ingersoll Rand AD400 900 MHz Communication Board Module will not be sold to third parties via retail, general public or mail order. In the case of a repair, the transceiver will be replaced by a professional installer.

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC/IC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### INDUSTRY CANADA STATEMENTS

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



© 2010 Ingersoll-Rand Company  
Printed in Country.  
P516-098 Rev. 08/10-a