



3.8 Backlight

1. Tap the Backlight icon in the System Menu.

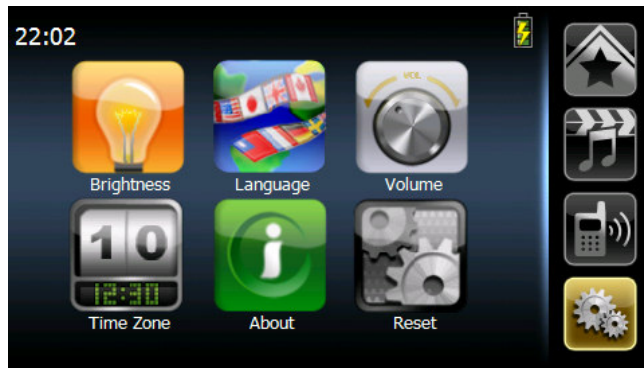

2. Adjust the Backlight brightness by drag triangle icon.
3. Drag to left will become dark, drag to right will become light.

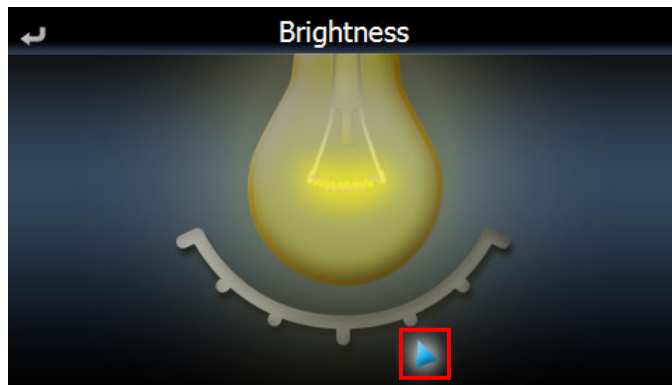

3.9 To set the favorite application category:


Otherwise, provide more organized and friendly application management interface for user organize their own favorite application category by drag-and-drop, the maximum number of favorite application shortcut is 6.

Add icon to the favorite page

1. Drag the icon to the category bar of favorite.



2. That will show the icon in favorite page.

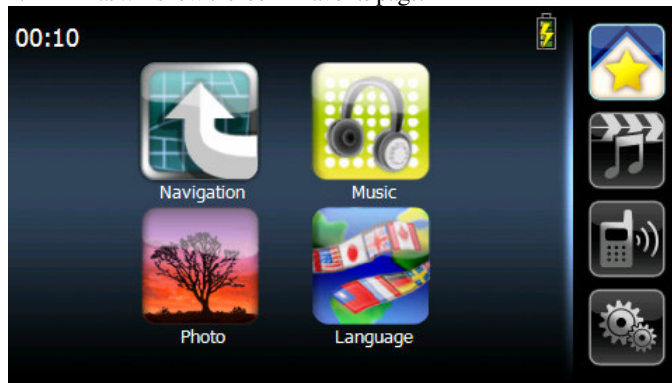

Delete icon to the favorite page

1. Drag the icon from Favorite page to category bar and drop it. Confirm dialog will pop up, just tap "YES" to delete.




3.10 Power Supply

M-Nav760 has a complete power management system, and enhances its standby time. In addition, it can make end-users more convenient to carry it for entertainment purpose, not only using in cars but also at home, outdoor activities.


3.11 Charge

While end-users use our standard car charger or AC adapter to charge M-Nav760, the main screen would remind you.

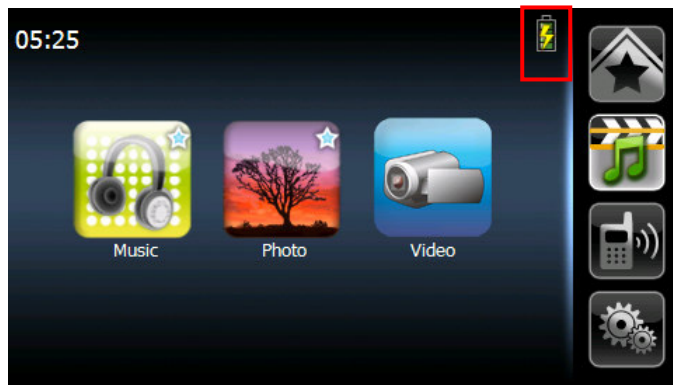


3.11.1 Discharge

While end-users remove out our standard car charger or AC adapter, the main screen would remind you to turn off M-Nav760 or not.

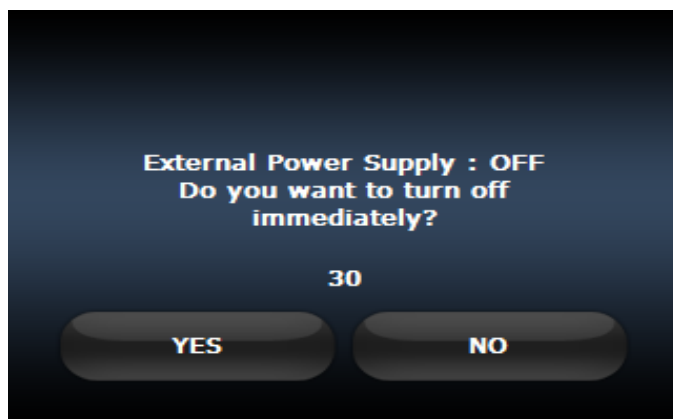

3.11.2 Power outage

While battery capacity is lower than 20%, the main screen would remind end-users the following message.

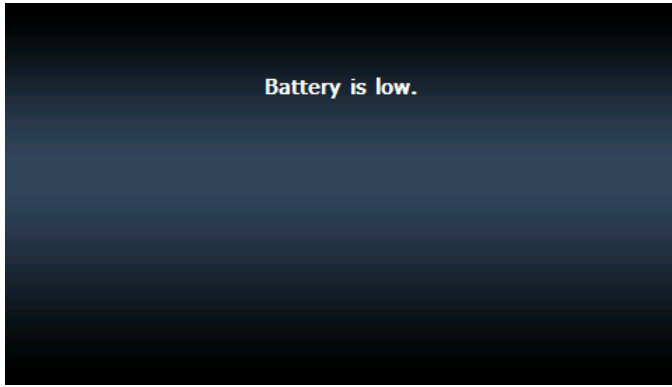

Chapter 4 Communications

4.1. M-Nav760 Bluetooth

Once your Bluetooth-enabled mobile phone is paired with your M-Nav760, you can make hands-free phone calls through your M-Nav760's integrated micro- phone and speaker.

M-Nav760 makes it easy to make and receive phones calls with ease while end-users drive cars.

Hands-free calling keeps things safe, letting you keep your eyes on the road, while your M-Nav760 integrates seamlessly with your mobile phone. Easy to connect and use, just follow a few quick steps to enjoy the benefits of Hands- free calling. (That is option function)



4.2. Connection

NOTE : Make sure the Bluetooth settings of your mobile phone.

- The Bluetooth switch is set to “ON” or “enable”.
- The visibility is set to “Discoverable”, “Show my phone”, (For more detailed information, see your phone’s manual.)


4.3. Mobile phone connection

1. Tap “Settings” to turn on Bluetooth function, and end-users can also turn on “Automatic Answer” while the mobile phone is ringing.

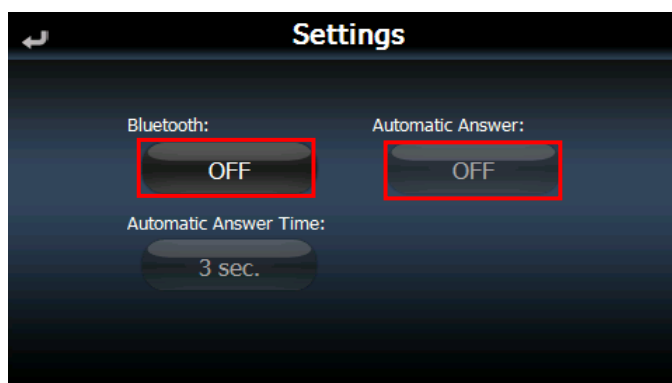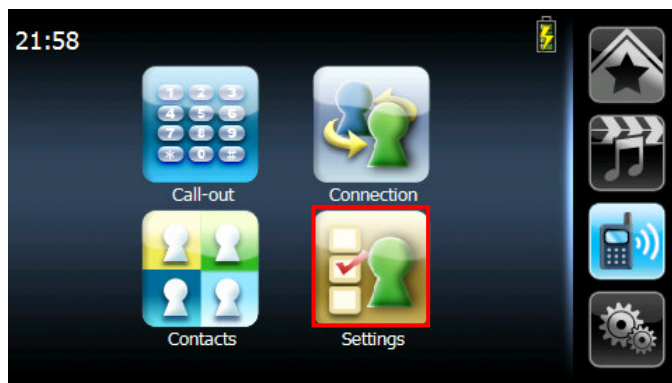

NOTE : "Automatic Answer Time" can be set three mode "3sec.", "10sec.", and "30sec."


1. Back to "Communication" screen, and tap "Connection"

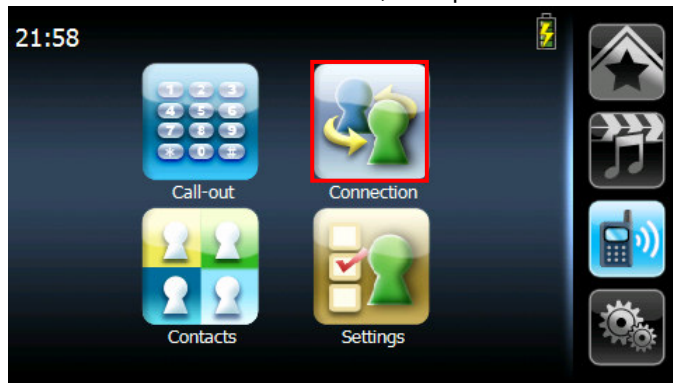


2. Tap "Search" to look for Bluetooth on of mobile phones, and



3. Choose one which you want to connect to, and tap "Connection"

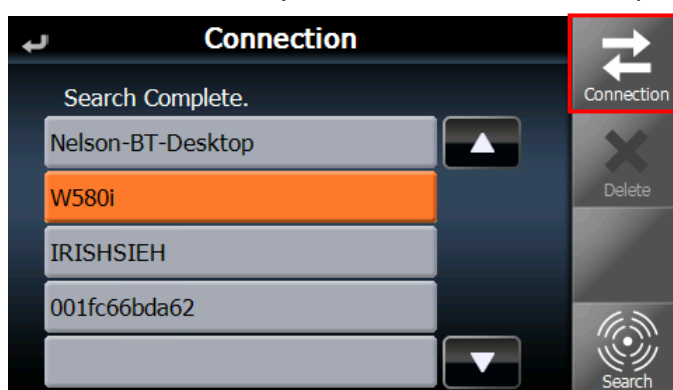

4. Choose “HFP”

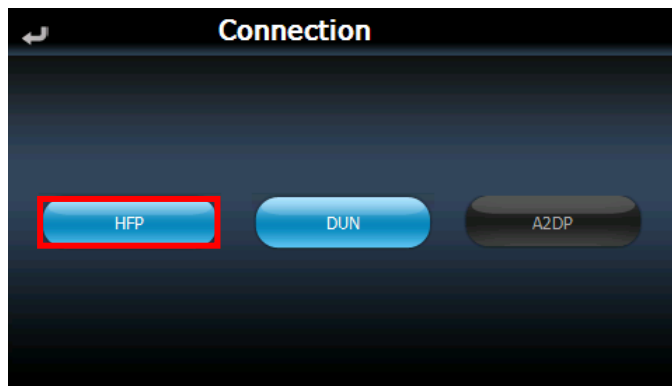

5. The mobile phone will often require you to enter a password to connect the device. Enter “0000” on the mobile phone in this case.
6. When the connection completes, the name of the connected phone is displayed on the title bar of the “communications” screen.


NOTE : If the connected mobile phone has the Bluetooth auto-accept function, set this function to “NO”
(For more detailed information, see your phone’s manual.

NOTE : Bluetooth function has distance limitation. While the mobile phone is away, and make Bluetooth function disconnect, NS-4102 would try to re-connect within 10 seconds.

NOTE : While end-user is turning on FM Transmitter and Bluetooth Hands-free function (connecting with a cell phone), call conversation would still come out from NS-4102 speaker, not from car audio/stereo.


4.4. Call Out (Hands – free Calling)

1. Tap “Call-out” screen is as follows:

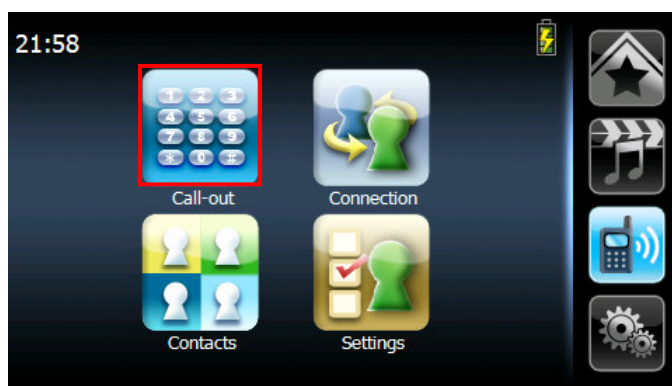


2. Call-out



No.	Name	Description
1		Start to make a call.
2	History	Call-out from the history of the incoming /outgoing call
3	Contacts	Call-out from the contacts. In detail, refer to 4.3.


3. Call-out (in a phone call)



No.	Name	Description
4		Close a phone call.

4. Receiving a call


(1) When the connected mobile phone receives a call, the caller's phone number and two buttons are displayed on the screen.

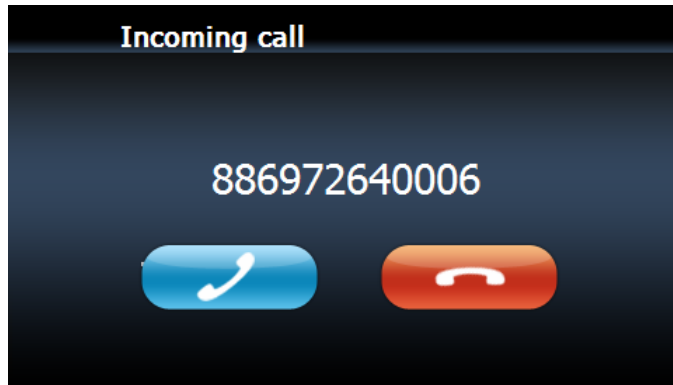


(2) Receive a call, tap ; Quit a call, tap .

4.5. Contacts (Import phonebooks)

1. Tap "Contacts" screen is as follows:

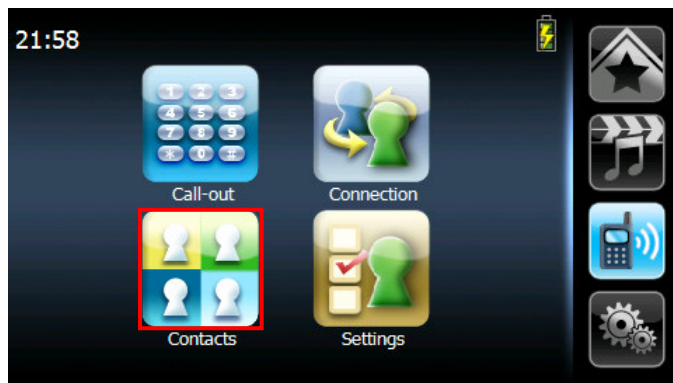

2. Tap "Import" to import the contact information from the connected mobile phone.

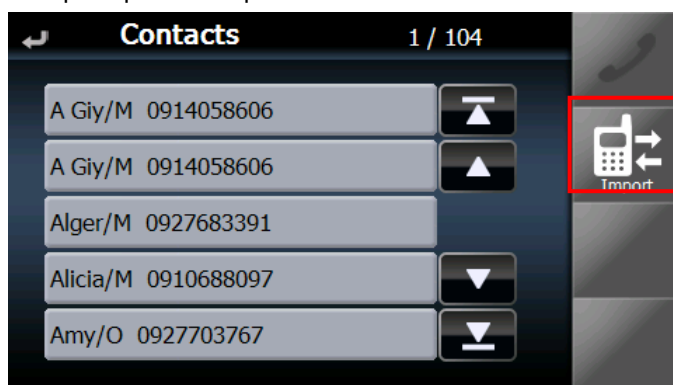

Chapter 5 Troubleshooting and Maintenance

5.1. General troubleshooting

5.1.1. If your device does not respond, do a “hard reset.”

- To do a “hard reset,” Disconnect all cables, including the AC adapter, from your device.

By sliding the hard reset switch on the primary ON/OFF switch on the right side of the device from OFF to ON position then tap the power button.

5.1.2. Users can also perform a “system reset.”

- To do a “system reset,” in the Main menu, tap System, then tap System Info. This will allow you to do a factory reset (restore to default settings), reset the GPS and recalibrate the touch screen interface.

5.1.3. Screen responds slowly

- Make sure you have enough battery power.

5.1.4. Inaccurate response to taps.

- Recalibrate the touch screen.

5.1.5. Connection Problems with PC.

- Make sure that the cable is securely plugged into the USB port on your computer and on the device. Connect the USB cable directly to your computer—do not run the cable through a USB hub.
- Reset your device before connecting the cable. Always disconnect your device before you restart your computer.

5.1.6. No GPS connection

- Make sure that the GPS antenna has a clear view of the sky.
- Note that the GPS reception can be affected by:
 - Bad weather
 - Dense overhead obstacles (e.g. trees and tall buildings)
 - Other wireless devices in the car

5.1.7. No sound coming from the device.

- Make sure mute is not selected for Volume in system settings. The built-in speaker turns off when the headphone jack is being used.

5.1.8. Can't I see my photos.

- Make sure you are using supported image formats JPG.

5.1.9. Takes longer than normal time to get a GPS fix.

- If the previous GPS fix position was more than 500 km or 12 hours apart from your current position and time, it will also take significantly longer than the standard TTFF time to get a GPS fix. This is due to the nature of the GPS algorithm and rotational velocity between the satellites and planet Earth, and deemed normal.
- Perform a GPS reset in the main/system/system info menu to get a faster GPS fix.

5.1.10. Factory reset does mean a GPS reset.

- Yes. The Factory Reset function resets the OS settings to their default factory values and it will reset the GPS settings.

5.2. Maintenance

- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- - Do not drop your device or subject it to severe shock.
- Do not subject your device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow the device to dry out completely before use.
- The screen surface can be easily scratched. Sharp objects may scratch the screen. You may use non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels to help protect the screen from minor scratches.
- Never clean your device with it powered on.
- Never use organic solvents such as benzene or paint thinner to clean your device. Use of these solvents can cause deformation or discoloration.
- Use a soft, clean, lint-free cloth to clean the display screen. Moistened LCD screen wipes could also be used as required.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void any warranty.

5.2.1. Storage precautions

- Do not store your device anywhere it may be exposed to water or in conditions of high humidity.
- When the device is not in use for an extended period of time, bring it indoors and store it in cool dry area.

5.2.2. Accessories and repair precautions

- Only authorized accessories should be use with the device. The use of incompatible accessories could result in bodily injury and/or damage to the device.
- The use of unauthorized accessories will also void your warranty.
- Never attempt to disassemble, repair or make any modification to your device.