


ENG
SIZE: A3
ONE COLOR: BLACK

ANIMAL PLANET
RADIO CONTROL
RATTLESNAKE
SERPIENTE DE CASCABEL POR RADIO CONTROL

SET UP:

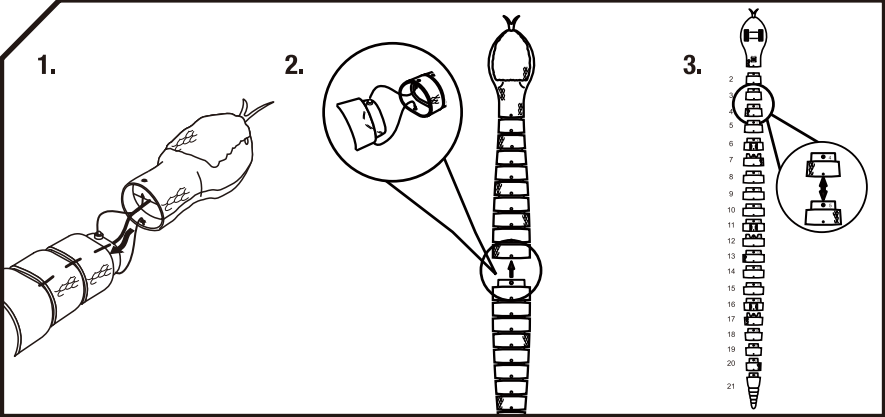


1. To attach the head onto the body, thread the wire through into the body of the snake. Make sure the small nódulos are clipped into the holes, as shown.
2. To attach the sections of the body together, clip the small nódulos into the holes, as shown.
3. All the sections of the snake are numbered to ensure easy assembly.

#5F5E2F9


4+




INSERTING THE BATTERIES:

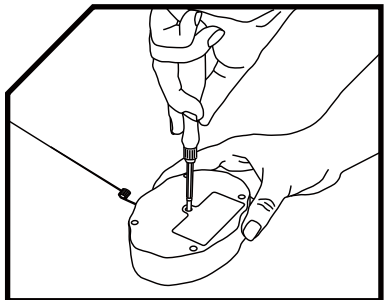


1. To insert batteries into the controller, unscrew and remove the rear panel using a Philips screwdriver.

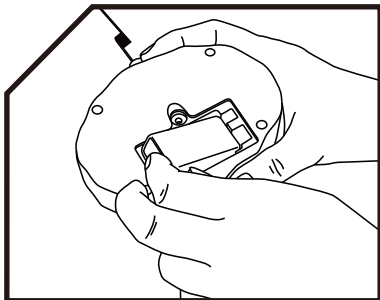


2. Insert one 9V (6LR61) battery, following the polarities indicated on the internal printed sticker. Re-attach the battery cover with the screw.

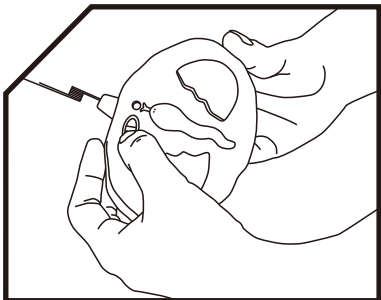


3. Slide the controller switch to the ON position.

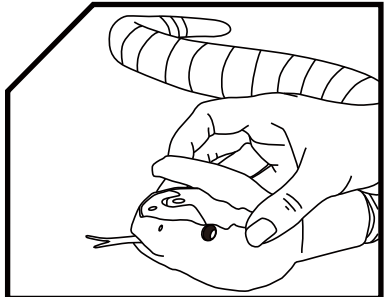

4. To insert batteries into the snake, lift off the upper head section revealing the panel below.

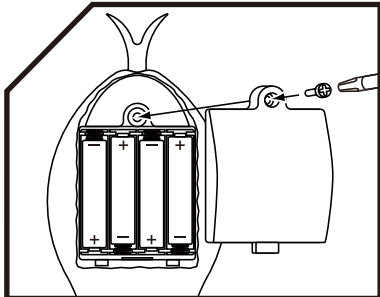


5. Un-screw the battery cover using a Philips head Screwdriver and remove. Insert 4x AAA batteries, into the head section, following the polarities indicated on the internal printed sticker.

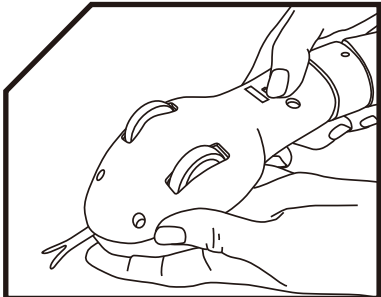


6. Re-screw the battery cover and replace the head section. Turn the rattlesnake upside down and slide the switch to ON.

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.


OPERATING YOUR RATTLESNAKE:

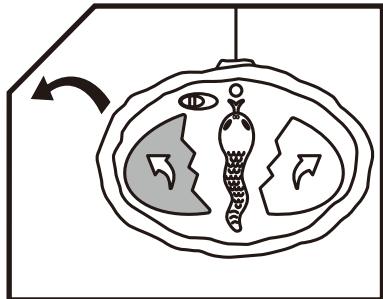




- To turn left - press the 'left' button on the controller.

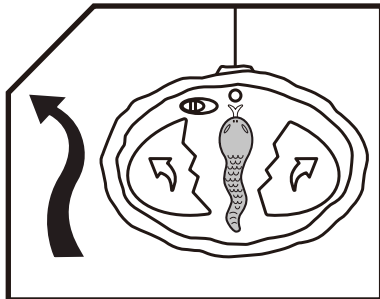

- To turn in a 'S' movement - press the 'S' button on the controller.

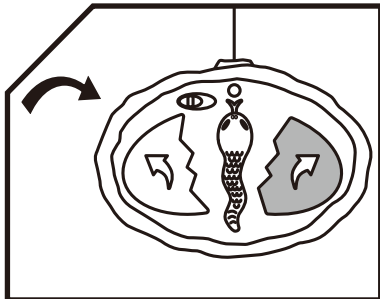

- To turn right - press the 'right' button on the controller.

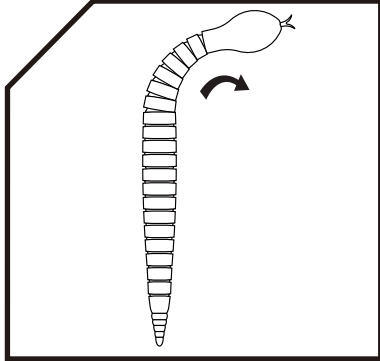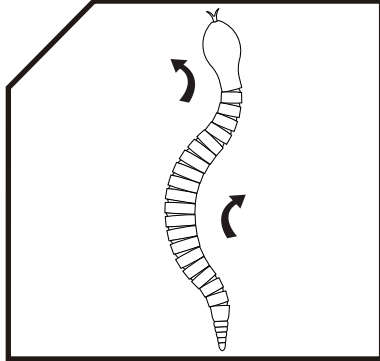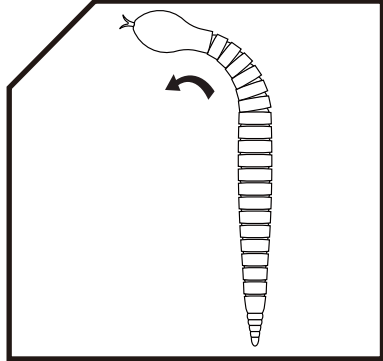

Battery Warning:

- Batteries should be installed and replaced by adults.
- Do not dispose of batteries in fire, battery may explode or leak.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Insert batteries according to diagram for correct polarity.
- Remove dead batteries from the toy.
- Do not short-circuit supply terminals.
- Do not charge non-rechargeable batteries.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC rules.

Operation is subject to the following conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION:
Remove all twist-ties and plastic loops before giving toy to child.

CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.
Contents and colors may vary.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Non-rechargeable batteries are not to be recharged. Remove exhausted batteries from the toy. Supply terminals are not to be short circuited.

© 2011 Discovery Communications, LLC. Animal Planet and the Animal Planet logo are trademarks of Discovery Communications, LLC, used under license. All rights reserved. www.animalplanet.com


Toys R Us
© 2011 Geoffrey, LLC, a subsidiary of Toys "R" Us, Inc. Made in China Distributed in the United States by Toys "R" Us, Inc., Wayne, NJ 07470 Distributed in Australia by Toys "R" Us (Australia) Pty Ltd., Regents Park NSW 2143 www.toysrus.com

P.1

spanish
SIZE: A3
ONE COLOR: BLACK

ANIMAL PLANET
RADIO CONTROL
RATTLESNAKE
SERPIENTE DE CASCABEL POR RADIO CONTROL


MONTAJE:

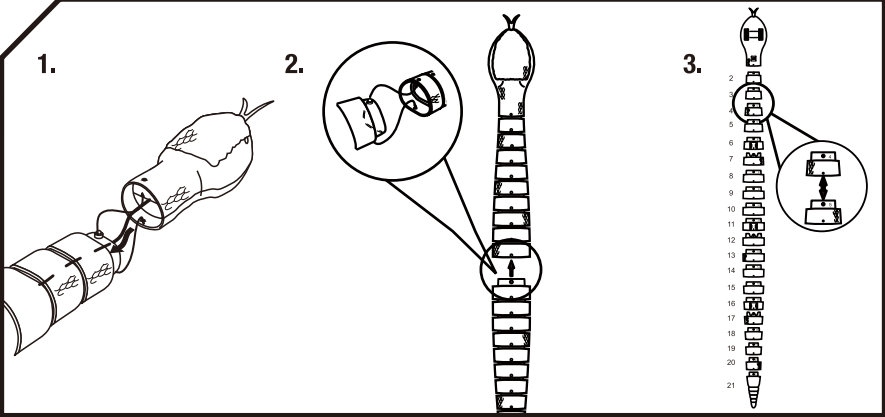


1. Para colocar la cabeza en el cuerpo, pase el cable a través del cuerpo de la serpiente. Asegúrese de que los pequeños nódulos están sujetos a los agujeros, tal y como se muestra.
2. Para conectar las secciones del cuerpo entre ellas, sujete los pequeños nódulos en los agujeros, tal y como se muestra.
3. Todas las secciones de la serpiente están numeradas para asegurar un montaje fácil.

#5F5E2F9


4+

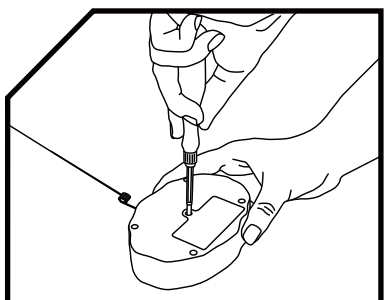


1. Para insertar las pilas en el controlador, desatornille y retire el panel trasero con un destornillador de estrella.

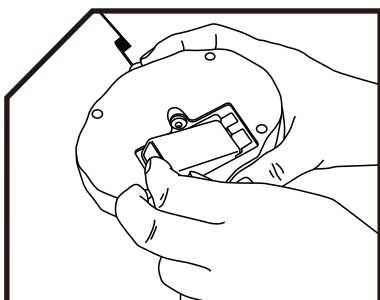


2. Inserte una pila de 9V (6LR61), siguiendo las polaridades que se muestran en la pegatina del interior. Fije la tapa del compartimento de la pila con el destornillador.

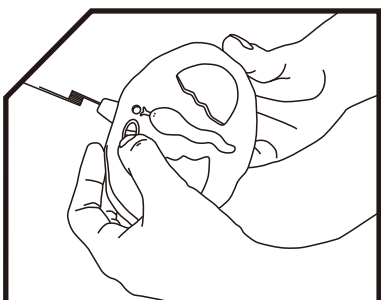


3. Mueva el interruptor del controlador a la posición ON.

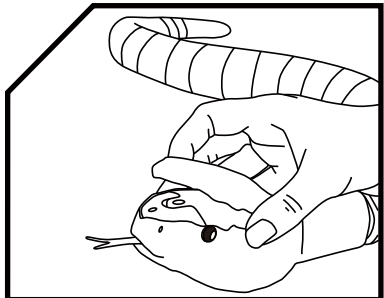

4. Para insertar las baterías en la serpiente, levante la sección superior de la cabeza para llegar al panel inferior.

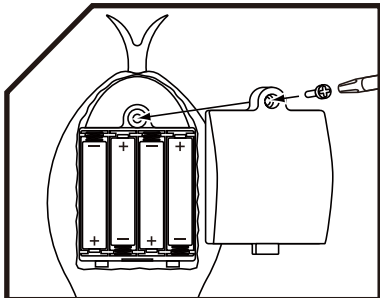


5. Desatornille la tapa de la batería con un destornillador de estrella y retírela. Inserte 4 pilas AAA, en la parte de la cabeza, siguiendo las polaridades que se muestran en la pegatina del interior.

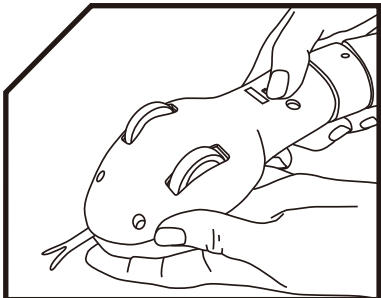


6. Atornille la tapa del compartimento y coloque de nuevo la parte de la cabeza. Coloque la serpiente de cascabel boca abajo y mueva el interruptor a la posición ON.

ADVERTENCIA:
PELIGRO DE ASFIXIA-Incluye piezas pequeñas.
No apto para niños menores de 3 años.


FUNCIONAMIENTO DE LA SERPIENTE DE CASCABEL:

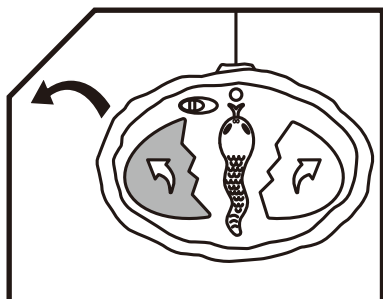




- Para girar - a la izquierda pulse el botón "izquierdo" del controlador.

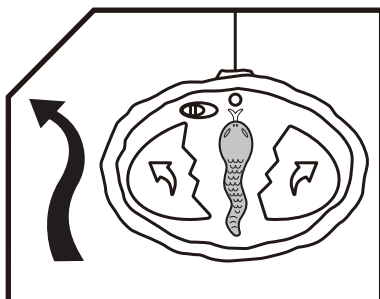

- Para girar en forma de "S" - pulse el botón "S" del controlador.

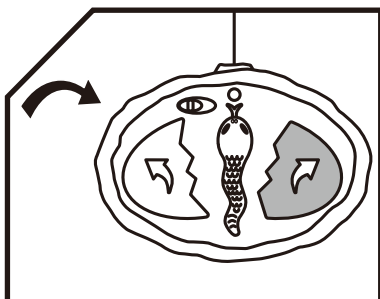

- Para girar - a la derecha pulse el botón "derecho" del controlador.

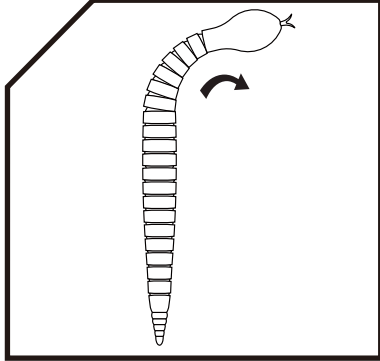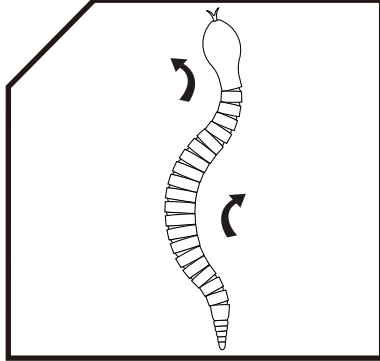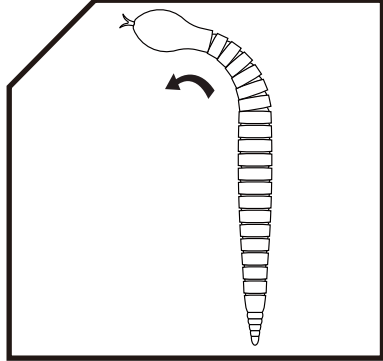

Battery Warning:

- Tiene que instalarlas una persona adulta.
- No se deben tirar al fuego, dado que las pilas pueden perder líquido o explotar.
- No mezcle pilas usadas con nuevas.
- No mezcle pilas alcalinas, estándar (carbono-zinc) o recargables.
- Se recomienda utilizar únicamente pilas iguales o del mismo tipo que las recomendadas.
- Inserte las pilas con la polaridad correcta, tal como indica el esquema.
- Extraiga las pilas gastadas del juguete.
- No someta a cortocircuito los terminales de potencia.
- No intente cargar pilas no recargables.

PRECAUCIÓN: Los cambios o modificaciones no autorizados expresamente por la parte responsable del cumplimiento pueden anular la autoridad del usuario para hacer funcionar el equipo.

NOTA: Este equipo ha sido probado y se ha comprobado que cumple con los límites de un dispositivo digital de clase B, de conformidad con el apartado 15 de las normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede ocasionar interferencias dañinas para las radiocomunicaciones. Sin embargo, no hay garantía de que no ocurran interferencias en una instalación en particular. Si este equipo causara interferencias dañinas en la recepción de radio o televisión, lo que se puede determinar al apagarlo y encenderlo, intente corregirlo a través de las medidas siguientes:

- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conectar el equipo a una toma en un circuito distinta a la del receptor.
- Consultar al distribuidor o a un técnico experimentado de radio/TV para más información.

Este dispositivo cumple con el apartado 15 de la normativa de la CFC. El funcionamiento está sujeto a las siguientes condiciones:

- (1) este dispositivo no debe causar interferencias dañinas.
 - (2) este dispositivo debe aceptar las interferencias recibidas, incluyendo interferencias que puedan causar un funcionamiento no deseado.
- Precaución: los cambios o modificaciones que no hayan sido expresamente aprobados por la parte responsable del cumplimiento pueden anular la voluntad del usuario de hacer funcionar el equipo.

PRECAUCIÓN:
Retire todas las etiquetas, los anclajes y las cintas de plástico antes de entregar el juguete al niño.

CUMPLE CON LA NORMATIVA DE SEGURIDAD ASTM F963.
El contenido y los colores pueden variar.

No mezcle pilas nuevas con pilas usadas. No mezcle pilas alcalinas, estándar (carbono-zinc) ni recargables. Las baterías no recargables no deben recargarse. Retire las baterías agotadas de los juguetes. Terminales de alimentación no se cortocircuita.

© 2011 Discovery Communications, LLC. Animal Planet and the Animal Planet logo are trademarks of Discovery Communications, LLC, used under license. All rights reserved. www.animalplanet.com

Toys R Us
© 2011 Geoffrey, LLC, a subsidiary of Toys "R" Us, Inc. Made in China Distributed in the United States by Toys "R" Us, Inc., Wayne, NJ 07470 Distributed in Australia by Toys "R" Us (Australia) Pty Ltd., Regents Park NSW 2143 www.toysrus.com

P.1

P.2