


User's Manual

Congratulations on your new purchase of a Headrest Entertainment system. Please take a moment to fully review this owner's manual thoroughly prior to the initial operation, which will provide you with the best understanding to properly operate your new Headrest Entertainment system.

Description of Buttons




- ASPECT** Adjust screen aspect ratio as 16:9 and 4:3
- EXIT** Exit from the MENU or return to previous folder
- EJECT** Eject the Disc from the unit
- PREV** Previous chapter or move up on USB/SD mode
- NEXT** Next chapter or move down on USB/SD mode
- DIMMER** Dimmer ON and OFF
- V.SEL** Select Video mode from DVD, USB, SD, AV and AV 2
- POWER** Power ON and OFF
- PLAY** Play or pause the file on the disc or USB/SD
- STOP** Stop playing the file on the disc or USB/SD



How to change VIDEO Source

This unit has 5 different video modes. DVD, USB, SD, AV, AV2



- DVD**
 - 1) Put DVD or CD on the disc located on right side panel
 - 2) Press V.SEL button on the unit or remote to move cursor to DVD on the screen
 - 3) Select desired features using Play button on the unit or Enter button on the Remote
 - 4) Press "PLAY" button on the unit or remote to play & pause the file
 - 5) Press "STOP" button on the unit or remote to stop playing the file
 - 6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
 - 7) Press "Fast" or "FF" button on the unit or remote to fast forward
 - 8) Press "Eject" button on the unit or remote to eject the disc and from the unit
- USB**
 - 1) Put USB memory on the port located on left side panel
 - 2) Press V.SEL button on the unit or remote to move cursor to USB on the screen
 - 3) Select desired features using Play button on the unit or Enter button on the Remote
 - 4) Press "PLAY" button on the unit or remote to play & pause the file
 - 5) Press "STOP" button on the unit or remote to stop playing the file
 - 6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
 - 7) Press "Fast" button on the unit or remote to move to previous folder or screen

- SD**
 - 1) Put SD memory on the slot located on left side panel
 - 2) Press V.SEL button on the unit or remote to move cursor to SD on the screen
 - 3) Select desired features using Play button on the unit or Enter button on the Remote
 - 4) Press "PLAY" button on the unit or remote to play & pause the file
 - 5) Press "STOP" button on the unit or remote to stop playing the file
 - 6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
 - 7) Press "Fast" button on the unit or remote to move to previous folder or screen
- AV**
 - 1) AV input locate on the left side panel of the unit
 - 2) You can simply connect Portable or handheld devices to this AV input

- AV 2**
 - 1) AV2 Input locate on the top left side of the unit (Connector to RCA cable)
 - 2) This Input designed for stereo external devices such as TV tuner or Game
- Audio Out**
 - 1) Audio output located on RCA cable on the top of the unit
 - 2) This output designed for extra screen on the car

Description of Remote Control



1	POWER	Power On/Off
2	MENU	Menu display On/Off
3	ASPECT	4:3, 16:9 changes
4	V.SEL	Video Mode selection
5	DIMMER	Dimmer On/Off
6	CHLIST	DTV use only
7	SEARCH	Search Target Position on the DVD or Media File
8	EPG	DTV Use Only
9	MULTI	Multi On/Off
10	A	Cursor Up
11	4	Cursor Left
12	10	Cursor Right
13	V	Cursor Down
14	EXIT	EXIT from Folder or MENU
15	ENTER	Function select
16	HI	Play & Pause
17	#	Stop
18	SET-UP	DVD Menu Set-up
19	INFO	Information of current Playing File or Disc
20	REPEAT	Repeat playing of currently selected File
21	FF	Fast Forward
22	BP	Number keys
23	HM	Previous Chapter
24	MM	Next Chapter
25	1-10 Keys	Number keys
26	ZOOM	X3,X4,X6 times ZOOM up, 1/2, 1/3, 1/4 times ZOOM Down
27	ANGLE	Angle select of Picture (Only selected file or Disc)
28	DVD TITLE	Move to DVD TITLE Menu
29	DVD SCOT	Move to DVD SCOT Menu
30	SUB-TITLE	Sub-Title selection
31	AUDIO	Audio Mode For Mono, Stereo Left, Stereo Right and Stereo

Menu

Color	Color
Brightness	50
Contrast	50
Hue	50
Saturation	50
Sharpness	0

Adjust screen brightness from 0~100 (Default setting is 50)
Adjust screen contrast from 0~100 (Default setting is 50)
Adjust screen hue from 0~100 (Default setting is 50)
Adjust saturation from 0~100 (Default setting is 50)
Adjust sharpness from 0~10 (Default setting is 0)

DSD	DSD
Language	English
IF position	50
V position	50
OST/Timeout	OFF
Transparent	OFF

Choose language from English, Chinese, French, Spanish, Korean, Russian
Adjust menu line position left and right
Adjust menu line position left and right
Adjust timeout of OSD from 1, 5, 10, 15, 20, 30, 45, 60, 90, 120 (Default is 30)
Adjust Transparent of MENU from 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10 (Default is 0)

Function	Function
DisplayRate	16:9
Reset	Reset

Adjust aspect ratio as 16:9, 4:3, Auto (Default is 16:9)
Reset the MENU level as factory setting

Set-up

SET-UP page is consist with 4 different settings. It's General Set up page, Audio Set up page, Video Set up page and Preference page

- Preference page only able to OPEN when DVD is completely "STOP" or "No Disc" position When DVD is playing or only temporary stop, "Preference page" will not able to reach.

Please press "STOP" 2 times to make disc completely stop or OPEN Monitor flip to reach "Preference page"

Please use 4-way, 8-way buttons and Enter button to go inside of detail MENU and exit from detail menu		
MENU	Detail Selection	Default Setting
TV Display	Select Normal/PS, Normal L or Wide	Normal/14:9 Wide
Angle Mark	Select On or Off	ON
OSD Language	Select one Language, Languages are available English, Chinese, French, German, Italian, Spanish, Portuguese and Russian.	English
Caption	Select On or Off	ON
Screen	Select On or Off	ON
Last Memory	Select On or Off	ON
2. Audio Set up Page		
MENU	Detail Selection	Default Setting
Speaker Set up	Select L/R or Stereo	Stereo
3. Video Set up Page		
MENU	Detail Selection	Default Setting
Brightness	-16~+16	00
Contrast	-16~+16	00
Hue	-9~+9	00
Saturation	-9~+9	00
4. Preference Set up Page		
MENU	Detail Selection	Default Setting
TV Type	Select PAL, TV Multi, NT, SCTV	Multi
Audio	Select Audio Language from English, French, Spanish, Romanian or Others	English
Subtitle	Select Audio Language from English, French, Spanish, Romanian or Others	English
Disc Menu	Select Audio Language from English, French, Spanish, Romanian or Others	English
Parental	Select one from KID SAF/PG/PG-13/PG-14/NC-17	ON
Pass Word	Reset	Default is 8888
Default	Reset	Press ENTER to RESET

Important Safety Instructions


CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This product has been designed and manufactured to a general safety standard. Improper use can result in electric shock or fire hazard. The safety instructions incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully faulted and does not contain any parts that can be repaired by the user.

- WARNING**
 - DO NOT attempt to operate if failure table or no sound is heard. Stop using the unit and turn it off immediately if there is any smoke or burning smell. If unit is damaged, it must be sent for a checked check.
 - This product is designed for DC 12V. It is recommended to connect with a battery. "Authorized Dealer" for using this unit in a RV, boat or bus application.
 - DO NOT install unit where it may obstruct driver's sight or cause possible injury to passengers.
 - DO NOT use installation in vehicles with normal vehicle operation. Wiring and installation should not interfere with the brake pedal, steering wheel or transmission shift lever.
 - DO NOT remove any screen or hardware from vehicle to install product.

- WARNING**
 - Inspect any vehicle areas before driving any holes for mounting or wiring of unit. Make sure to install hardware installation area to prevent damaging any wiring while wiring or other connections. Failure to do so could result in vehicle malfunction or impaired vehicle operation.
 - All wiring must be installed safely and should not obstruct the driver's attention during normal operating conditions. DO NOT allow wiring to interfere with operation of the vehicle's brake pedal, shift lever or steering wheel.
 - DO NOT cut or modify any OEM cables with bare bulbs. This could create short circuits and could be hazardous and potentially result in permanent damage to the unit or vehicle.
 - Make sure both OEM cables and other wiring is not run where it may be cut or damaged.
 - The slots and openings in the unit is provided for necessary ventilation. These must not be blocked to ensure reliable operation.

Wiring Diagram

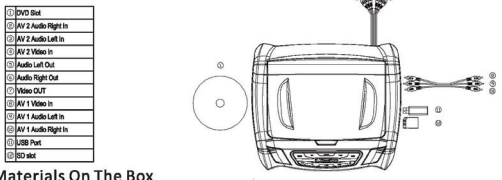

Materials On The Box

- 1. Main Unit
- 2. Interchangeable ceiling base cover
- 3. Interchangeable LCD Rear cover
- 4. Metal plate
- 5. SCREW (M4x10) x4
- 6. Plastic Cover Remover
- 7. Remote control
- 8. User's Manual
- 9. Power Cable
- 10. AV Cable

General Specifications

No	Functions	10.1" Wide Overhead DVD
1	Power	DC 12V (11V ~ 16V)
2	LCD Size	10.1" Wide
3	Resolution	1024 X 800
4	Aspect Ratio of LCD	16:9
5	AV inputs	2AV inputs (One on the side panel)
6	Video input level	1Vpp, 75Ohm (Composite)
7	IR Frequency	2.3MHz / 2.8MHz
8	IR Transmitter range	1m +/- 30 degree 3m +/- 15 degree
9	DVD Player	Fully integrated with slot loading DVD player
10	Media Input	Via USB and SD slot (Video, Audio and photo viewer)
11	FM Transmitter	Adjust FM TX from 88.1MHz ~ 107.9MHz
12	Remote Control	Full function remote control included
13	Wireless headphone support	Yes (Via IR Transmitter, Wireless headphone not included)
14	Color Choices	Interchangeable 3 different color covers are included (Black, Beige, Gray)

FCC Statement
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device is measured RF output power is less than the SAR exclusion threshold value for human head and body. Therefore, SAR test is not necessary.