

504 mm

72 mm

76 mm

### CALL

**Answer / End call**  
Press the Multifunction button once.

**Reject a call**  
Press and hold the Multifunction button for about 2 seconds.

**Redial the last call**  
Double-press the Multifunction button in standby mode. Your device will redial the last call number.

**Mute on/off**  
Press the volume "+" button for about 2 seconds to mute on/off.

**Switch between the earbuds and phone**  
Press volume "+" for 2 seconds during a call to switch from earbuds to your device. Repeat to return call back to the earbuds.

**Answer incoming call and end current call**  
While on a current call, press the Multifunction button to answer a new incoming call and hang up on the current phone call.

**Accept incoming call and put current call on hold**  
Press the multifunction button for 2 seconds to answer the new call and put your existing call on hold.

### MUSIC

**Music play / pause**  
Press Multifunction button once to play / pause music. (Some phones may require you to start a media player first).

**Skip forwards / backwards**  
Hold volume "+" for 2 seconds to skip forwards. Hold volume "-" for 2 seconds to skip backwards.

**Switch between call and music**  
If a call is made or received while playing music, the music is automatically suspended. When the call is over, the music is played automatically.

### BASIC OPERATION

**Status indicator**

Function	LED status	Voice prompts
Power on	Stays blue about two seconds	Beep
Power off	Stays red about two seconds	Beep
Standby	Blinks blue twice every 5 seconds	/
Pairing	Flashes red and blue alternately	Beep
Calling	Blue light flashing	/
Battery low	Blinks red	Beep
Charging	Stays on red while charging Stays on blue after fully charged	/

**Power on**  
Press and hold the Multifunction button for about 4 seconds, the LED stays blue for about two seconds.

**Power off**  
Press and hold the Multifunction button for about 5 seconds, the LED stays red for about two seconds.

### SAFETY AND CARE

**Clear paired list**  
Simultaneously depress the volume "+", multifunction, and volume "-" buttons for about 5 seconds in standby mode. Earbuds will now enter pairing mode when powered on again.

**Hard reset**  
If the earbuds cannot be turned on even when fully charged or do not respond during use, follow the instructions below to reset.

- While holding the multifunction button, plug in the earbuds to chargewith the included Micro-USB cable.
- Continue holding the Multifunction button until the earbuds turn back on. Your earbuds are now reset.

**FCC:**  
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.


**IC:**  
This device complies with ISED licence-exempt RSS standard (s). Operation is subject to the following two conditions:  
(1) this device may not cause interference, and  
(2) this device must accept any interference,including interference that may cause undesired operation of the device.

Le présent aroil est conforme aux CNR d'ISED licables aux aroils radio exempts de licence.


L'exploitation est autorisée aux deux conditions suivantes:  
(1) l'areil ne doit pas produire de brouillage, et  
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioelectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**ISED Radiation Exposure Statement:**  
This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Cet appareil est conforme aux limites d'exposition de rayonnement RF ISED établiespour un environnement non contrôlé. Ceteuseur ne doit pas être co-implanté oufonctionner en conjonction avec toute autreantenne ou transmetteur.

**Battery:**  
CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.




## WIRELESS SPORT EARBUDS




### USER GUIDE

### START HERE


The following items are included




Cord clip




Earbud tips



Inner ear hooks




USB charge cable



Carry case

### Product overview

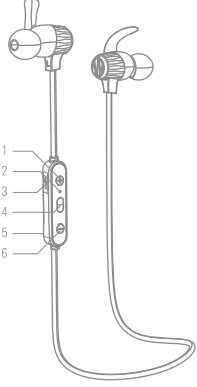


- Volume up / skip forward
- LED indicator
- Micro USB charge port
- Multifunction button
- Microphone
- Volume down / skip backward

### Charging

Your new earbuds have enough power to pair and make a few calls out of the box. It takes approximately two hours to fully charge the earbuds. While charging, the battery indicator light is red. Once charging is complete, the light flashes blue.

Note: The lifetime of the battery will be significantly reduced if your earbuds are left uncharged for a long period of time. It's recommended that you recharge your earbuds at least once per month.

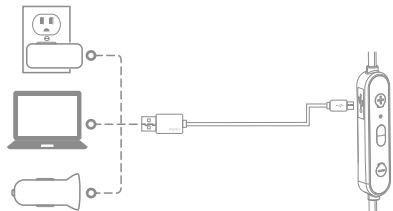

### PAIRING

**Pair one device**

Note: earbuds will automatically connect to the last device they where paired to when the earbuds are on and Bluetooth is activated on the device. When the distance between the earbuds and device is beyond effective range, earbuds disconnect with phone. Earbuds will power off automatically if not active for 15 minutes.

- Make sure the earbuds are turned off and within 1 meter of your device. Press and hold the Multifunction button until the LED indicator flashes red and blue alternately (Approximately 5 seconds), then release the Multifunction button.
- Activate Bluetooth on your phone (see below for more details).

**iPhone**


- On your iPhone, open the Settings menu.
- Select Bluetooth. If Bluetooth is off, turn it on. Your iPhone will search for new devices automatically.

**Android device**


- On your device, open the Settings menu.
- Select Bluetooth (For older Android devices, Bluetooth is found in Wireless & Networks). If Bluetooth is off, turn it on. Select Search for Devices if your device does not automatically search for new devices.

### Windows 8 device

- Open your Settings menu.
- Select Bluetooth. If Bluetooth is off, turn it on. Your phone will search for new devices automatically.

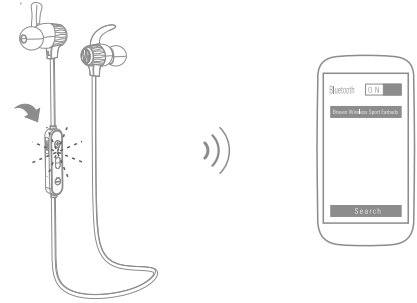

c. Select "Braven Wireless Sport Earbuds". If asked for a pass code, enter 0000. The LED indicator stops flashing red and blue once successfully paired. Audio cue will confirm once connected.

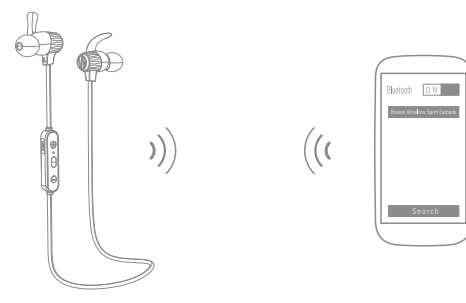

### Pairing with two devices

Multipoint technology enables you to pair headset to two devices at the same time and take calls from either:

- Once paired with phone A successfully, turn off the earbuds.
- Power on earbuds and repeat pairing procedure with phone B.
- Power off earbuds.
- Switch on headset without entering pairing mode (a short press until blue light comes on). The headset should automatically re-connect to the last connected phone (which is phone B).
- Select "Braven Wireless Sport Earbuds" in Bluetooth settings on phone A.

Both phones should now be paired to the headset.

