



**Android 2.2**  
**User Manual**

Directory-----	1
1.Use statement-----	1
2.Appearance Description-----	2
2.1 Overall structure-----	2
2.2 Buttons and faucets-----	3-6
3. The description of menu interface-----	6
3.1 Desktop description-----	6
3.2 Status Bar Description -----	7
4.Basic set of equipment -----	8
4.1 Wireless Control -----	8-9
4.2 Sound and display-----	9-10
4.3 Security and location-----	10
4.4 Date and time-----	11
4.5 Locate and text-----	12
4.6 Battery Charging-----	12
5. Software installation and management-----	12
5.1 Browser-----	12-13
5.2 E-mail-----	13
5.3 Google Map -----	13-14
5.4 Alarm clock -----	14-15
5.5 <b>The procedure of using HDMI</b> -----	15
5.6 <b>The procedure of connecting the tablet PC</b>	
<b>with computer</b> -----	<b>15</b>
6. O / I File Manager -----	16
7.FAQ-----	17
7.1 Can not open the media player-----	17
7.2 Screen flashing-----	17
7.3 Headphones can not hear sound-----	17
7.4 Can not copy the file-----	17

## 1. Use statement

Statement: The company are committed to quality innovation and continual improvement of software. If the final version of products has any differences from the description of the user guide, please subject to the final product .Thank you.

## 2. Appearance Description


### 2.1 Overall structure



## 2.2 Buttons and faucets





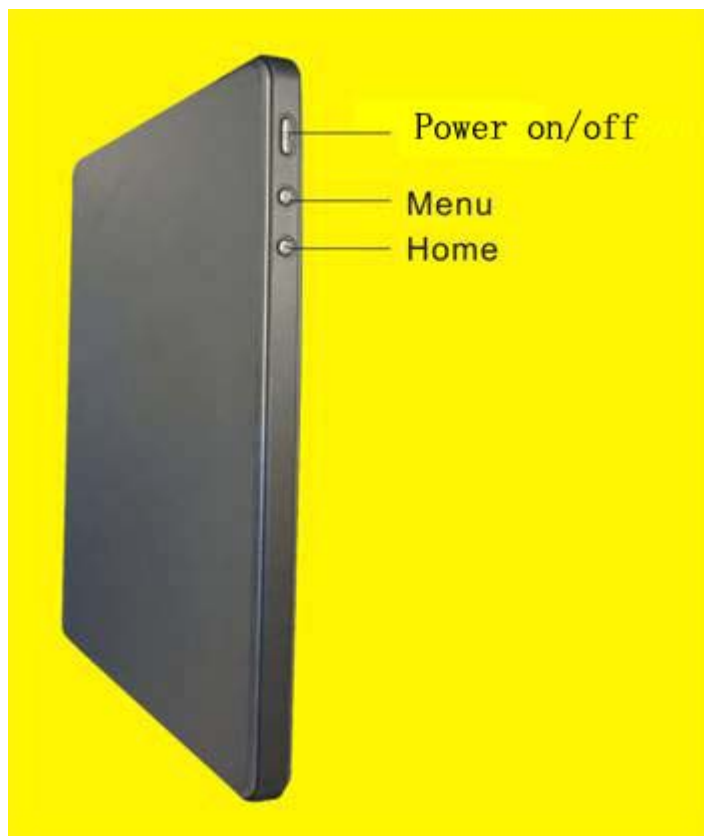


Note: if system halted, please insert one slender material into the reset key ,then system will shutdown




insert an external charger, then charging lamp will turn on;  
When charging is completed, charging lamp will turn off.

### 3.The description of menu interface

#### 3.1 Desktop description

With Pressing the icon"", you can enter menu and choose the options you need, such as email settings and so on

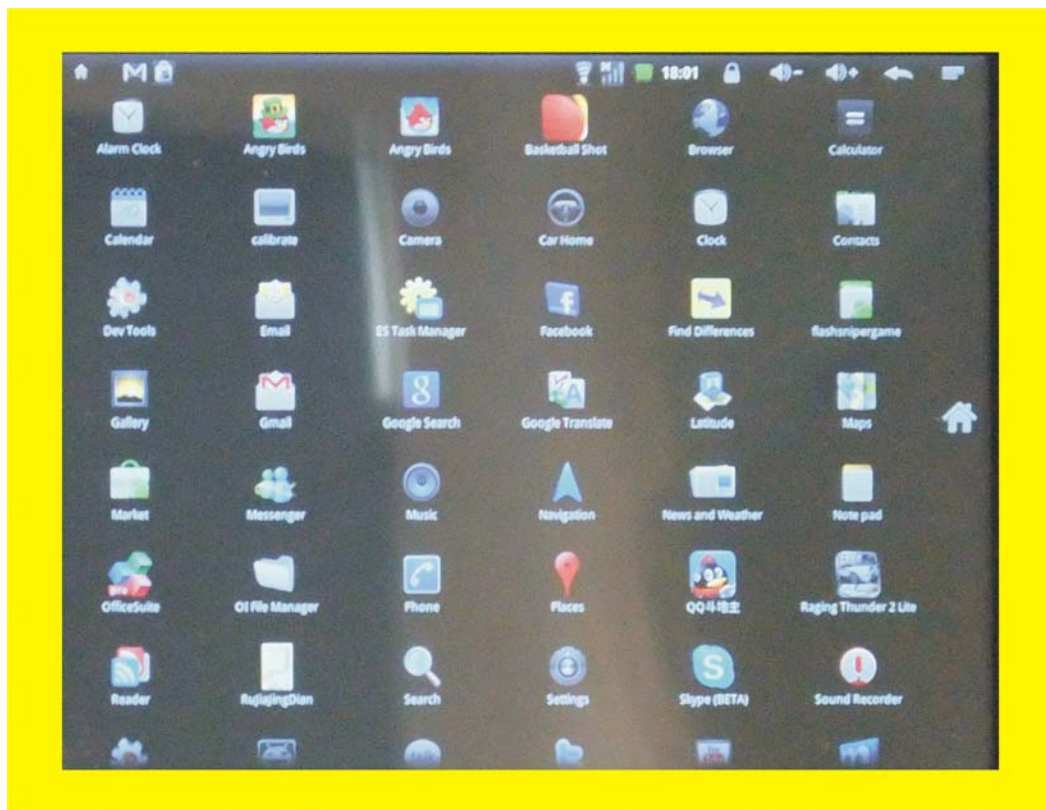

### 3.2 Status Bar Description

The status bar is located on the top screen




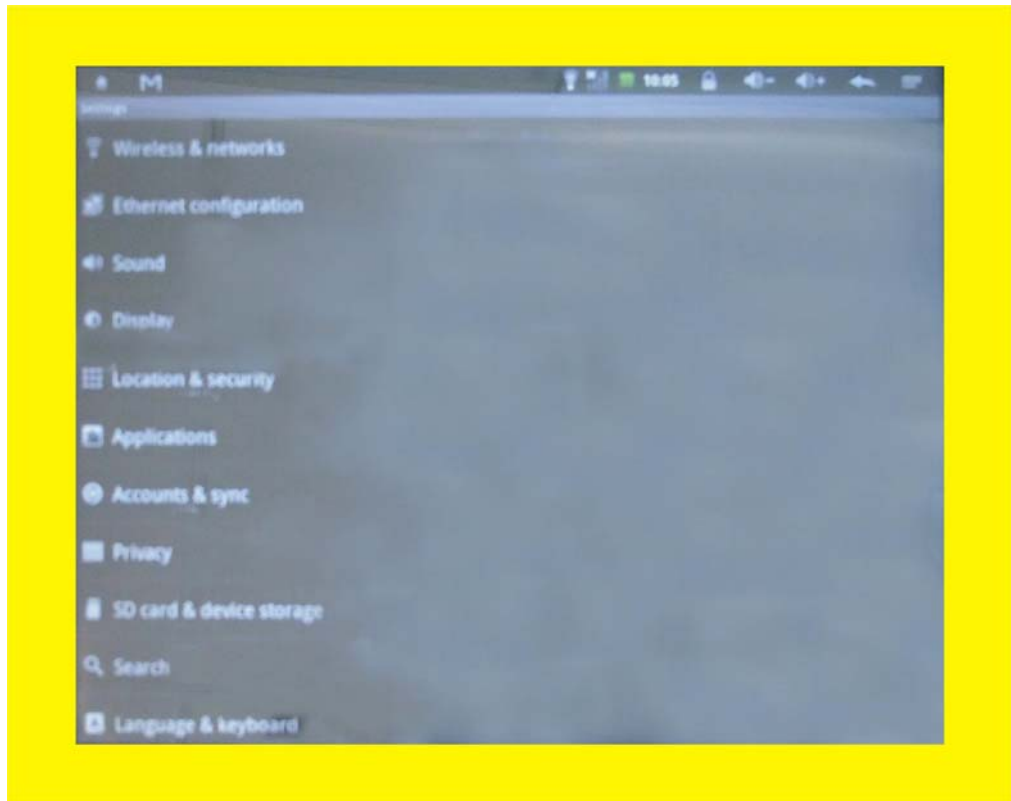
On the top screen, it shows the followings from left to right: residual battery, current time, lock, home key, return key, menu key, current time, two volume adjustment keys, return key, home key.




## 4. Basic settings of e-pad devices


### 4.1 Wireless Control


press the set-up"  " in the menu page to enter set-up interface



WI-FI settings: set up and manage the notice of access point to the wireless

.When the icon showed on the right is "  " with gray color, which means WIFI is in the state of close

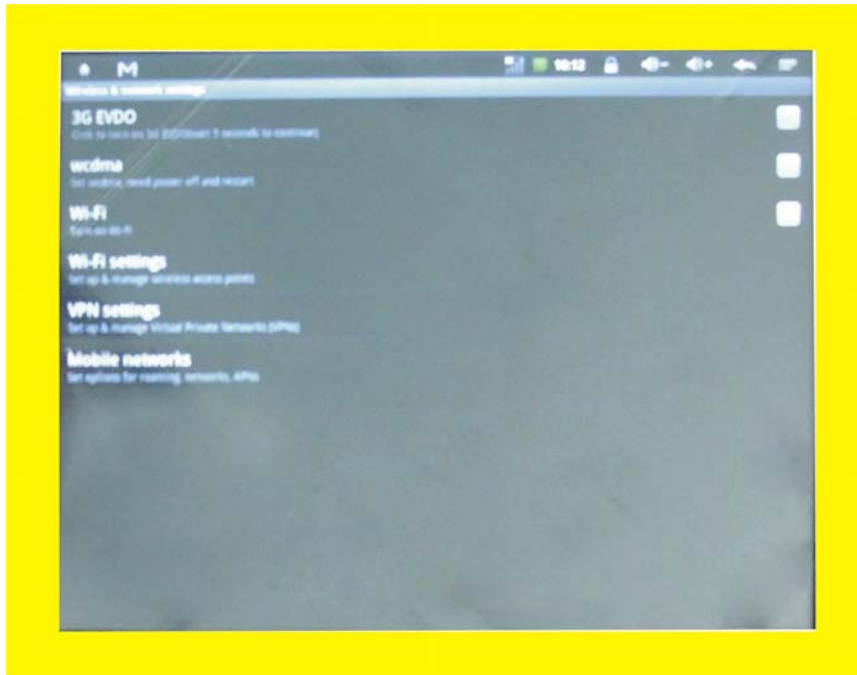

click network notification .When the right icon shows “ “,it means device is scanning the network that is available. The device will search automatically and add the nearby wi-fi network which can be connected. click wireless network port and then you can connect network.

## 4.2 Sound and display

silent mode: All sound will become silent except for media and alarm

The Volume of media: Adjust the volume of media by


dragging the move point to right or left

Direction: It will change the direction automatically

when you rotate the MID

Cartoon: It will show cartoon when you open or close a window

Brightness: Adjust the brightness of screen by dragging the point to the right or left.

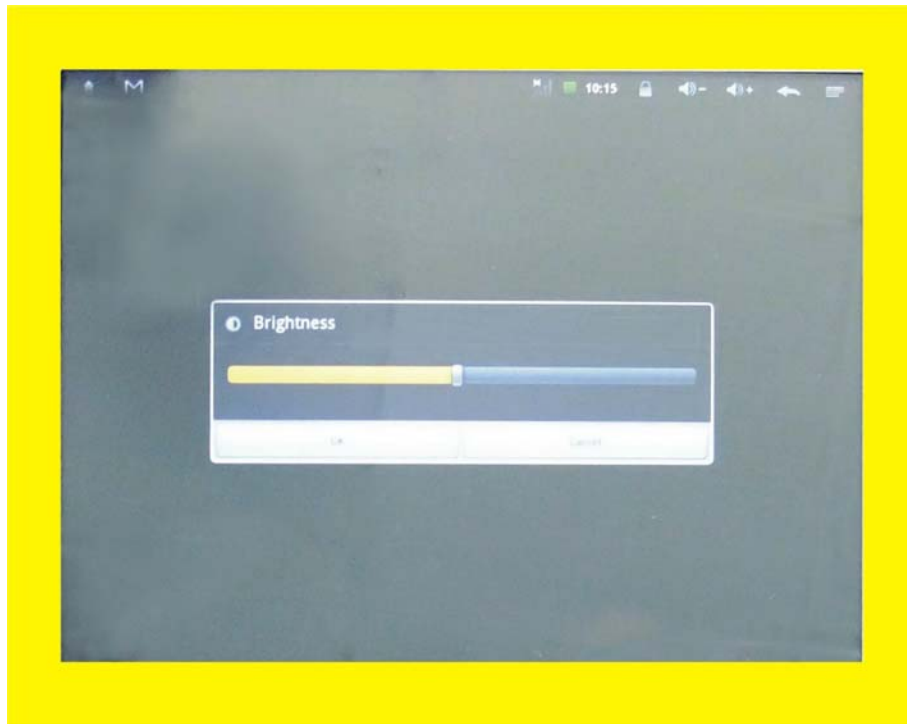

Idle screen: There are six kinds of time intervals for your choose for idle screen: 15 seconds, 30 seconds, 1 minutes, 2 minutes, 10 minutes and 30 minutes.

#### 4.3 Security and location

safety and location: set up my location and password selections,  
Using of wireless network: you can check the location of application by using wireless network

Visible password: it will show your password when you typing them

#### 4.4 Date and time


Date and time: set up date, time, time zone and format

Set up date and time: enter the interface of date setting to set up the date and time

Select time zone: enter the interface of time zone to set up the time zone

Set up time format: set up the display format of time

Choose date format: Choose different display format of date

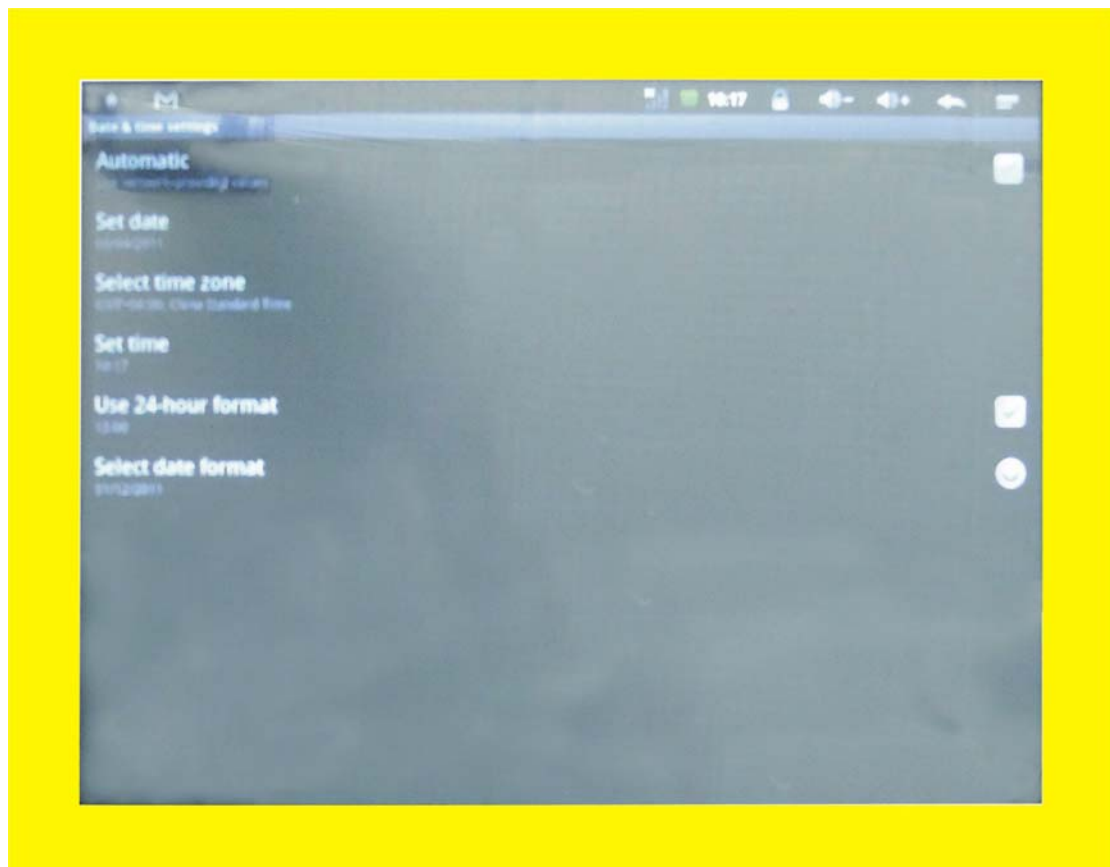

#### 4.5 Locate and text

set up the locate (languages and areas), text entry and automatic

error correction

Select area: There are 54 kinds of languages for choice



#### 4.6 Battery Charging

There is a built-in battery, when the electric quantity is low, the system will recommend you to charge

Way of charging: connect one end of the adaptor to power socket, connect the other end to the power port of the device.

1, When the indicator light of battery charging turns on, it means device is charging.

When the indicator light turns to green. It means battery is fully charged.

2, During the charging period, user can still use the Pc.

Note: In the boot of state, .it takes long time for charging.

### 5. Software installation and management


#### 5.1 Browser



Click" 浏览器 " and open the following web page.  
Start: enter website by inputting web address




## 5.2 E-mail


Click E-mail icon"  " and enter the e-mail,  
You can proceed as follows:

- 1、 Set an e-mail account
- 2、 Open a new e-mail
- 3、 Send and receive e-mails

Note: Shortcut menu will popup when clicking the menu button..

## 5.3 Google map

Click"  " and enter Google Map

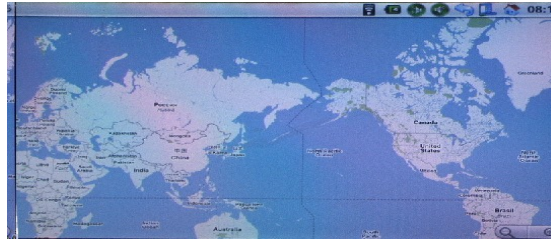

--Click the zoom icons on the touch screen to zoom in and zoom out images

--Drag touch screen, move the image up-and-down and right-and-left

Click Menu :

--search: search maps by entering address


--Line : search drive circuit by entering starting and finishing address

--Map mode: three modes for choice, map mode、satellite mode and traffic mode.

--My position: Find out my current location by setting up "My Location"

--more: more information about Google Map

## 5.4 Alarm clock

Click " " and enter the alarm clock settings



Set up time : Enter the interface of time settings to set up time.

Set up hour format: set up displaying format of time

Select the format of date: choose different format to show date.

### 5.5 The procedure of using HDMI

---through the cable to connect the tablet PC with TV

---when the HDMI icon appear on the status bar, pull down the status bar

---HDMI switch

---HDMI 480P or

HDMI 720P or

HDMI 1080P

Then you can see the computer screen on TV screen.

### 5.6 The procedure of connecting the tablet PC with computer

---through the cable to connect the tablet PC with computer

---when the USB icon appear on the status bar, pull down the status bar


---USB connected

---turn on the USB storage

Then you can see the file of tablet PC in your computer.



## **6.O/I File Manager**

Click "  " and enter O/I File manager, you can browse the files in the e-pad and T-Flash memory card.

Short click the menu key or click the mean software on the screen to bring up the operator interface.

Operation: bring up the operation interface

--Cut: Cut a file or folder

--Copy: Copy a file or folder

--Delete: Delete a file or folder

--Rename: Rename a file or folder

## **7. FAQ**

### **7.1 Can not open the media player**

- Check battery
- Connect the power adapter and then check again
- If it still cannot be opened, please contact our sales person

### **7.2 Screen is flashing after starting up**

- short of power, please charge

### **7.3 Headphones can not hear sound**

- please check whether the volume has been set to 0
- please check whether the music file has been damaged. Try playing another music to determine. If the file has been damaged, it could lead to serious noise or skips.

### **7.4 Can not copy the file**

- Confirm whether the computer and the player is properly connected
- Confirm whether the storage space is full

## **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE 3: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.