



# J2C81 RADIO MANUAL

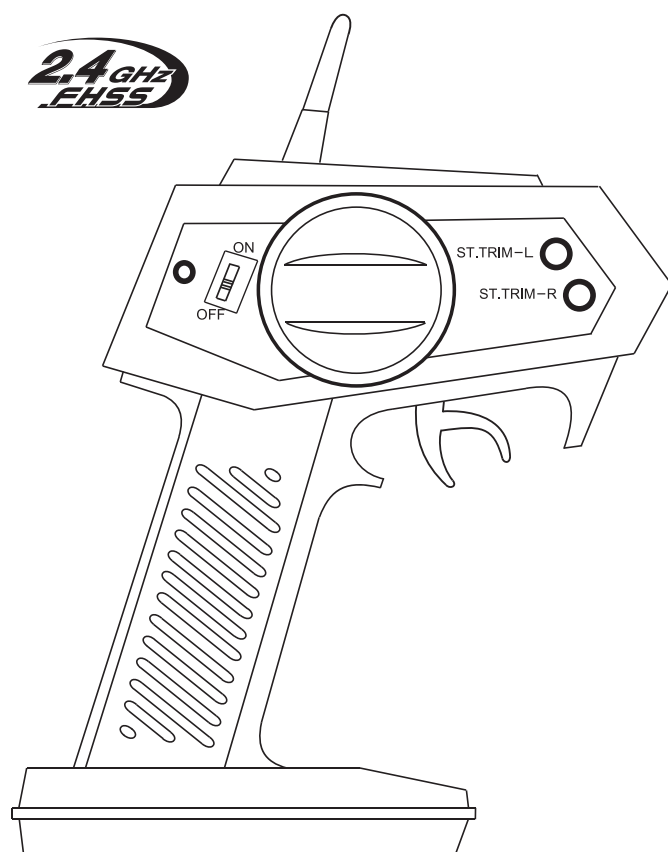

2.4GHz 2CH FHSS Digital Proportional Transmitter

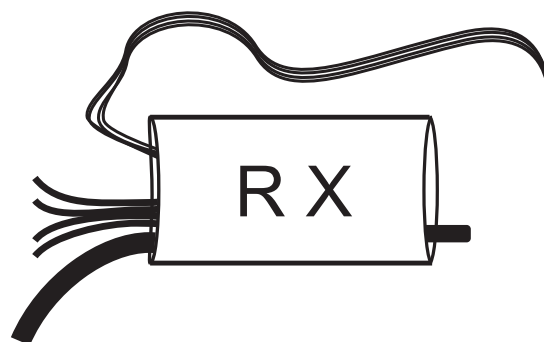


2.4GHz 2CH FHSS Receiver

## Forward Throttle Trigger

Your boat can be driven forward by pulling the throttle trigger. Release the trigger and the boat will stop.

## Left/Right Steering Wheel

The steering wheel controls the boat's left and right movement. Turn the wheel to the left to steer to the left. Turn the wheel to the right to steer to the right. Release the wheel to go straight.

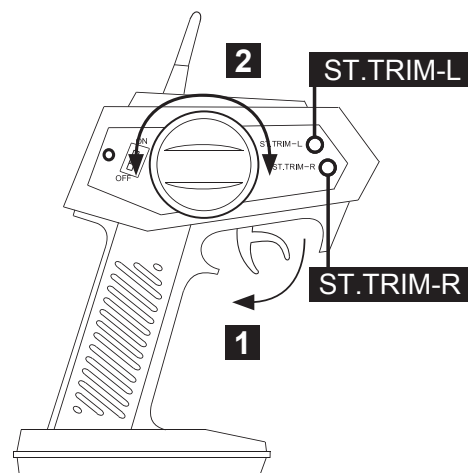

## Trim Adjustment

Steering trim, adjust "ST/TRIM" "R/L" so that rudder is centered prior to operation, you may adjust this control to make the boat run straight during operation.