



**SEEK AND DESTROY
JUSTICE DEALER
FULL FUNCTION RADIO CONTROL
TANK VEHICLE**



IGNITE-BLACKOPS.COM

Manufactured & Distributed by
© 2013 Bear River International, LLC
Frisco, TX 75034
All Rights Reserved
MADE IN CHINA



ITEM NO. B1375

16
YRS.+

OPERATING INSTRUCTIONS

***IMPORTANT:** IF VEHICLE DOES NOT RESPOND PROPERLY, PLEASE REPLACE BATTERIES IN VEHICLE (8-AA NOT INCLUDED) AND BATTERY IN CONTROLLER (1-9V NOT INCLUDED).

**READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL BEFORE USING THIS AIRSOFT VEHICLE
BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF
THIS AIRSOFT VEHICLE**

THIS PRODUCT IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER.

Please read this owner's manual completely. Remember to treat this airsoft vehicle with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

PLEASE DO NOT RETURN PRODUCT TO STORE

For product assistance or questions,
please contact Customer Service:

Email: help@bearriver.net

Phone: 1-580-272-0022

You can get answers to frequently asked
questions at **www.ignite-blackops.com**

USES 8 AA BATTERIES IN VEHICLE (NOT INCLUDED)
AND 1 9V BATTERY IN CONTROLLER (NOT INCLUDED).

PATENT PENDING.

WARNING:

THIS PRODUCT AND PACKAGE MAY CONTAIN
CHEMICAL(S) KNOWN TO THE STATE OF
CALIFORNIA TO CAUSE CANCER AND BIRTH
DEFECTS OR OTHER REPRODUCTIVE HARM.



WARNING: Choking Hazard-small parts.

ACTUAL COLORS AND DECORATIONS
OF THE PRODUCT MAY VARY.

IGNITE RECHARGEABLE BATTERY PACK SOLD
SEPARATELY. CHECK STORE FOR PRODUCT.

DO NOT DISPOSE OF BATTERIES
IN FIRE, BATTERIES MAY
EXPLODE OR LEAK.


DO NOT MIX ALKALINE,
STANDARD (CARBON ZINC)
OR RECHARGEABLE
(NICKEL CADMIUM) BATTERIES.

DO NOT MIX OLD
AND NEW BATTERIES.


CONTENT LIST



Controller



Controller's Antenna

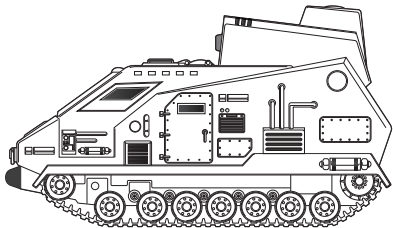


Airsoft Vehicle

NOTE:


To prevent damage, the contents of the package that are listed above have been packed in the tray and may be out of plain sight. Please remove all contents from the tray.

ANTENNA INSTALLATION

Diagram #1

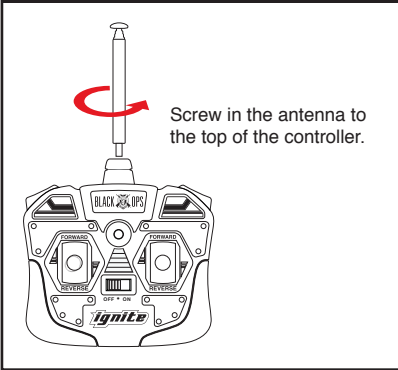

Screw in the antenna to the top of the controller.

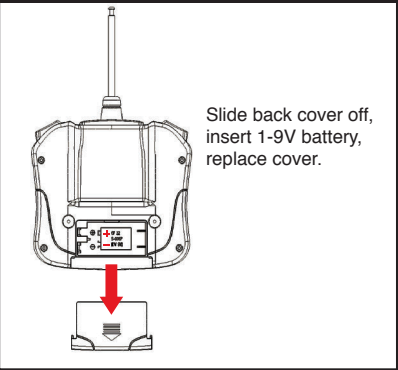

Slide back cover off, insert 1-9V battery, replace cover.


PLEASE NOTE:

- A) Make sure the batteries have been inserted correctly (+ or -) into vehicle & controller.
- B) If the vehicle does not respond properly, please replace the alkaline batteries in the vehicle and/or controller battery.


Remember to take out all the batteries from the vehicle and the controller if the vehicle will not be used for a long time.

VEHICLES REGULAR BATTERY INSTALLATION

Diagram #2

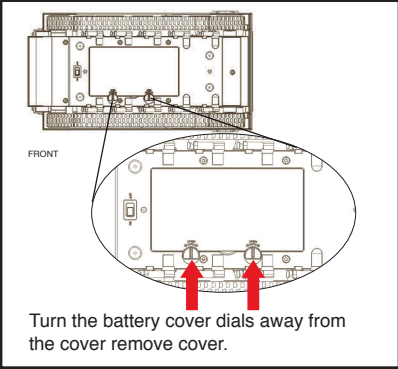

Turn the battery cover dials away from the cover remove cover.

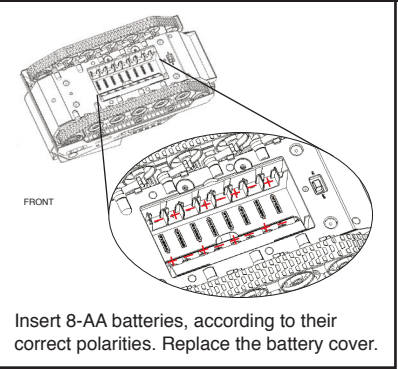

Insert 8-AA batteries, according to their correct polarities. Replace the battery cover.

DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.

DO NOT MIX OLD AND NEW BATTERIES.


DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

VEHICLES RECHARGEABLE BATTERY INSTALLATION

Diagram #3

To install the Ignite 7.2v Rechargeable Battery Pack (sold separately):

- 1) Turn the battery cover dial away from the battery cover, remove battery cover.
- 2) Find the battery pack cord in the right side of the compartment. Connect battery pack with vehicles cord.
- 3) Place battery pack into battery compartment, replace cover.

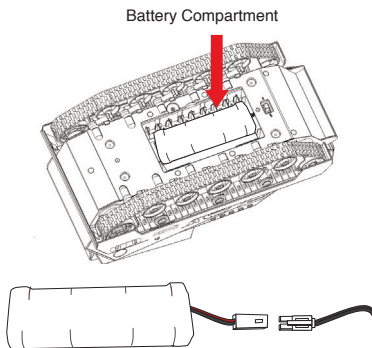

VEHICLE IS DUAL OPERATED. VEHICLE CAN USE REGULAR BATTERIES OR RECHARGEABLE BATTERIES.

IGNITE RECHARGEABLE BATTERY PACK SOLD SEPARATELY. CHECK STORE FOR PRODUCT.

**** NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

*****FCC NOTE: THE PROVIDED ANTENNA IS AN UNIQUE TO THIS VEHICLE. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

PLEASE NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

FUNCTIONS

Diagram #4

To use your Airsoft vehicle:

- 1) Flip the On/Off switch to the "On" position on the bottom of the vehicle.
- 2) Flip the On/Off switch to the "On" position on the controller.
- 3) Place on the ground.

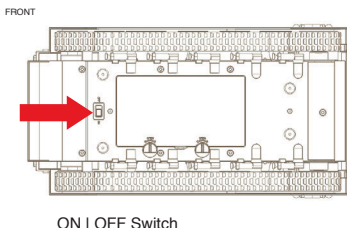


NOTE:

Operating multiple RC's with the same frequency in close proximity will cause interference and poor performance. Two frequency bands are available to play two at the same time.

Works best away from electrical hazards and large obstacles.

CONTROLLER & FIRING INSTRUCTIONS

Diagram #5

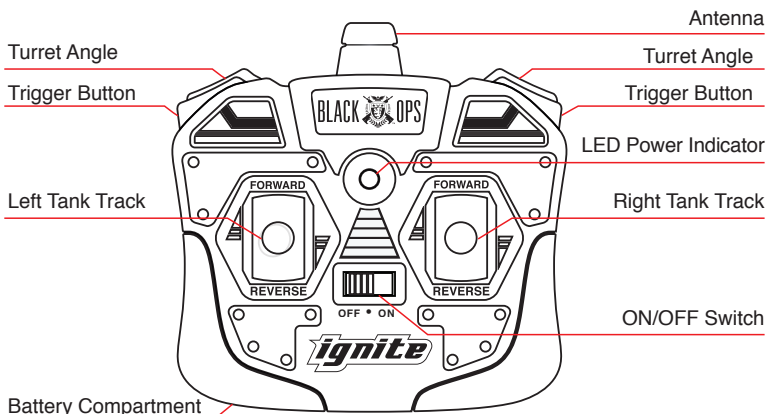


Antenna must be fully extended for best results.

Diagram #6

Note that each joystick controls the corresponding side of the tank tracks.

- 1) To go FORWARD press both joysticks forward, to go BACKWARDS press both joysticks backward.
- 2) To turn RIGHT, push the left joystick forward, and the Right joystick backward.
- 3) To turn LEFT, push the right joystick forward, and the Left joystick backward.


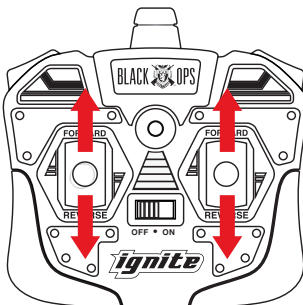


DANGER!

NEVER TOUCH THE TANK TRACKS AS THEY ARE TURNING

Diagram #7

- 1) To adjust the turret use the bottom two buttons on the top of the controller to turn the turret up and down.
- 2) Once the turret is angled in the desired position press the top two buttons on the top of the controller at the same time to fire airsoft BB.
- 3) For one BB at a time quickly press and release both buttons together.
- 4) For rapid fire press buttons together and hold.

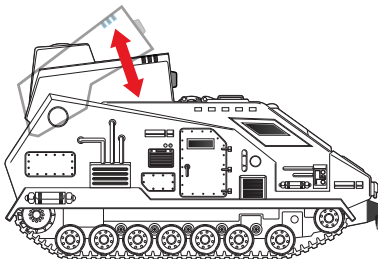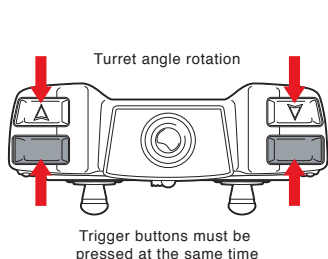

⚠ WARNING:

You and others with you should always wear eye protection to protect your eyes.

ATTENTION:

NEVER point at any unprotected person or animal. NEVER point at anything you do not intend to shoot.

Cautions

1. Make sure you always use new or fully charged batteries in the controller.
2. Do not operate the vehicle if it becomes damaged in any way.
3. Check that the infrared signal from the controller is making a connection with the vehicle before operating.
4. Try not to crash the vehicle as this may cause damage.
5. Check that the area is clear of all obstacles before you operate.
6. Adult supervision is always recommended.
7. Never operate near animals. Keep vehicle away from your fingers, hair, eyes and other body parts. Stay away from obstacles and electrical hazards.

Warning

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are only to be charged under adult supervision.
3. Rechargeable batteries are to be removed from the toy before being charged.
4. Different types of batteries or new and used batteries are not to be mixed.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the toy.
7. The supply terminals are not to be short-circuited.

ATTENTION PARENTS: The battery charger and battery pack need to be periodically examined for potential hazards and any potentially hazardous parts to be repaired or replaced.

NOTE:

- Do not put objects or fingers near the front or rear of the track while it is turning.
- Tank can run on various terrain, be sure objects do not get obstructed in the tank track.
- Avoid hard crashes.
- Never give the vehicle or controller to any child under the age of 3 as it contains small parts.
- When not in use for an extended amount of time, remove batteries from compartments.

LOADING BB'S INSTRUCTIONS


Diagram #8

To load BB's into the vehicle:

- 1) Make sure vehicle is "OFF."
- 2) Point the Turret in a SAFE DIRECTION.
- 3) Open the BB cover.
- 4) Insert up to 400 6mm plastic BBs, shaking the vehicle slightly to help feed the BBs down into the chamber. **We recommend using Black Ops .20g 6mm Biodegradable BBs.**
- 5) Close cover (make sure to close before running).

(Maximum capacity should not exceed 300 BB's).

BB Cover and Chamber

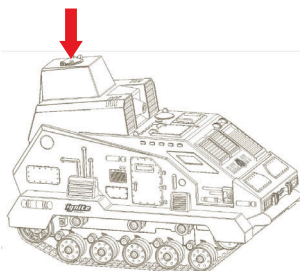

⚠ WARNING:

ONLY USE 6mm plastic BBs in this airsoft vehicle. Use of any other ammunition can cause injury to you or damage to the airsoft vehicle.

⚠ WARNING:

DO NOT re-use plastic BBs because they could possibly cause damage to your airsoft vehicle.

UNLOADING BB'S INSTRUCTIONS


Diagram #9

To unload BB's with out firing the vehicle:


- 1) Make sure vehicle is "OFF."
- 2) Point the Turret in a SAFE DIRECTION.
- 3) Open the BB cover.
- 4) Turn the vehicle upside down, gently shaking until all BB's have been emptied.
- 5) Close cover.

To unload BB's by firing the vehicle:

- 1) Point the Turret in a SAFE DIRECTION
*Note your airsoft vehicle is fully automatic. It will continue to fire as you hold in the triggers.
- 2) When you are sure of your target and backstop, and the area around the target is clear turn the airsoft vehicle "ON" aim and press both red buttons to fire.
- 3) Continue holding the triggers until no more BB's are released.

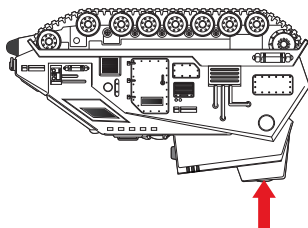

BB Cover and Chamber

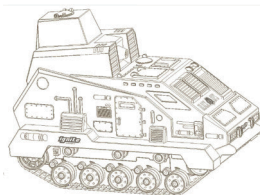

⚠ WARNING:

Never assume that because the airsoft vehicle no longer fires a BB and/or the chamber is empty or removed, that a BB is not lodged in the barrel. Always treat the airsoft vehicle as though it is loaded and with the same respect you would a firearm.

Aiming and Firing Safely

- You and others with you should always wear eye protection designed for airsoft to protect your eyes.
- Misuse or careless use may cause serious injury.
- Always point your airsoft vehicle in a SAFE DIRECTION.
- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit.
- DO NOT re-use plastic BBs because they could possibly cause damage to you or your airsoft vehicle.
- Your airsoft vehicle is designed for target shooting and is suited for both indoor and outdoor use. Always remember to place your target carefully. THINK about what you will hit if you miss the target.
- Always keep your fingers off the trigger, until ready to shoot.
- Your airsoft vehicle is fully automatic. It will continue to fire as you hold in the triggers.
- Motor of Vehicle will get hot, use caution in handling.
- Do not stall the motor during use.

IMPORTANT INFORMATION

Reviewing Safety

- Do not ever point the airsoft vehicle at any person. Do not ever point the airsoft vehicle at anything you do not intend to shoot.
- Always treat the airsoft vehicle as though it is loaded and with the same respect you would a firearm.
- Always aim in a SAFE DIRECTION, Always keep the muzzle of the airsoft vehicle pointed in a SAFE DIRECTION.
- Always check to see if the airsoft vehicle is "OFF" and unloaded when getting it from another person or from storage.
- Always keep your fingers off the triggers until ready to shoot.
- You and others with you should always wear eye protection to protect your eyes.
- Always wear eye protection designed for airsoft over your regular glasses.
- Use 6mm plastic BBs only.
- Do not re-use plastic BBs because they could cause possible damage to your airsoft vehicle.
- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit.
- Replace the backstop if it becomes worn. Place the backstop in a location that will be safe should the backstop fail.
- Your backstop should be checked for wear before and after each use. All backstops are subject to wear and will eventually fail. Replace your backstop if the surface is worn or damaged or if a ricochet occurs.
- Do not attempt to disassemble or tamper with your airsoft vehicle.
- DO NOT MODIFY OR ALTER YOUR AIRSOFT vehicle. Attempts to modify the airsoft vehicle in any way may make your airsoft vehicle unsafe to use, cause serious injury or death and will void the warranty.
- Using unauthorized repair centers or modifying the function of your airsoft vehicle in any way may be unsafe and will void your warranty.
- Do not put the airsoft vehicle away loaded. Make sure ALL of the plastic BBs are unloaded from the airsoft vehicle.
- Always store this airsoft vehicle in a secure location.

TROUBLE SHOOTING

PROBLEMS	REASONS	SOLUTIONS
RUNNING PROBLEMS	The batteries inside the radio controller are too weak.	Replace with new alkaline batteries inside the control unit, or recharge battery pack.
	There is a weak or low reception for the radio control.	
	The batteries inside the vehicle are too weak.	
FIRING PROBLEMS	BB's do not fire.	Compartment may be out of BBs
		Mechanisms may be faulty, contact customer service for assistance.
OPERATION PROBLEMS	A small object obstructs movement of the tank track.	Use tweezers to remove obstruction
	The vehicle was driven on the carpet and has fabric threads caught in the track.	Playing on the carpet is not recommended
OTHER	The vehicle does not respond to the radio control.	Try playing in another location.
	The vehicle control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave may disrupt the radio control. Either play in another location or turn off the other equipment. If you are planning to race your vehicles with another friend, purchase vehicles with two different frequencies (49 MHz and 27 MHz) to avoid disruption.

⚠ WARNING:

THIS PRODUCT IS NOT A TOY. ADULT SUPERVISION REQUIRED. THIS PRODUCT IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER. MISUSE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. EYE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN AT ALL TIMES BY THE USER AND ANY PERSON WITHIN RANGE. READ ALL INSTRUCTIONS AND OWNERS MANUAL BEFORE USING. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRSOFT GUN.

⚠ WARNING:

DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES. DO NOT MIX OLD AND NEW BATTERIES. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK. PLEASE REMOVE ALL PACKAGING MATERIAL BEFORE USE. IF PRODUCT BECOMES DAMAGED OR BROKEN IN ANY WAY, DISCONTINUE USE. USING DAMAGED PRODUCT MAY CAUSE DAMAGE OR LEAD TO INJURY.



IGNITE-BLACKOPS.COM

Manufactured & Distributed by
© 2013 Bear River International, LLC
Frisco, TX 75034
All Rights Reserved
MADE IN CHINA