

EUT-Battery off View

GSM
Antenna
Location




EUT-Internal View 1




EUT-Internal View 2

WI-FI
Antenna
Location

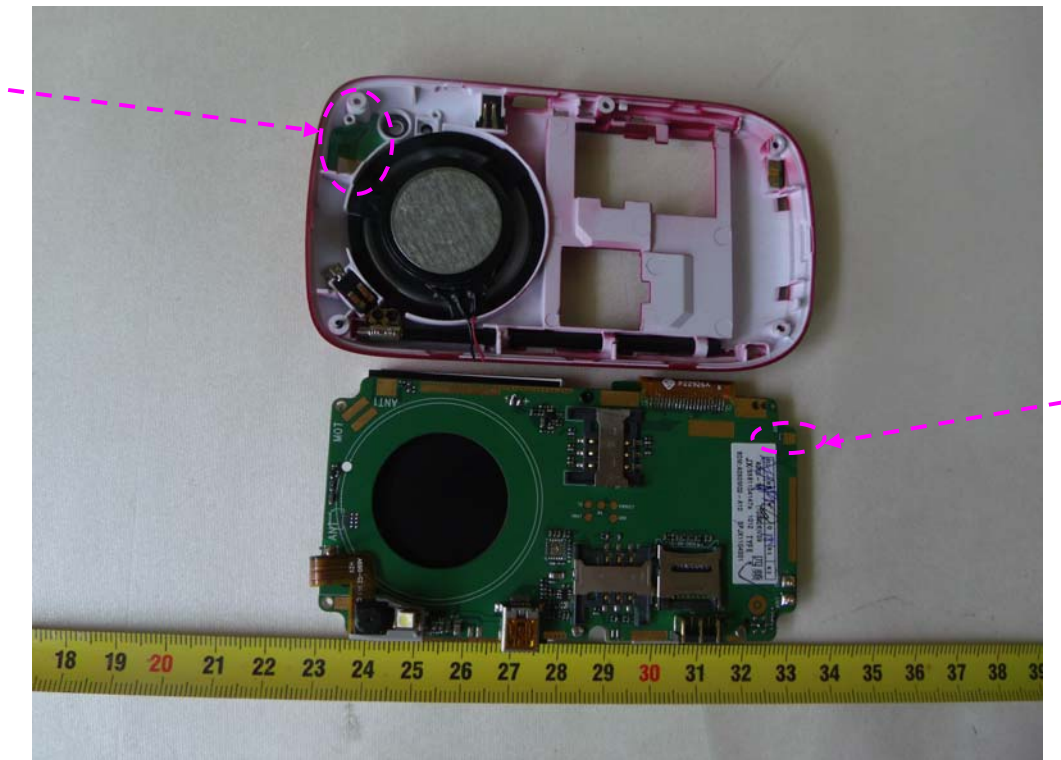


Bluetooth
Antenna
Location


EUT-Main Board Top View

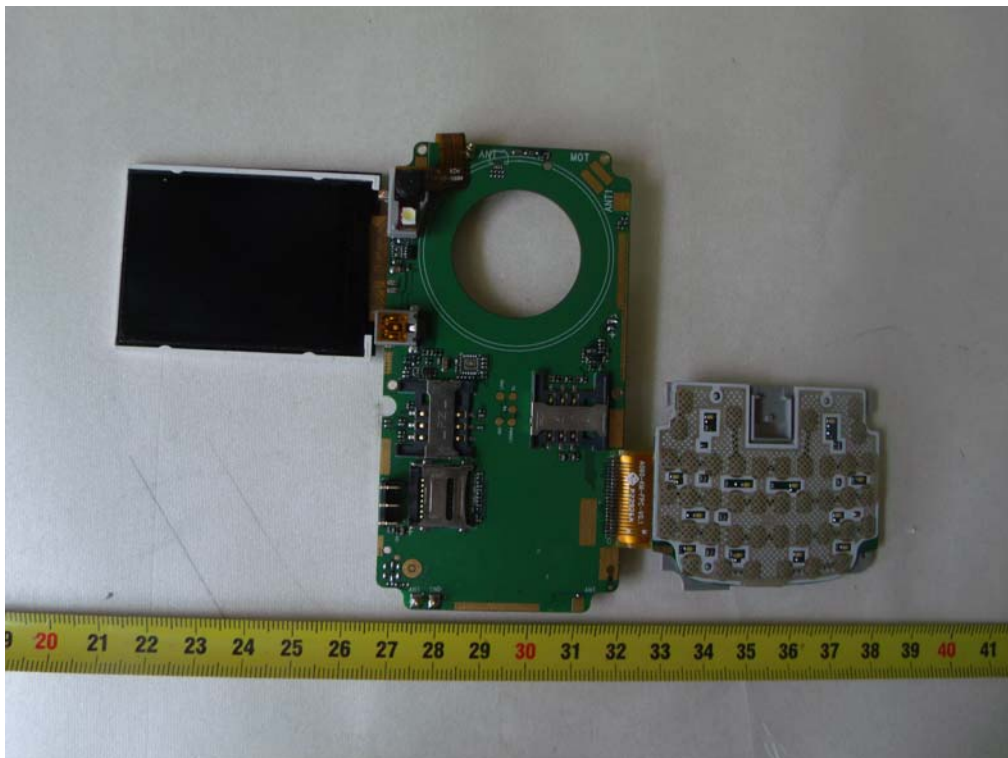

EUT-Main Board Bottom View

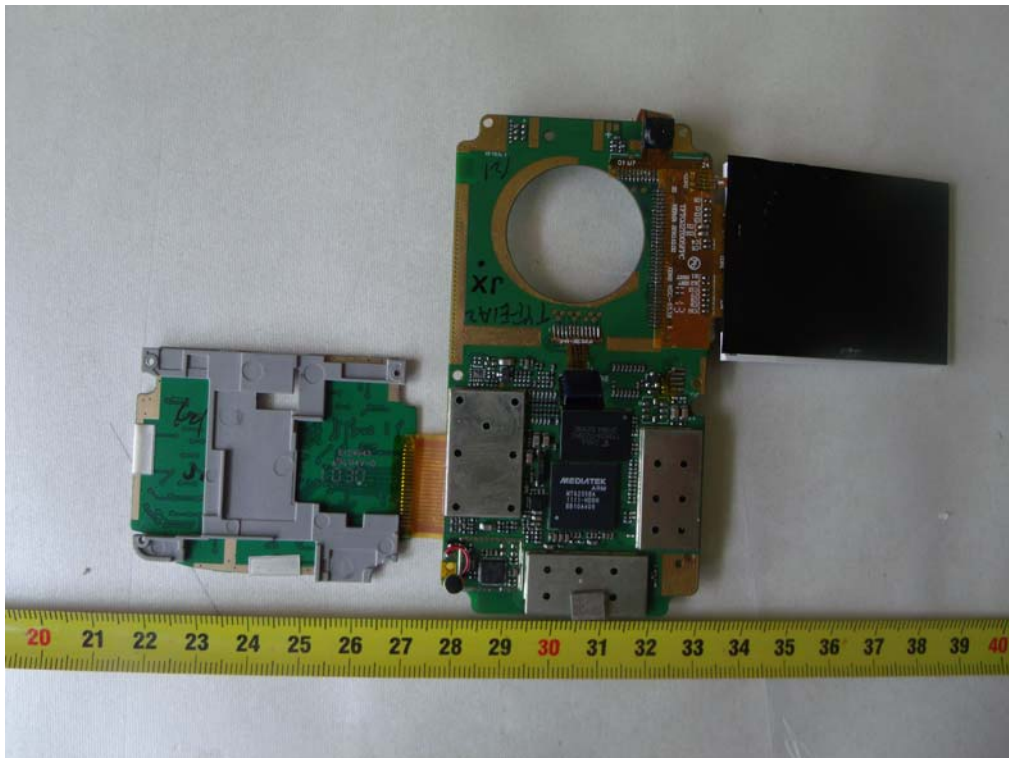

EUT-Main Board Shielding off Bottom View

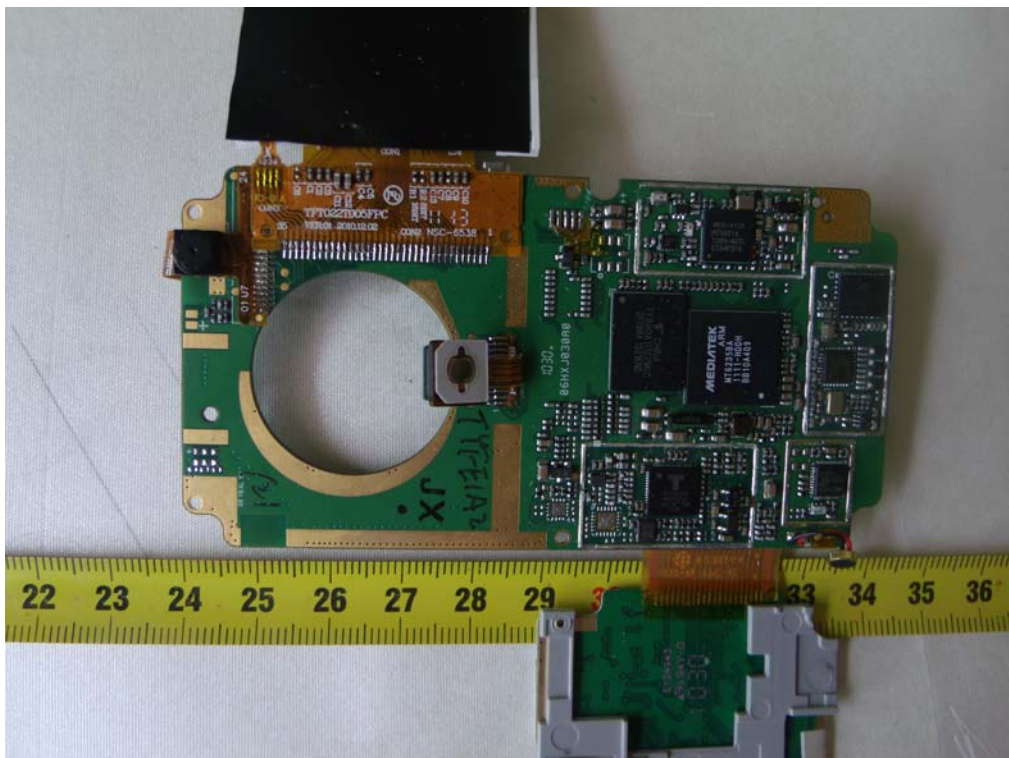

Battery View

