

# **Audi Entertainment mobile**

Operating instructions 

# CONTENTS

GENERAL INFORMATION.....	3	MEMORY CARDS.....	17
Safety information .....	3	Inserting the memory medium	
Precautions to be taken when using the		and playing back files.....	17
portable DVD player.....	4	Switching between several memory media....	17
Advice on handling the discs .....	4	USING BLUETOOTH HEADPHONES .....	18
SCOPE OF SUPPLY.....	4	Establishing a headphone connection .....	18
CONTROLS ON THE PLAYER.....	5	Severing the bluetooth connection .....	18
Front face with control panel .....	5	OTHER SETTINGS IN THE PLAYER MENU.....	19
Left and right sides .....	6	Navigating through the player menu.....	19
Reverse side (without battery) .....	6	Screen settings .....	19
THE REMOTE CONTROL.....	7	Settings with connection to an external TV...	19
Remote control buttons .....	7	Resetting to factory settings .....	20
Notes on using the remote control.....	8	Selecting the language .....	20
Inserting or replacing the battery .....	8	CONNECTING TO EXTERNAL EQUIPMENT.....	21
TYPICAL PLAYER INSTALLATIONS.....	9	Connecting external equipment	
Installing in the car .....	9	for playback.....	21
Demounting the portable DVD player .....	9	Playback from external equipment	
Playback with two DVD players in the car. ...	10	(e.g. games consoles) .....	21
Free-standing position .....	10	Connecting headphones .....	21
Day - night brightness adjustment.....	10	USING THE BATTERY .....	22
INITIAL OPERATION .....	11	The battery .....	22
Connecting to the power supply .....	11	Battery operation of the portable	
Switching the player On/Off.....	11	DVD player.....	22
Standby mode.....	11	Charging the battery.....	23
DISC PLAYBACK.....	12	Notes on using the battery .....	23
Inserting disc and playing back .....	12	PLAYER MENU - OVERVIEW .....	24
Interrupting /resuming playback .....	12	FAULT CORRECTION.....	25
Fast forwarding /rewinding .....	13	TECHNICAL DATA .....	26
Jumping to previous /next section.....	13	LICENCES AND COPYRIGHT.....	27
Calling up the DVD menu and navigation .....	13		
Changing the sound playback language .....	13		
Calling up information on the disc.....	14		
Ejecting the disc.....	14		
PLAYING BACK AUDIO TITLES, IMAGES			
AND VIDEOS FROM DATA CDS .....	15		
Displaying the contents.....	15		
Switching selection .....	15		
Playing back content.....	16		
Characteristics of individual file types.....	16		
PLAYING BACK USBS AND			

# GENERAL INFORMATION

Please familiarise yourself with these installation and operating instructions prior to using the portable DVD player for the first time. Read and adhere closely to following safety information. Non-compliance with the safety information can cause personal injury and/or damage to the player and will nullify any guarantee claims!

Keep these operating instructions in a safe place for later reference.

## Safety information



**DANGER!** There are dangerous electrical voltages present within the player! **Do not open the casing under any circumstances!** Contact a qualified specialist workshop for any necessary repairs!

**The player is to be safeguarded from moisture!** Use a soft, dry cloth for cleaning the casing surfaces!

When setting up the player, make sure there is enough space is available for air to circulate around it! The player should **not be operated directly adjacent to heat sources!**

### ATTENTION!

Connect the player **to the power supply using only the connecting cable supplied!** Make sure that the cable is not damaged and that the plugs are seated firmly!

Ensure that **the supply voltage corresponds to the operating voltage of the player.** The operating voltage is stated on the mains voltage adapter.

Isolate the player from the power supply **during thunderstorms or longer periods of absence!**

Replace the batteries only with **identical or equivalent items!**

### CLASS 1

#### LASER PRODUCT

This equipment contains a laser unit in the DVD drive. The laser unit is designed in such a way that no health hazards arise when used correctly.

**Do not open the laser unit under any circumstances!**

Laser radiation can cause permanent damage to the eyesight!

## Precautions to be taken when using the portable DVD player



**DANGER!** Only use the player in the car on the **mount provided**. The player may only be installed and operated in vehicles in such a way that the **driver is not distracted**.

Should **smoke or odour possibly accompanied by unusual operating noises develop**, switch the player off immediately and isolate it from the voltage supply. Do not continue using the player!

**Avoid abrupt, jerky movements to the player** during disc playback. The discs could otherwise become damaged.

## Advice on handling the discs

The player will play single or double-sided DVD video discs as well as standard compact discs (12 cm diameter discs). Discs with special formats or 8 cm diameter CDs are not suitable for playback.

Clean soiled discs carefully using first a damp, then a dry cloth. Changes in ambient temperature can cause condensation to form on the disc. Dry the disc before use with a soft cloth.

Avoid touching, writing on or damaging the reverse side of a disc or both sides in the case of double-sided discs. Do not expose the discs to direct sunlight, dust or strong heat. Defective discs can damage the DVD player and may therefore not be used!

## SCOPE OF SUPPLY

The following components are included:

- |  |   |
|--|---|
| - Portable DVD player                                | - Picture stand                         |
| - Remote control incl. battery                       | - Lithium-polymer rechargeable battery  |
| - Mains adapter for power supply                     | - Operating instructions (10 languages) |
| - 4 adapters for power supply<br>(UK, EU, AU and US) | - Travel bag                            |


Check the contents upon receipt. Should a component be missing or damaged, contact your dealer for replacement.

# CONTROLS ON THE PLAYER

## Front face with control panel

### Note

The buttons on the front control panel are lit up after switching on. They react to a single touch.

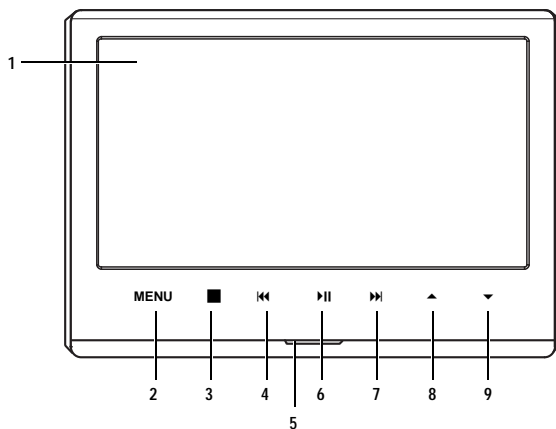


- 1 Display
- 2 **MENU**  
Calls up the player menu.
- 3 **STOP ■**  
Pre-stops /stops the playback.
- 4 **PREVIOUS CLIP ⏮**  
Switches to previous section /music title / image. Holding down slows the playback. Also serves to navigate down the menu.
- 5 **Day /night sensor** as well as sensor for remote control
- 6 **PLAY / PAUSE ▶||**  
Starts / interrupts the playback of a medium. Also serves to confirm the current selection in the menu display. Holding down switches to or out of standby mode.
- 7 **NEXT CLIP ▶▶**  
Switches to next section /music title / image. Holding down speeds up the playback. Also serves to navigate up the menu.
- 8,9 **VOLUME CONTROL ▲ ▼**  
Controls the playback volume.


## Left and right sides



- 1 Slot for **SD** memory cards.
- 2 **USB** socket
- 3 **VIDEO**  
Analogue video input / output.
- 4 **AUDIO**  
Analogue audio input / output.
- 5 **Headphone jack**
- 6 **ON / OFF** switch
- 7 **Mains connection socket**
- 8 **DVD drive insert**
- 9 **Eject disc**

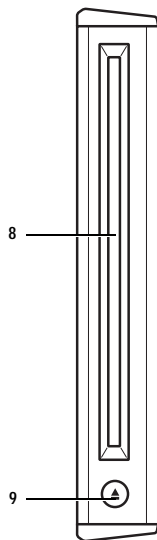

## Reverse side (without battery)

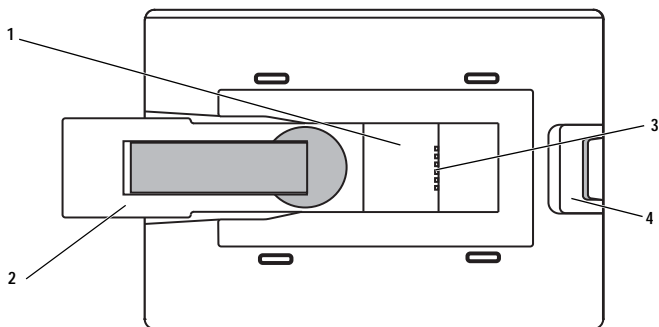


- 1 Slot for mounting onto the carrier bracket in the car and for inserting the battery.
- 2 Picture stand (removable).
- 3 Connection contacts for installation in car.
- 4 Release tab.

# THE REMOTE CONTROL

## Remote control buttons

- 1 **STANDBY**  
Switches the player On/Off.
- 2,3 **VOL+ ▲ / VOL- ▼**  
Increases /decreases the volume.
- 4 **MUTE**  
Switches the speakers On/Off.
- 5 **RETURN**  
Back to previous menu item.
- 6 **AUDIO**  
Language selection for DVD playback.
- 7 **INFO**  
Calls up disc information.
- 8 **DVD MENU**  
Calls up a DVD menu.
- 9 **STOP ■**  
Pre-stops /stops the playback.
- 10 Numerical entry **0-9**.
- 11 **NEXT CLIP ►►**  
Switches to next section / music title /image etc.
- 12 **PLAY / PAUSE ►►**  
Starts /interrupts the playback of a medium
- 13 **PREVIOUS CLIP ◄◄**  
Switches to previous section /music title /image etc.
- 14 **FORWARD ►►**  
Fast forward playback.

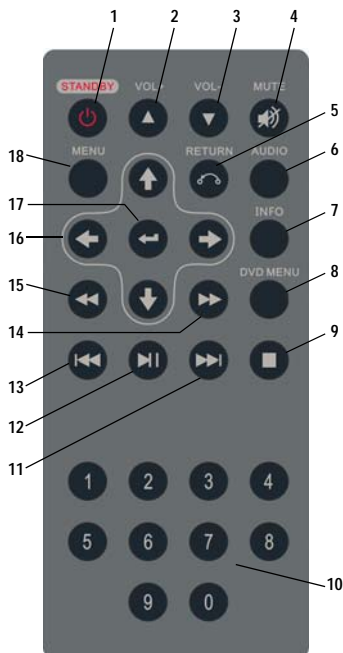

- 15 **REWIND ◄◄**  
Fast reverse playback.
- 16 **Cursor buttons.**  
Moves the selection to the left, right, up or down.
- 17 **ENTER**  
Confirms entries.
- 18 **MENU**  
Calls up the player menu.

## Notes on using the remote control


Safeguard the remote control from moisture and mechanical stress such as impacts, twisting etc. which can lead to damage and loss of functionality.

Avoid placing the remote control in bright light. This can likewise lead to functional defects.

Functional limitations can arise if there are obstacles between the remote control and the sensor on the portable DVD player.

## Inserting or replacing the battery

- 1 Push a fingernail into each of the slots in the battery cover.
- 2 Press the battery compartment cover at slot (a) lightly to the side (①) and pull the battery holder at slot (b) out (②).
- 3 Remove the old battery and place a new lithium battery (Cr2025) into the holder. The side of the battery marked + must point upwards.
- 4 Push the battery holder back into the remote control until the holder clicks lightly into place.

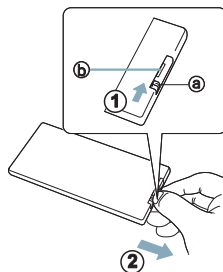



# TYPICAL PLAYER INSTALLATIONS


## Installing in the car

### Note

For car installation, the front seat must be prepared accordingly and the carrier bracket for mobile terminal devices installed. Should that not be the case, contact your dealer or authorised Audi garage and enquire about Audi rear seat entertainment.

To install the player in the car, proceed as follows:

- 1 Press the button at the top of the carrier (a) so that the counterpart (b) flips forward (arrow).
- 2 Attach the player from the left and push it to the right until it clicks into place.
- 3 Check that the player is firmly seated.

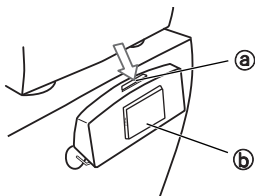

### Note

The player is switched on automatically when the car ignition is switched on if the **ON/OFF** switch is ON.


## Demounting the portable DVD player

To demount the player, proceed as follows:

- 1 Grasp the player with both hands. Push the release tab, left at the back, towards the middle of the player and hold it in.
- 2 Push the player to the left, out of the carrier.
- 3 Push the counterpart on the carrier in, so that it closes up flush.

## Playback with two DVD players in the car.

Where two players are installed in one car, is possible to transfer image and sound contained on a disc from the one player to the second. To do this, proceed as follows:

- 1 Switch both players on.
- 2 Insert a disc /data carrier into one player and start the playback.
- 3 Select **Mode - AV IN SEAT**  from the menu on the other player.

### Note


In this mode, headphones are controlled independently from each other via the respective player.

## Free-standing position

For use outside the car, the portable DVD player can be set upright with the picture stand on the reverse side.

- 1 Fit the picture stand into the slot on the reverse side.
- 2 Swing the tongue out until it clicks into place.
- 3 Turn the tongue round by 90° and stand the player up.
- 4 Check that the player is firmly seated.

Folding back the picture stand is done in reverse order.

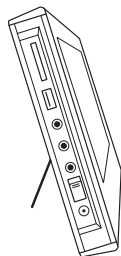

## Day - night brightness adjustment

A day - night sensor is built into the front face of the player. This provides automatic adjustment of the screen brightness to the ambient brightness with a delay of around 5 seconds.

# INITIAL OPERATION

## Connecting to the power supply

When the portable DVD player is mounted in the car, power is supplied via the contacts on the carrier.

If you are using the DVD player in a free-standing position, plug the mains adapter into a socket and the DC plug into the mains connecting socket on the left side of the player. You can also use the battery as an alternative.

## Switching the player On/Off.

The portable DVD player is switched on as follows:

- 1 Push up the **ON/OFF** switch on the left side of the player.
- 2 The "Welcome" screen appears. The controls on the front face light up.

The player is ready for use.

### **Note**

When switching on for the first time or after resetting the player settings, the language selector appears (see "Selecting the language" on page 20).

To switch the player off, push down the **ON/OFF** switch on the left side of the player.

## Standby mode

The portable DVD player automatically switches to the standby mode after a few minutes when there is no playback or operator action. The screen becomes dark and only the **PLAY / PAUSE** ►|| button remains lit up on the front face.

- 1 Press **STANDBY** on the remote control or **PLAY / PAUSE** ►|| for a few seconds on the player to end the standby mode.
- 2 Similarly, the player switches to standby mode if you press **STANDBY** on the remote control when the screen is lit up or **PLAY / PAUSE** ►|| on the player for a few seconds.

# DISC PLAYBACK

## Inserting disc and playing back

### Note

Check the condition of each disc before inserting! Do not use any deformed or otherwise damaged data carriers!

Insert single-sided discs with the printed side to the front. Check both sides of a double-sided disc then insert it correctly into the drive.

- 1 Check that the portable DVD player is ready for operation or in standby mode. If not, switch the player on.
- 2 When you push the disc into the opening in the DVD drive it will be drawn in automatically. The player reads the information on the disc. On the screen will appear DVD, VCD or CD, depending on disc type.
- 3 Playback normally starts automatically, the disc menu (where available) appears in the display. If not, press **PLAY / PAUSE ▶II** at the control panel or on the remote control.

### Note

When an audio disc is playing back, the screen display ends automatically if no buttons are pressed for about 1 minute. Pressing any random button reactivates the display.

## Interrupting /resuming playback

- 1 To interrupt the playback with freeze-frame, press **PLAY / PAUSE ▶II** once.
- 2 To interrupt the playback without freeze-frame, press **STOP ■** once (pre-stop).
- 3 To resume the playback press **PLAY / PAUSE ▶II** again.  
With most DVDs and video CDs the playback will restart at the point at which it was stopped. By ejecting the disc or pressing **STOP ■** again, this resume function is deactivated.

## Fast forwarding /rewinding

- 1 During playback, press one of the **FORWARD** ►► or **REWIND** ◀◀ buttons on the remote control or press and hold one of the ◀◀ or ►► buttons on the player.
- 2 The speed of the playback alters with each press of the button to 2x, 4x, 8x, 20x and again to 1x.
- 3 Pressing **PLAY / PAUSE** ►◄ also leads to playback at normal speed.

## Jumping to previous /next section

- 1 During playback press one of the ◀◀ or ►► buttons to jump to the previous / next section.

## Calling up the DVD menu and navigation

Most DVDs as well as video CDs with playback control (PBC) have a menu for selecting individual video sequences. This menu can be activated during playback by pressing **DVD MENU** on the remote control or by selecting the menu item **DVD Option - Disc Menu**.

- 1 Navigate DVDs by using the buttons ◀◀ and ►► or ▲ and ▼ to get to the desired item and start the playback with **PLAY / PAUSE** ►◄.
- 2 For video CDs with PBC, use the numerical buttons on the remote control to select an item.

### Note

Video CD playback can also be effected without calling up the disc menu. By pressing the number 1 on the remote control while the playback is stopped, track 1 on the disc will be played.

## Changing the sound playback language

- 1 By pressing the **AUDIO** button on the remote control or by calling up the menu item **DVD Option - Audio** during the playback, you can choose between the different sound tracks offered – depending on the facilities on the DVD/CD.

## Calling up information on the disc

This function enables you to display general information on the disc such as playing time, number of sections or title.

- 1 Press the **INFO** button on the remote control during playback or select the menu item **DVD Option - Information**. The information is shown in the upper part of the display.
- 2 Repeated pressing of the **INFO** button scrolls through the available information and ultimately fades this out.

## Ejecting the disc


- 1 Press the **Disc eject** button on the right side of the player. Any playback still running is stopped, the disc is ejected about half way.
- 2 Remove the disc completely from the drive.

# PLAYING BACK AUDIO TITLES, IMAGES AND VIDEOS FROM DATA CDS

## Displaying the contents

After inserting a disc which contains audio, image and/or video files, the player reads the information on the media content and displays this on the screen in three columns.

The left column displays icons for the respective mode:

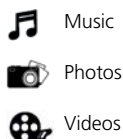

Recognised folders and files are listed in the middle and right hand columns.



The currently selected mode, the current folder or the current file is highlighted white. The current selection is symbolised by an orange bar.

## Switching selection

- 1 Move the bar up or down within a column by pressing the **◀◀** or **▶▶** button.
- 2 To open a folder, press a **PLAY / PAUSE ▶||** button. The button switches to the right hand column.
- 3 To return to the next highest folder level, press a **STOP ■** button.

## Playing back content

- 1 If the bar is on an audio, image or video file, start the playback by pressing the **PLAY / PAUSE ▶II** button.
- 2 If there are several media files located within the current folder, these will be played back sequentially.
- 3 During playback you can:
  - switch to the previous or next file with **⏮** or **⏭**,
  - pause or resume the playback with **PLAY / PAUSE ▶II**.
- 4 To end the playback, press **STOP ■**. The folder structure returns to the display.

## Characteristics of individual file types

The display on the screen can change depending on media type:

- With image files, you will see a thumbnail of the file in the middle column.
- With music files, you will see additional information in the lower part of the screen (where available).

File no./total	File name	Played
 0002/0004	It Takes Two.MP3	00:00:00
Tina Turner It Takes Two simply the best		

You will find a list of playable file formats in section "Technical data" on page 26.



# PLAYING BACK USBS AND MEMORY CARDS

## Inserting the memory medium and playing back files

- 1 Insert the USB memory stick or memory card into the corresponding connection socket on the left side of the player (see section "Left and right sides" on page 6).
- 2 The contents of the memory media are read and displayed as described in section "Playing back audio titles, images and videos from data CDs" on page 15.
- 3 To play back the contents, proceed as described in section "Playing back content" on page 16.

### Note

Connection via a USB cable or using memory cards of inferior quality can have a negative effect on the application.

## Switching between several memory media

If several data carriers are inserted or connected into the player, the playback can be switched between them as follows:

- 1 Press **MENU** on the player or remote control. The player menu is shown.
- 2 Confirm the current selection **mode** by pressing **PLAY / PAUSE ►II** on the player or **RETURN** on the remote control.
- 3 The sub-menu appears for selecting the data source.  
The symbol for the current data source is highlighted white.
- 4 Move the selection to the desired item by pressing the **◀** and **▶** buttons on the player or **▲** and **▼** on the remote control.
- 5 Confirm the selection by pressing **PLAY / PAUSE ►II** on the player or **ENTER** on the remote control.




The information on the selected data carrier is read by the player and displayed or the playback starts automatically.

# USING BLUETOOTH HEADPHONES


## Establishing a headphone connection

Sound from the player can also be transmitted to a bluetooth headphone via a bluetooth connection. It is necessary to proceed as follows when connecting for the first time:

- 1 Switch the headphones on by pressing and holding the symbol  on the phone designated "R". The green LED on the phone starts to flash.

### Note

If the LED doesn't flash, replace the batteries or charge them up via the USB connection. More detailed information can be found on this in the headphone' user information.


- 2 In the player menu, select **Bluetooth - New connection**. In the left upper corner of the display a white flashing bluetooth symbol  appears.
- 3 The player and headphones are creating a connection. This can take a few seconds. After successful connection, the colour of the bluetooth symbol changes to blue.
- 4 Close the player menu. The bluetooth symbol will also be faded out.

### Note

If the headphones have previously been connected with the portable DVD player then they will recognise the player and connect automatically every time the DVD player and headphones are switched on.

## Severing the bluetooth connection

Should you wish to sever the connection, there are the following options:

- 1 Switch off the headphones by pressing and holding on the symbol  on the side designated "L". The green LED on the phone goes out and the sound is played back via the player.
- 2 In the player menu, select **Bluetooth - Bluetooth off**.

# OTHER SETTINGS IN THE PLAYER MENU

## Navigating through the player menu

You can use the following buttons for calling up and navigating through the player menu.

Action	Button on the player	Button on the remote control
Calling up the menu	MENU	MENU
Up in menu level	⏮	▲
Down in menu level	⏭	▼
Confirm selection	▶	ENTER
Back to previous menu	■	RETURN
Quit menu	MENU	MENU

## Screen settings

The following monitor parameters can be set in the menu item **Display**:

- **Brightness**: automatic or manual, on a scale from 0 to 8.  
With "Automatic" the screen brightness adapts itself automatically to the ambient brightness (see "Day - night brightness adjustment" on page 10).
- **Color**: manual, on a scale from 0 to 8.
- **Proportion**: switch between width-to-height ratios 16:9 and 4:3.

## Settings with connection to an external TV.

When you connect the portable DVD player to an external TV, you can make the appropriate settings in the menu item **Setup** depending on its data:

- **TV System**: automatic – for multi-standard TVs, e.g. NTSC or PAL  
Specification is automatic.
- **TV Type**: setting the width-to-height ratio – 16:9, 4:3 letterbox (films are played back in the original width-to-height ratio, black bars may appear above and below), 4:3 pan & scan (films fill the entire TV screen, may be partially cut off at the sides), 2.35:1.

## Resetting to factory settings

By selecting the menu item **Setup - Default**, all manual configuration changes to the portable DVD player are erased and returned to the factory settings.

### **Note**

Thereafter, the language selection list appears on the screen.

## Selecting the language

The player menu is available in the following languages:

English, German, Spanish, French, Italian, Russian, Swedish, Dutch, Japanese and Chinese.

The language can be selected in the menu item **Language** (see "Player menu - overview" on page 24).

# CONNECTING TO EXTERNAL EQUIPMENT

## Attention

Before connecting, switch off the power supply to the portable DVD player and the external equipment!


## Connecting external equipment for playback

You can transmit the sound or image and sound signal from the portable DVD player to external equipment such as a TV or amplifier. To do this, proceed as follows:

- 1 Connect the socket(s) **AUDIO** or **VIDEO** on the portable DVD player (see "Left and right sides" on page 6) via the appropriate audio or video cable with the input socket(s) on the external equipment.
- 2 Switch both the player and the external equipment on. Select the required input or channel on the external equipment.
- 3 Start the media playback on the portable DVD player.

## Playback from external equipment (e.g. games consoles)

You can transmit sound or image and sound signal from external playback equipment to the portable DVD player. To do this, proceed as follows:

- 1 Connect the socket(s) **AUDIO** or **VIDEO** on the portable DVD player (see "Left and right sides" on page 6) via the appropriate audio or video cable with the output socket(s) on the external equipment.
- 2 Switch both the player and the external equipment on. In the portable DVD player menu, select **Mode - AV IN SIDE** .
- 3 Start the media playback on the external equipment.

## Connecting headphones

- 1 Turn the volume on the portable DVD player down to minimum.
- 2 Plug the headphones into the 'phone jack on the portable DVD player (see "Left and right sides" on page 6).
- 3 Put the headphones on and turn the volume up to a comfortable level.


# USING THE BATTERY

## The battery

Located on the battery are:

- 1 Counterpart
- 2 Status LED
- 3 Mains connection socket.


Located on the reverse side (not illustrated) is a slot similar to that on the portable DVD player for inserting the picture stand.

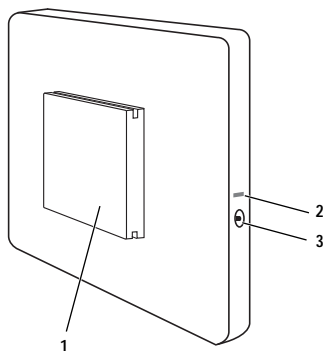

## Battery operation of the portable DVD player

You can use the portable DVD player running on the battery for around 2.5 hours, independent of mains power. To do so, proceed as follows:

- 1 Push the battery counterpart into the slot on the reverse side of the portable DVD player until it clicks into place.
- 2 Use the picture stand to stand the player up.
- 3 Switch the player on.

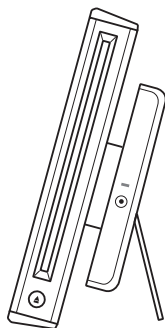

To remove the battery, proceed as follows:

- 1 Switch the player off.
- 2 Push the release tab, left at the back of the player, towards the middle of the player and hold it in.
- 3 Push the battery out of the slot.

## Charging the battery

To charge the battery, plug the mains adapter into a socket and the DC plug into the mains connection socket on the battery. When the charging process starts, the status LED on the battery lights up red. The LED goes out when the charging process has ended.

The battery can be charged while mounted on the player as well as separately.

### **Note**

If the battery is mounted on the portable DVD player and the latter is connected to the mains via the mains connection socket on the player, no charging of the battery takes place.

## Notes on using the battery



**DANGER!** Do not use the battery if it is damaged, deformed or swollen in any way! This presents a fire and explosion hazard!  
Batteries do not belong in the household rubbish! Spent, defective or damaged batteries must be disposed of properly.

Charge the battery fully before using it for the first time.

The battery becomes warm during the charging process. This is normal.

If the battery becomes too warm or the ambient temperature is more than 30 °C, the charging time can lengthen or even become impossible. In this case, let the battery cool off or move to a cooler location before starting the charging process.

Do not recharge a battery which is already fully charged. This can permanently worsen the battery's performance.

# PLAYER MENU - OVERVIEW

Portable DVD player overview of menu:

Mode -----	DVD		
	USB		
	SD		
	AV IN SEAT		
	AV IN SIDE		
Bluetooth -----	Bluetooth On		
	Bluetooth Off		
	Pairing /		
	New connection		
Display -----	Brightness -----	Auto	
		Manual -----	0...8
	Color		0...8
	Proportion -----	16:9	
		4:3	
Setup -----	TV System -----	Auto	
		PAL	
		NTSC	
	TV Type -----	16:9	
		4:3 LB	
		4:3 PS	
		2.35:1	
	Default		
Language -----	English		
	German		
	Spanish		
	French		
	Italian		
	Russian		
	Swedish		
	Dutch		
	Chinese		
	Japanese		
DVD Option -----	Disc Menu		
	Information		
	Audio		
	Subtitle		
	Repeat		



# FAULT CORRECTION

Not every fault means the player is defective. The following table lists some faults, possible causes and steps to remedy these.

Symptom	Possible cause	Remedy
Player won't switch on	Player is unplugged from power supply	Check connection to player and that mains plug is seated properly
Remote control not working	Remote control batteries flat Line of influence barred	Replace batteries Test in another location
No sound output	Volume at 0	Turn up volume
	Playback has been interrupted	Resume playback
	Headphones are connected or plugged in	Unplug headphones
Screen is blue, text: "No signal"	Mode AV IN SEAT is activated without external signal	Select another mode from the player menu
No disc playback	Disc incorrectly inserted	Insert disc correctly
	The disc is dirty or damaged	Clean disc carefully
	The disc contains no playable content	
No image and/or sound on the external equipment	Wrong channel or audio input selected at the external equipment	Check setting of the external equipment
	Cable connection loose	Check cable seating



## **DANGER!**

Never attempt to repair the portable DVD player yourself.

Always contact a qualified repair shop in the following cases:

- The player has come into contact with water.
- The player no longer functions as normal.
- The playback performance and quality are significantly lower than usual.

# TECHNICAL DATA

## Performance characteristics

- DVD player, code-free, for DVD, VCD, SVCD, CD, DVD+R, DVD-R, DVD+RW, DVD-RW
- Image and video formats: JPEG, MPEG2, DIVX, DAT
- Audio formats: MP2, MP3, DAT
- TV systems: NTSC, PAL
- Integrated stereo loudspeakers, 2 x 1 W
- integrated bluetooth module

## Screen

- Diagonal: 9" (22.8 cm), 800 x 480 pixels, width-to-height ration 16:9
- Brightness: 250 cd/m<sup>2</sup>
- Contrast: 400:1

## Connections

- Headphones, input and output sockets: cinch 3.5 mm plug
- Card reader (SD) and USB port

## Power supply

- Mains adapter: input 100-240 V AC, output 12 V 1.5 A DC
- Battery run time on playback: max. 2.5 hours

## Dimensions

- Width /height /depth: 240 x 173 x 36.5 mm
- Weight: approx. 920 g

## Battery

- Width /height /depth: 152 x 112 x 15mm
- Weight: approx. 240 g
- Capacity: 3000 mAh
- Output voltage: 7.4 V DC
- Charging time: approx. 4 hours (during simultaneous playback approx. 10 hours), up to 500 charging cycles.

## Temperature range

- Operating: -10 ... +50 °C
- Storage: -30 ... +70 °C

## Environmental protection

The screen is mercury-free with arsenic-free screen glass and contains no BFRs (brominated flame retardants) or PVC or heavy metals such as Cd, Cr, Hg or Pb, the casing consists of recyclable aluminium.

The player complies with the harmonised European Standards in the versions current at the time of manufacture:

Low voltage 2006/95/EC

Electromagnetic compatibility 2004/108/EC

# LICENCES AND COPYRIGHT

## **MACROVISION:**

This product contains a technology for safeguarding copyrights which are protected by US patents and other intellectual property rights. The use of this copyright safeguarding technology must be authorised by Macrovision and is provided for personal use and other limited presentations unless otherwise stated by Macrovision. Reverse engineering or disassembly are not permitted.

## **DOLBY:**

Manufactured under licence from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

## **DivX:**

This equipment contains a copyright safeguarding technology which is protected by DivX, Inc. DivX, DivX Certified and related logos are trademarks of DivX, Inc. and are used within the scope of a licence.

All other brand and product names referred to in these operating instructions are trademarks and/or registered trademarks of the respective owner.

We reserve the right to make alterations for reasons of technical advancement.  
The illustrations and screen displays used in this handbook may deviate from the actual design of the equipment.

© Made by Nextbase for Audi Original Accessories, issued January 2011

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.