




## EUT INTERNAL PHOTOGRAPHS

### EUT –Uncover View



### EUT –Antenna Location and Details

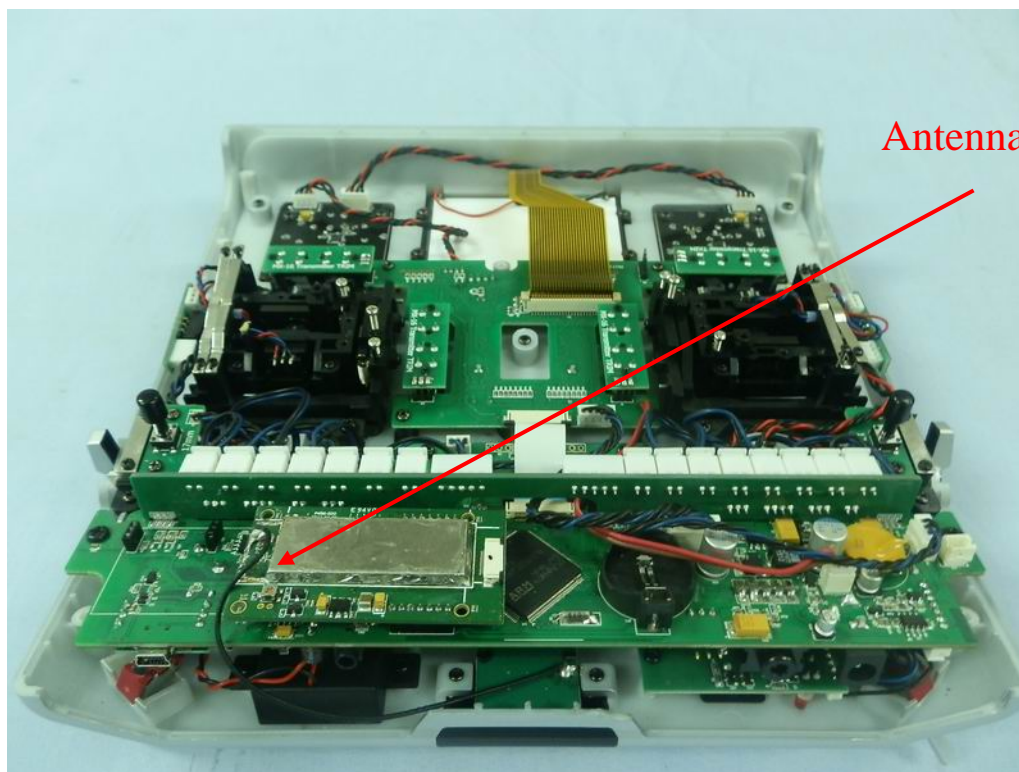

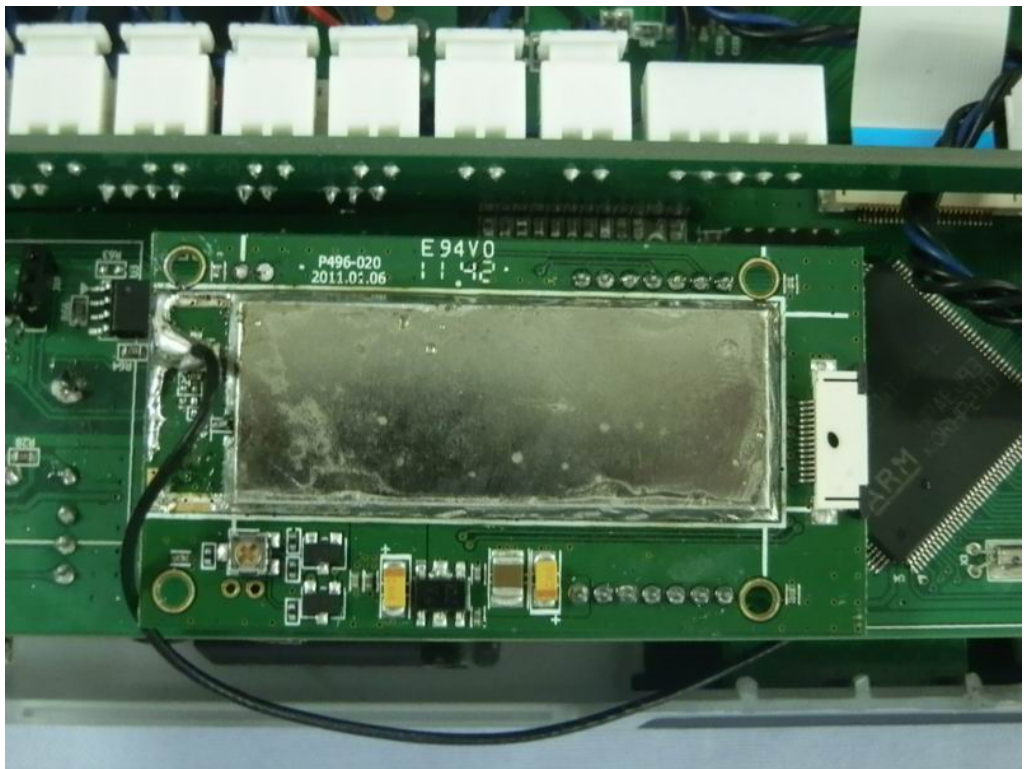
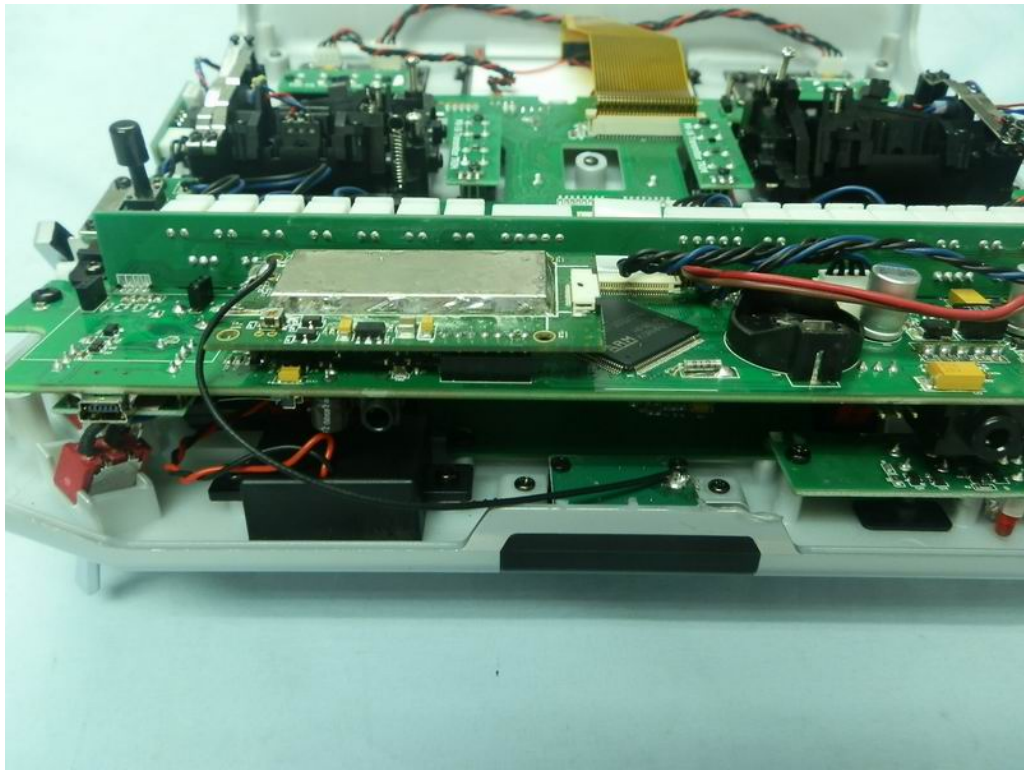


## EUT –PCB View








## EUT –PCB View

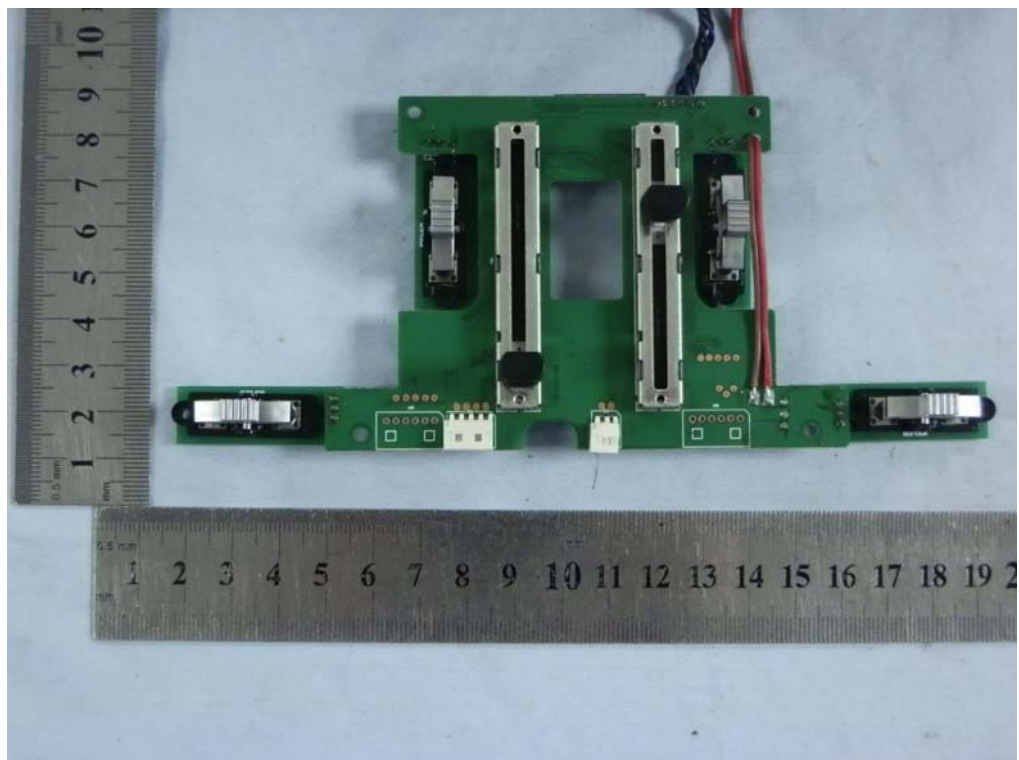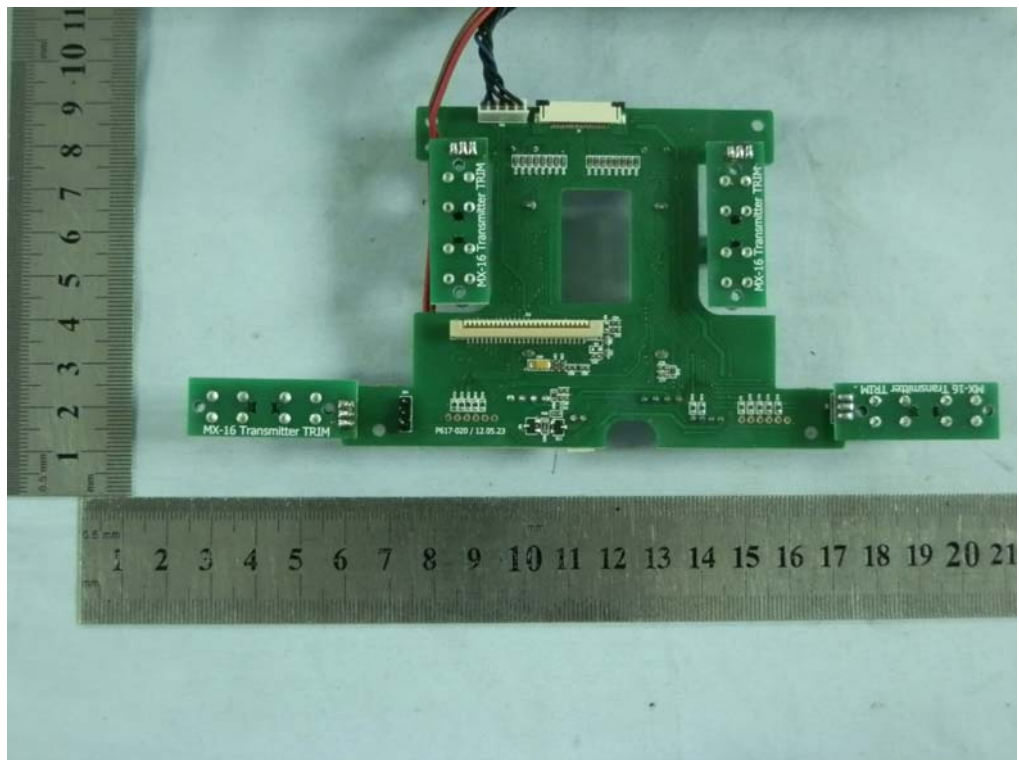



## EUT –PCB View

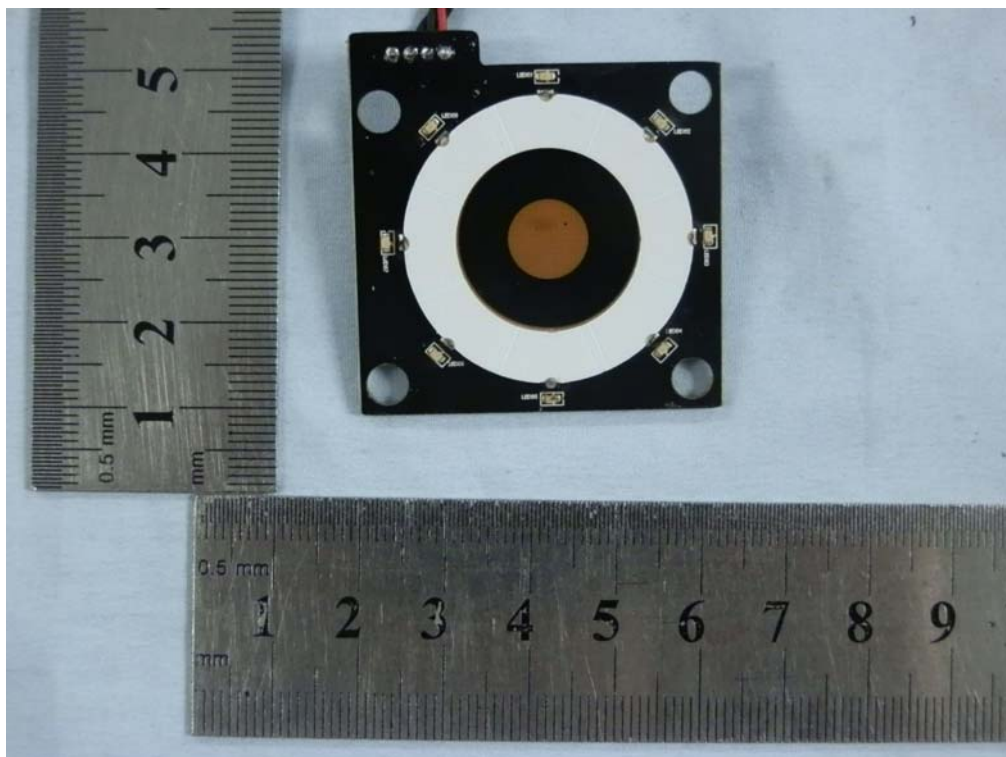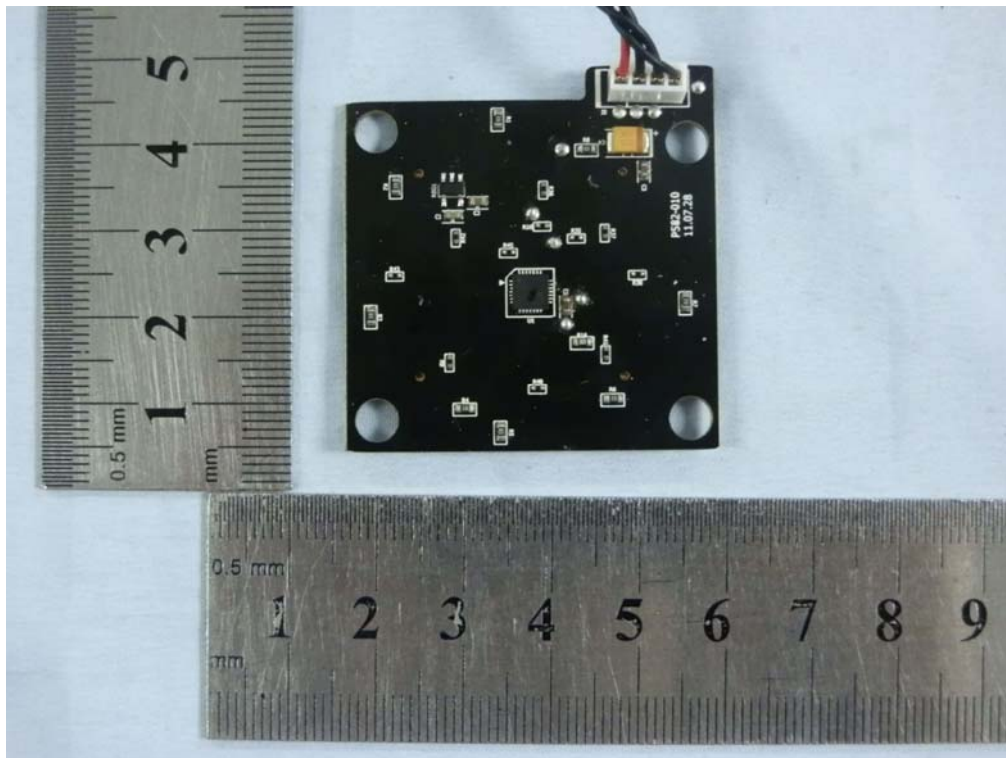


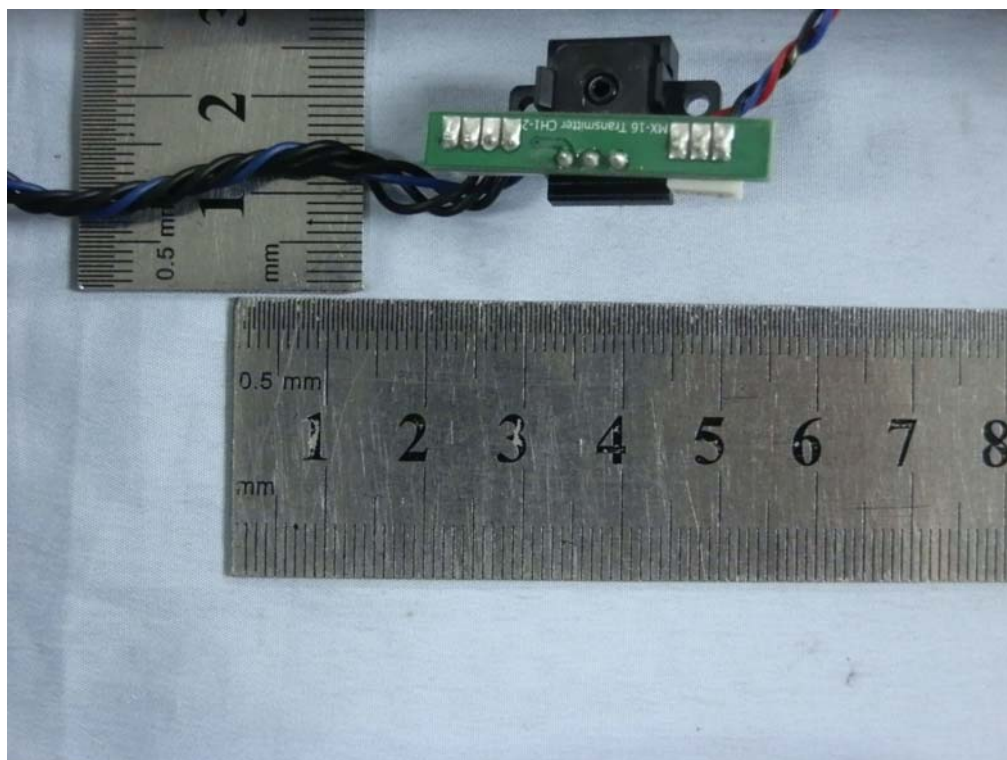




EUT –PCB View

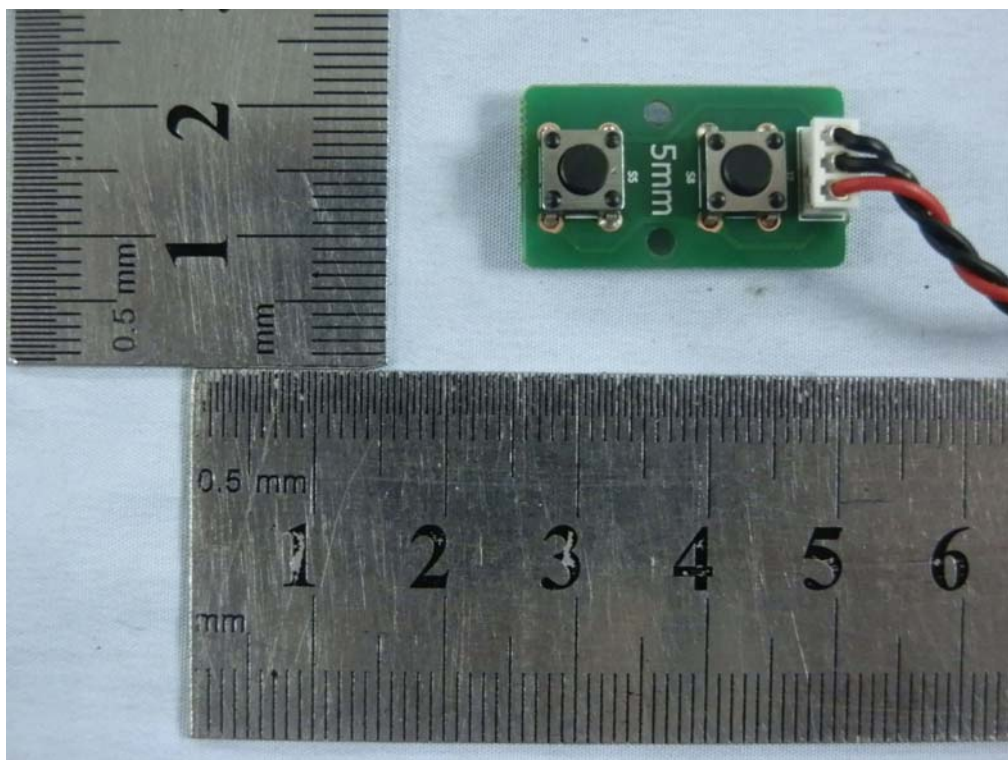
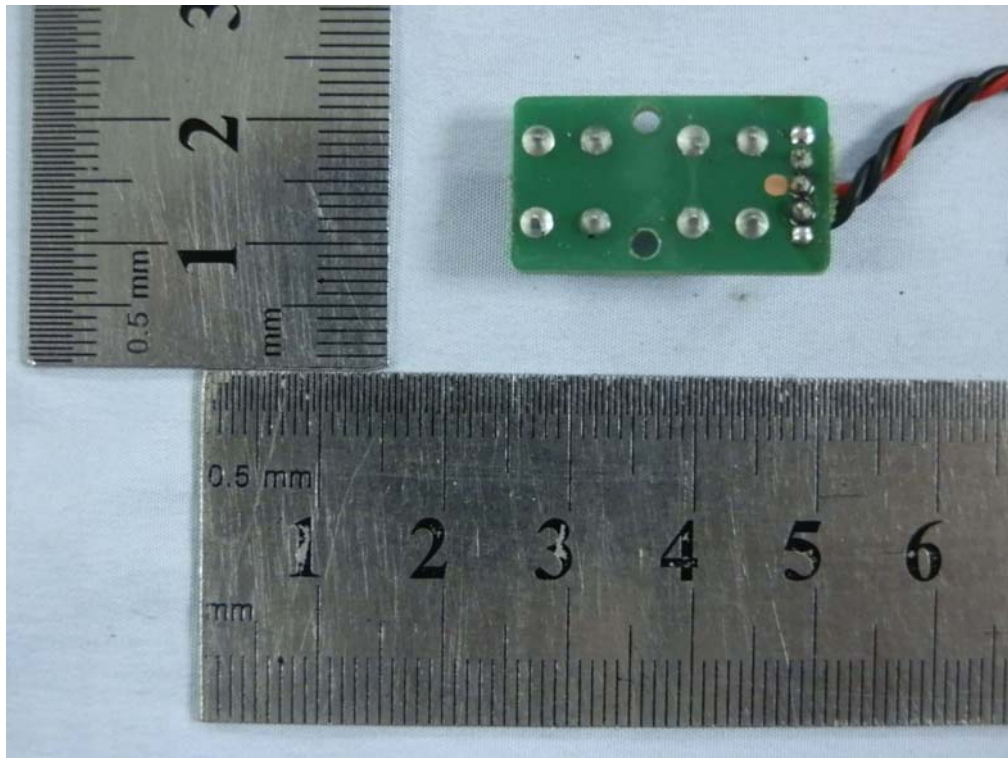


## EUT –PCB View

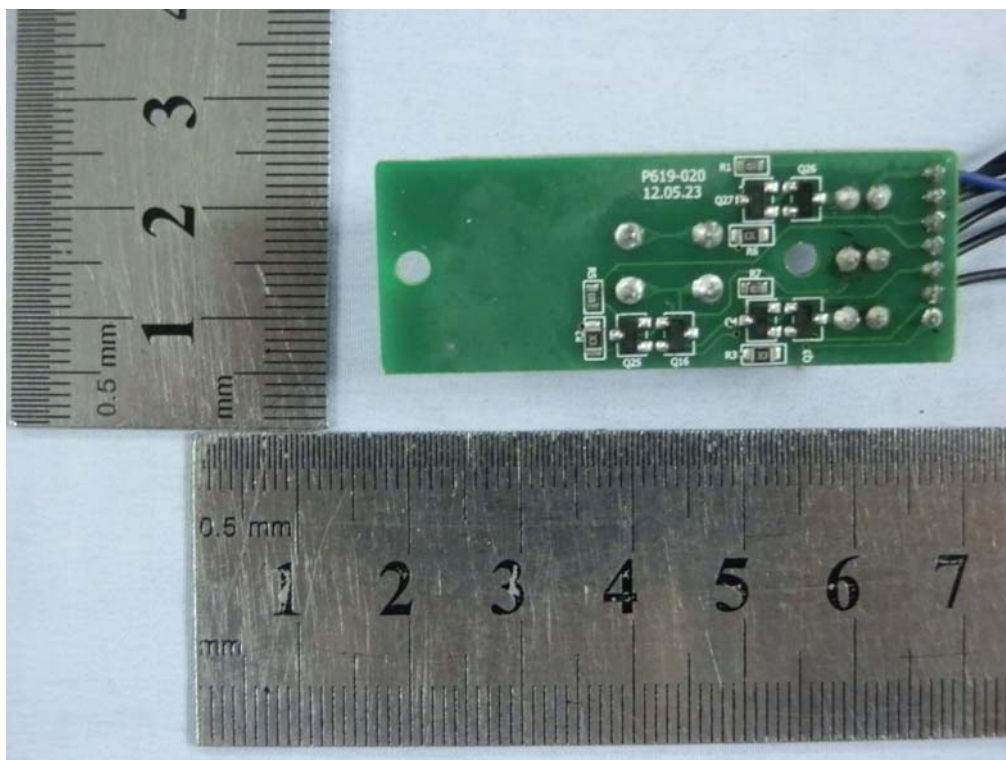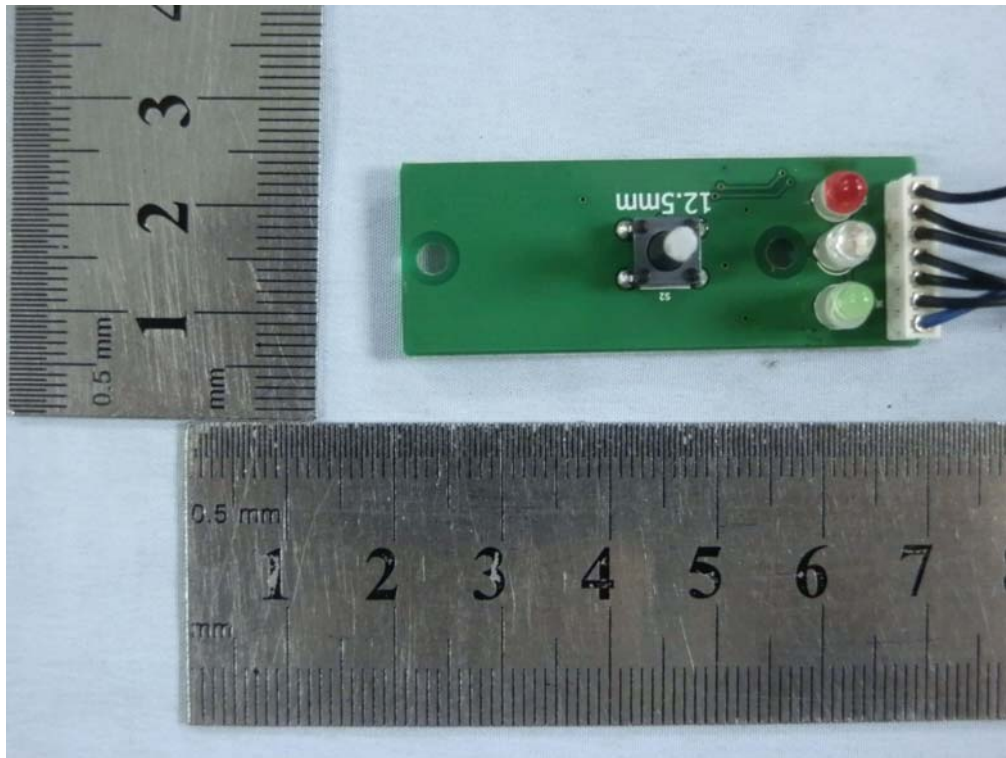




EUT –PCB View

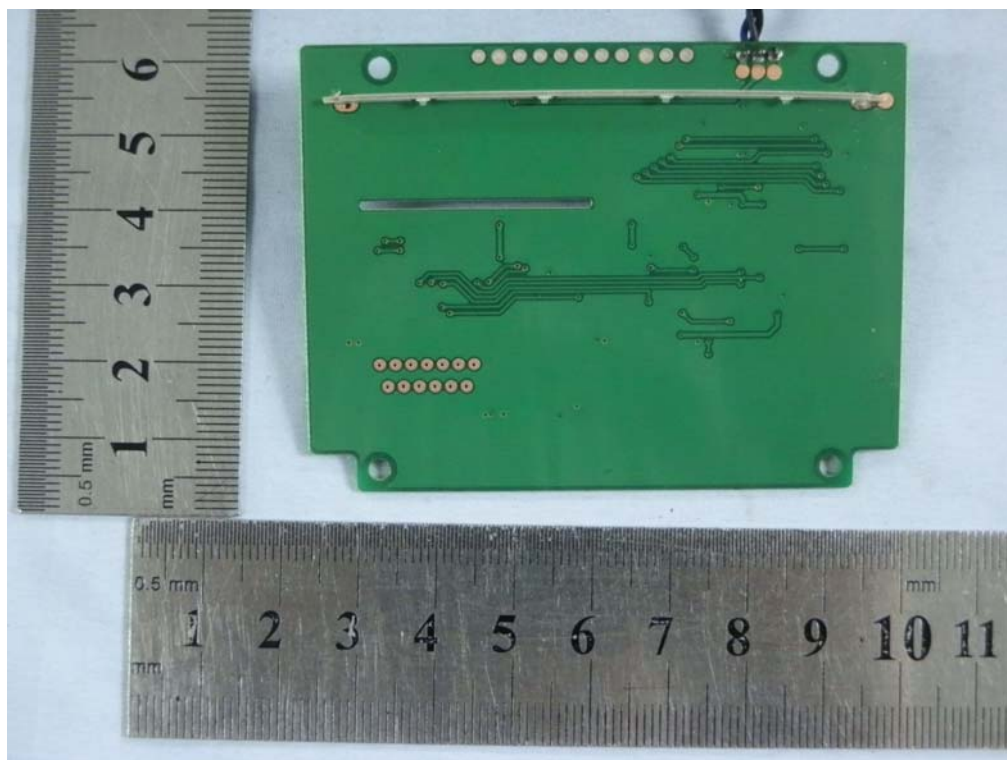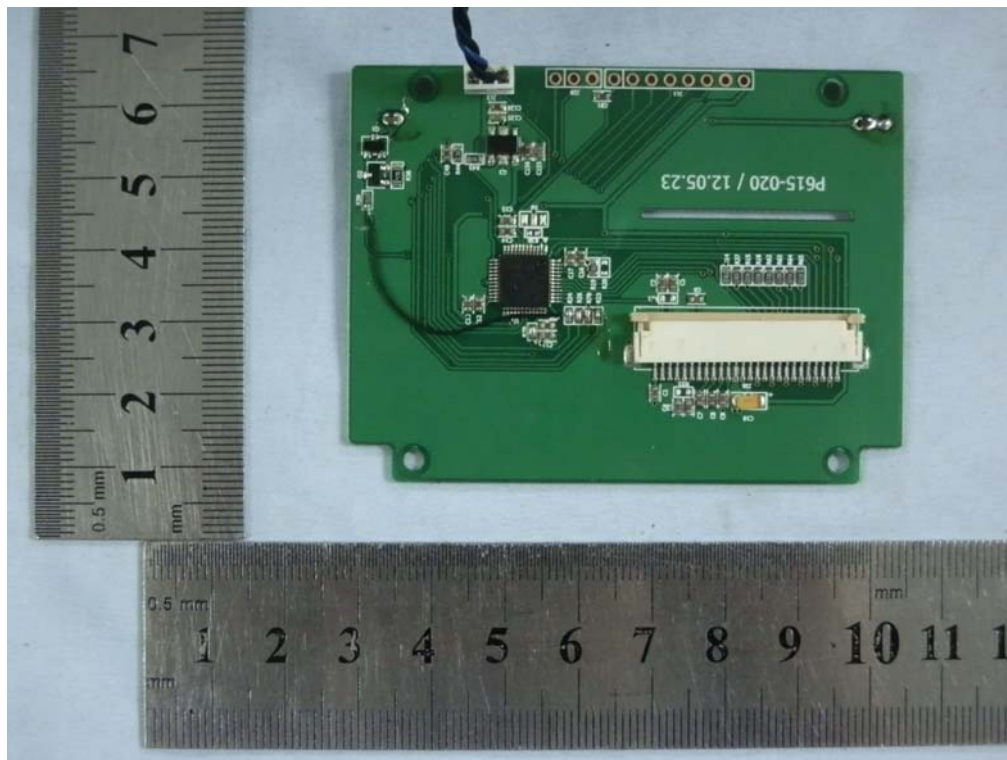

**EUT –PCB View**

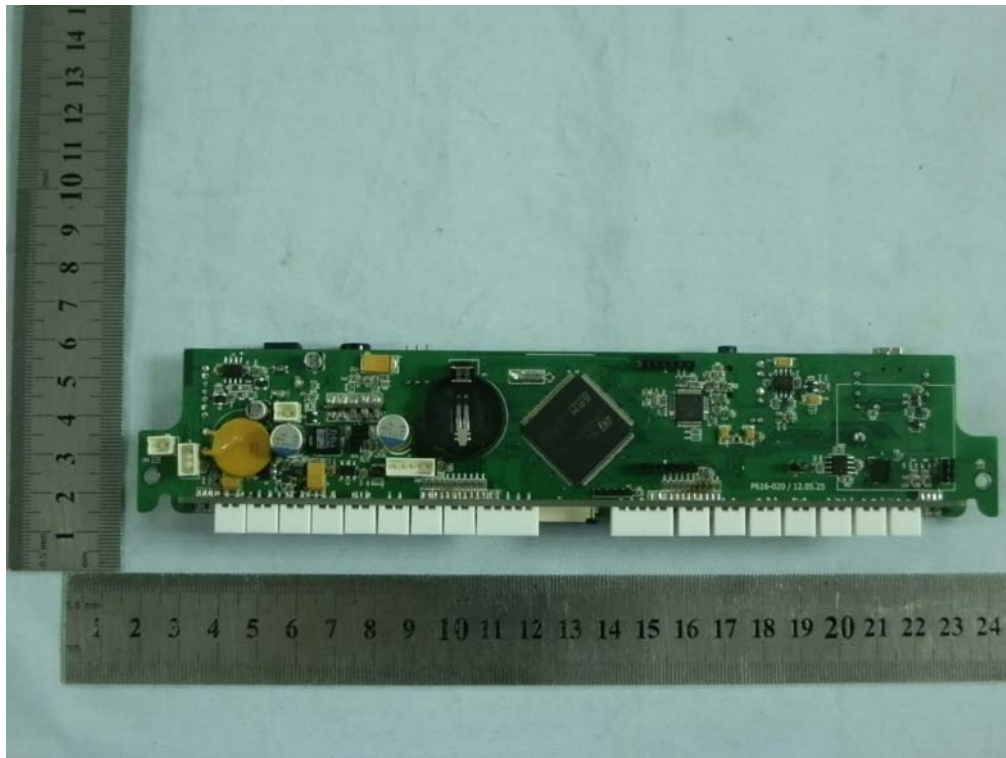

**EUT –LCD View**



## EUT –Transmitter Module View

