

## Adidas Model: G76792 Pictures

External pictures:

Front:



Back:




## Adidas Model: G76792 Pictures

Right:




Left:

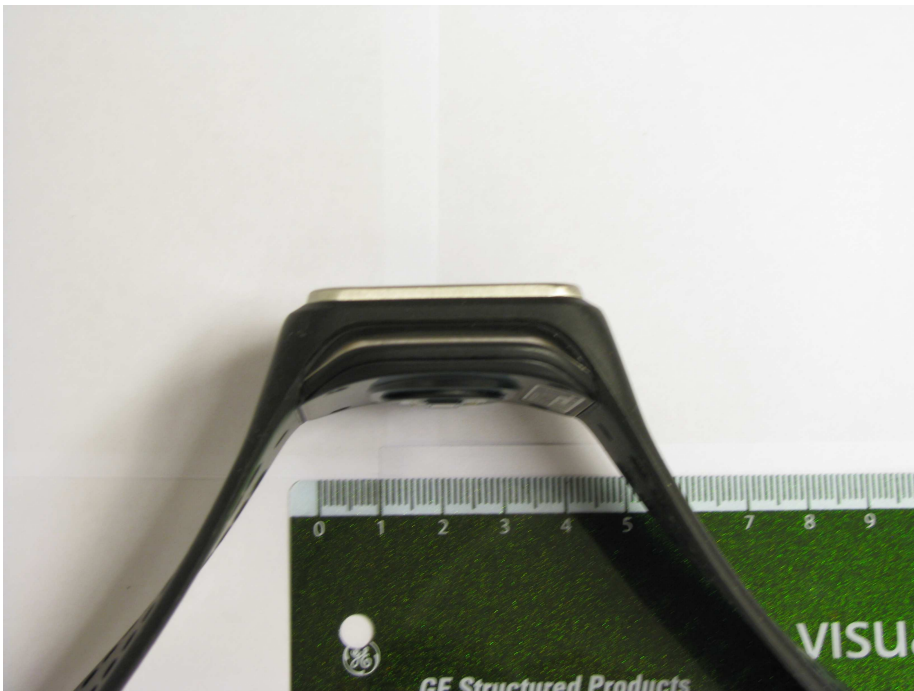


## Adidas Model: G76792 Pictures

Internal pictures:

Back cover opened; back side of main PCB, back side of sensor PCB

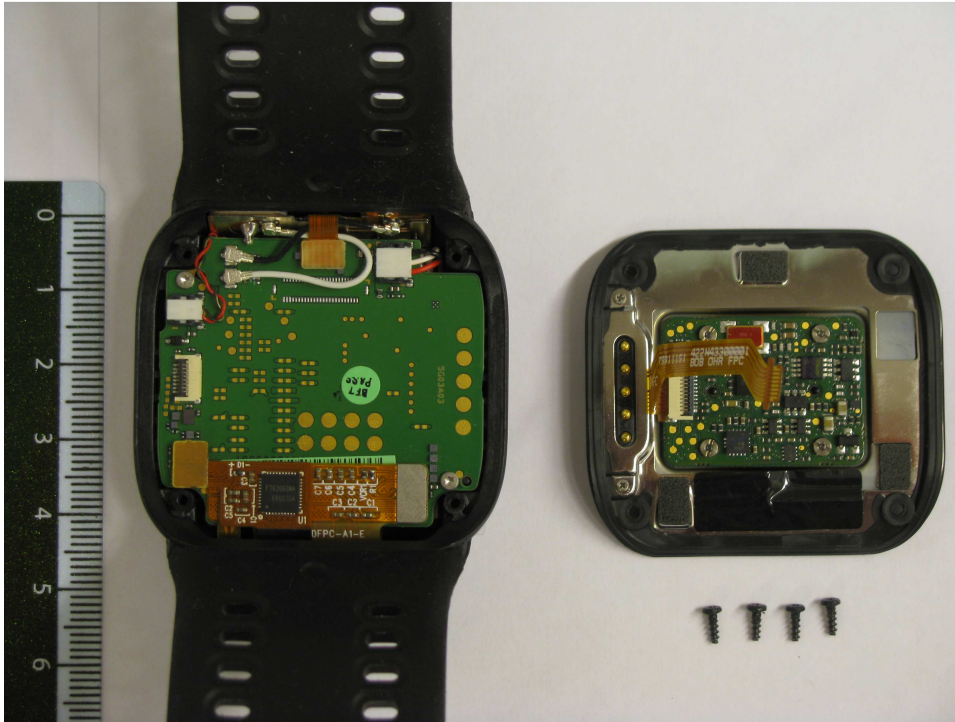

Main PCB front,

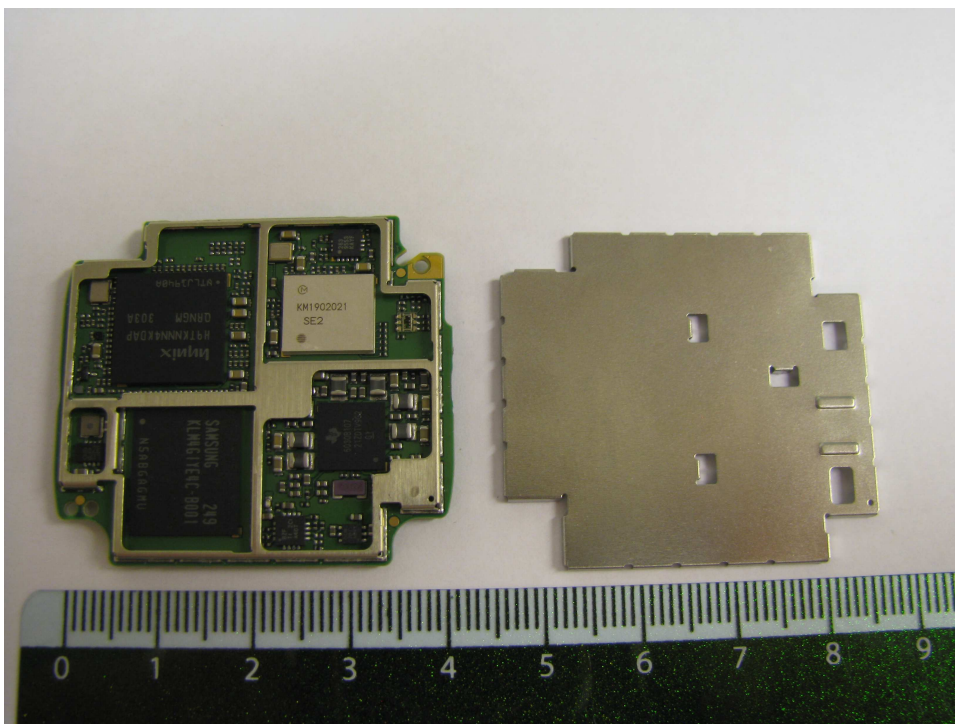




## Adidas Model: G76792 Pictures

Battery under main PCB




Battery removed;

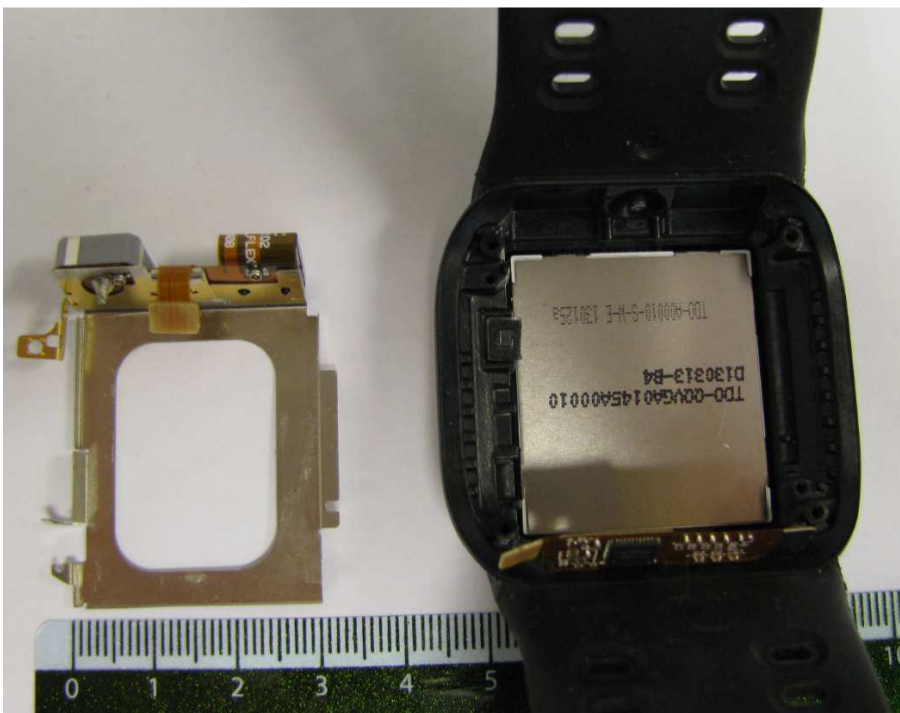


## Adidas Model: G76792 Pictures

Antenna board assembled;

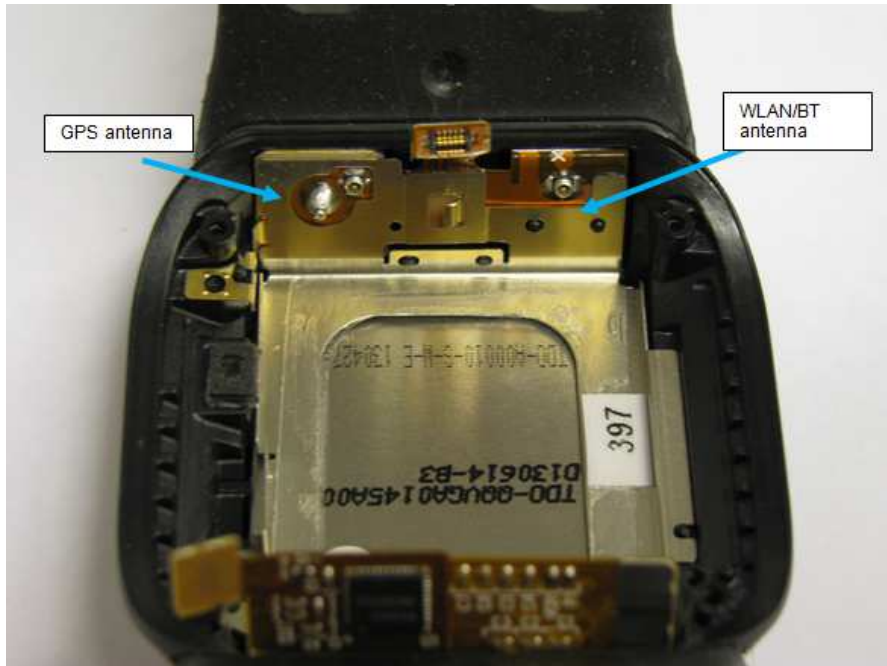


Antenna back;

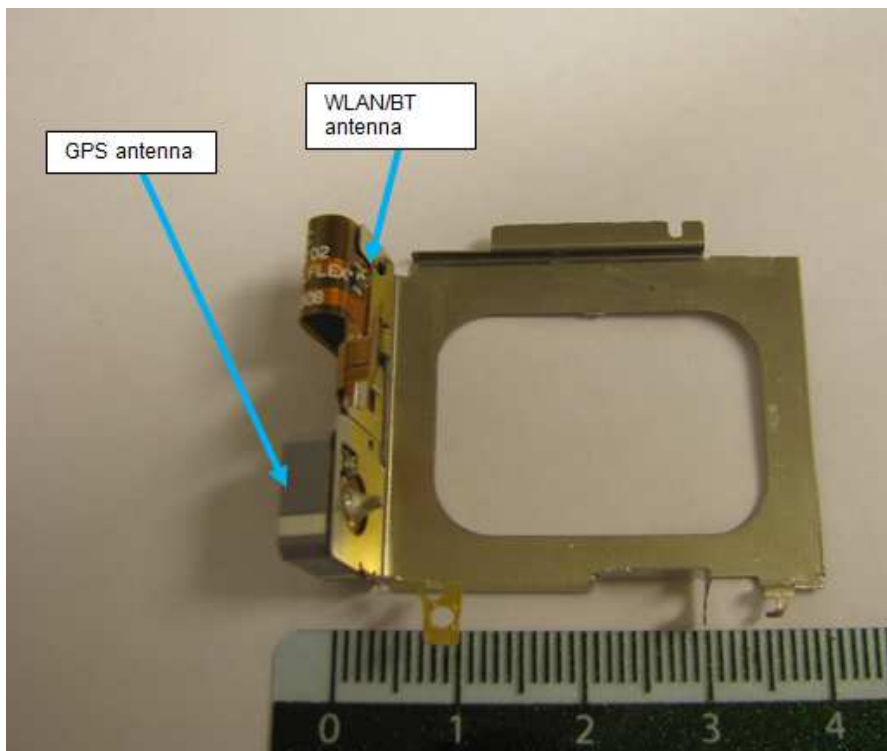


## Adidas Model: G76792 Pictures

Antenna front;

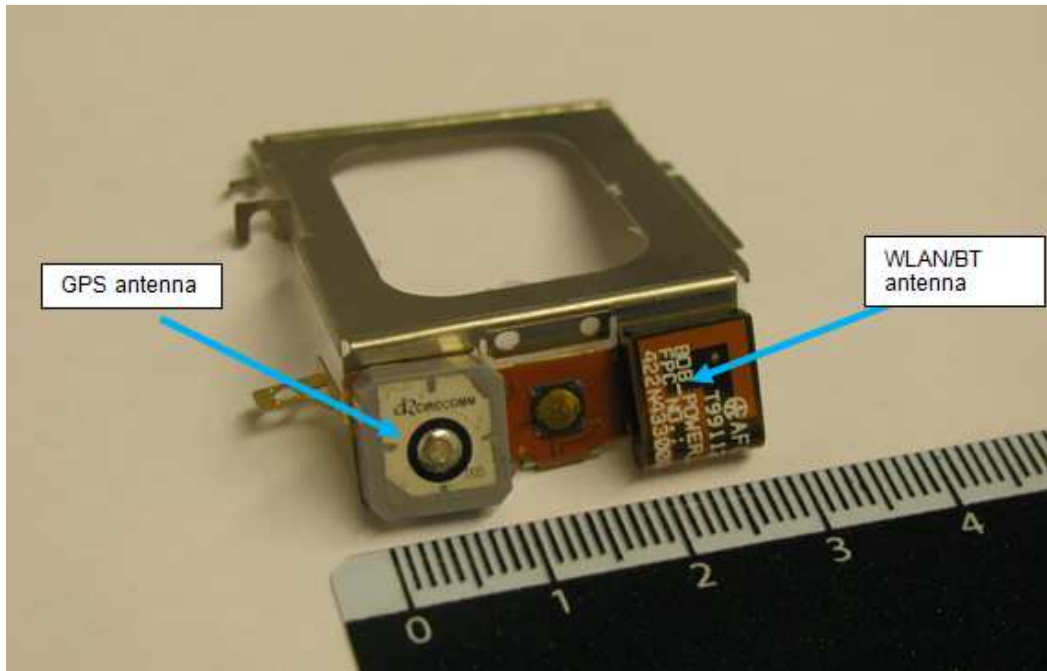


Battery;

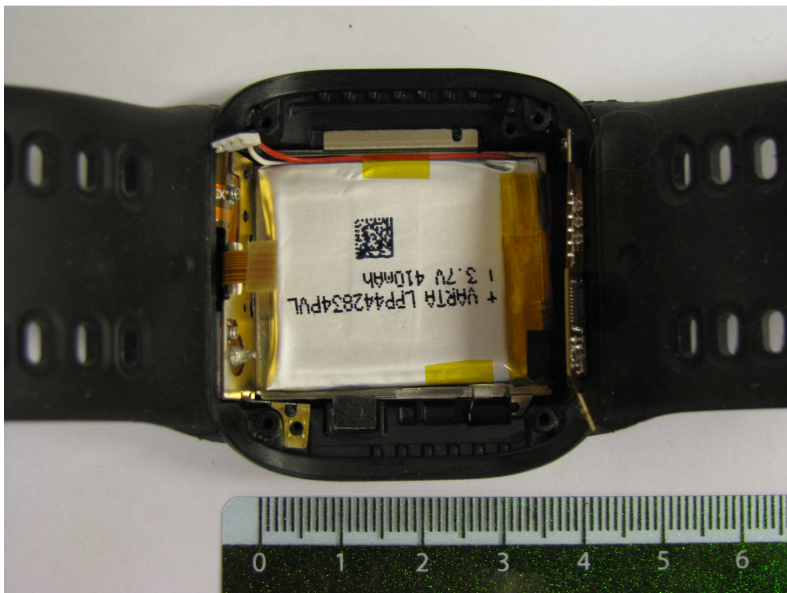


## Adidas Model: G76792 Pictures

Sensor PCB front;

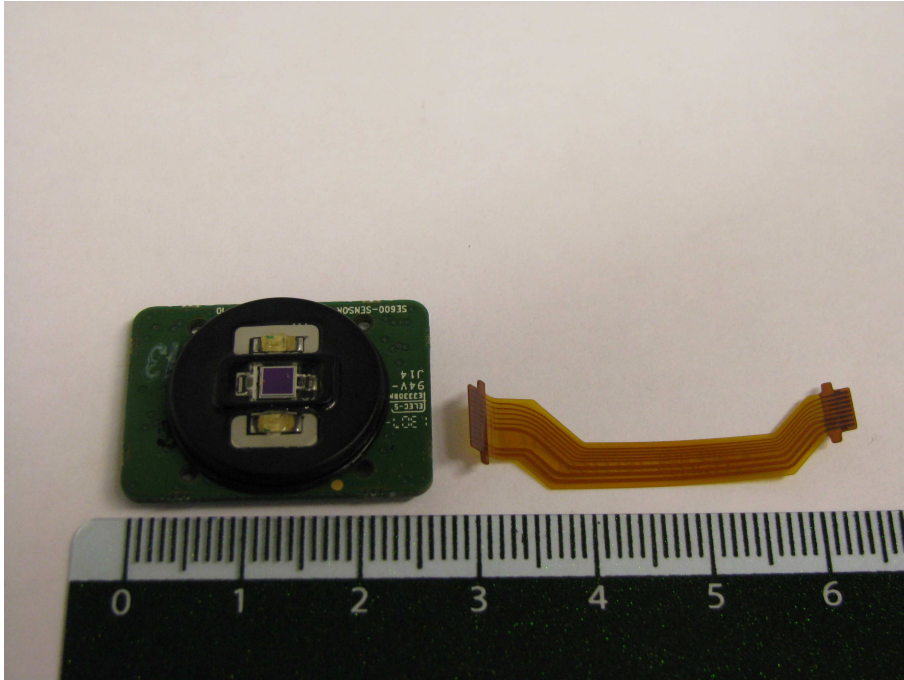


Sensor PCB back;

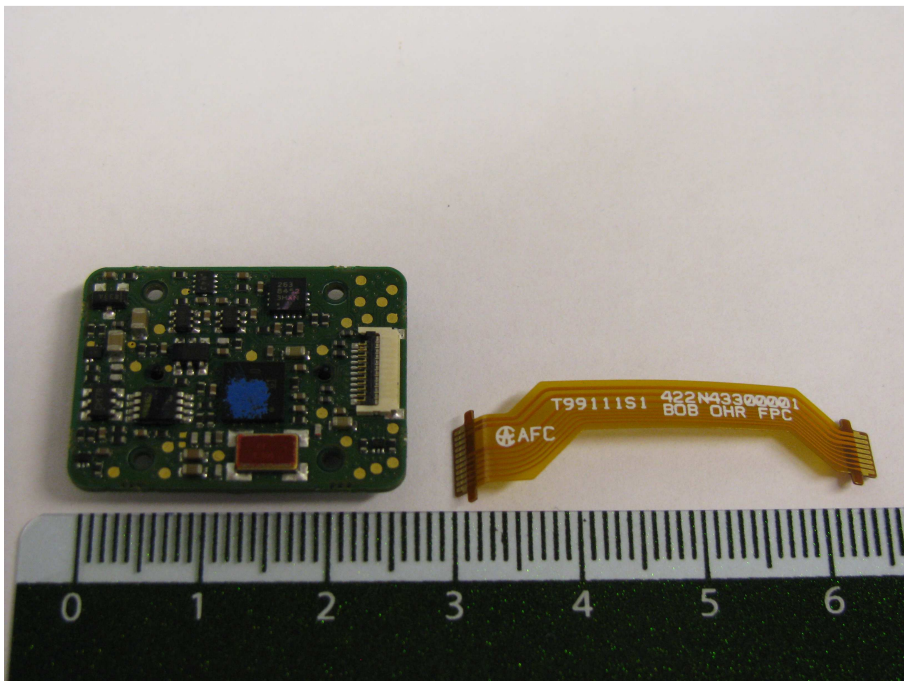



## Adidas Model: G76792 Pictures

Flex cables front;

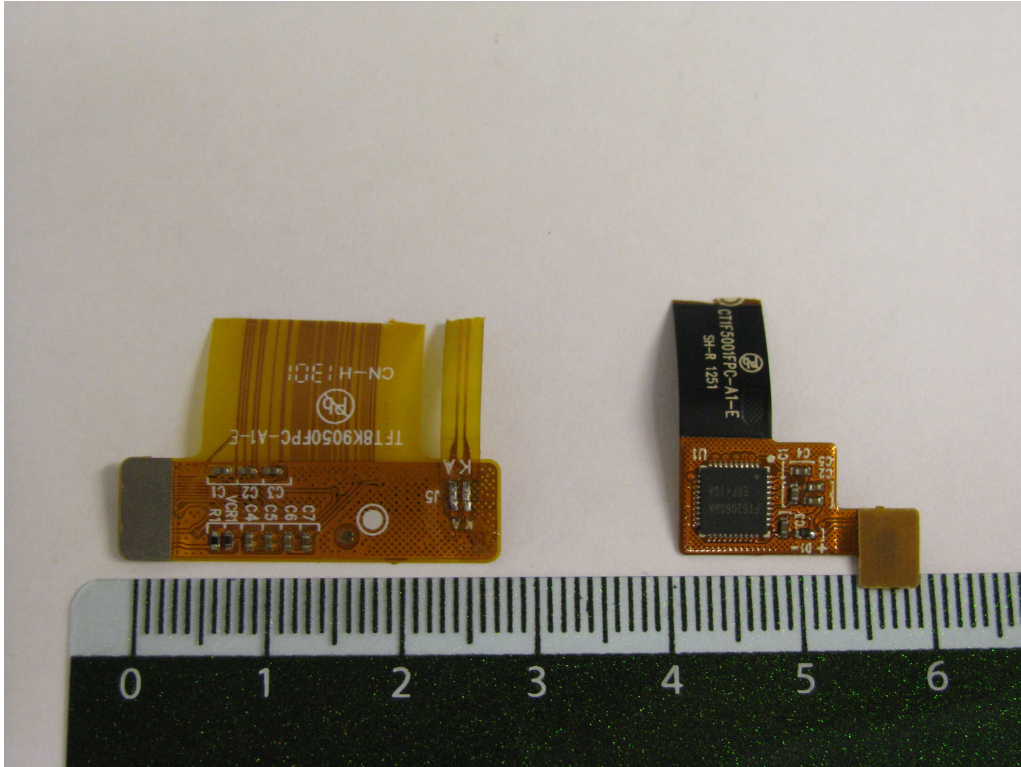

Flex cables back;

