

Android Tablet

Quick Start Guide

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:
- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Information in this document is only for reference and subject to change without notice, please make the object as the standard.

Warning

Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to Tablet or other property.

Carrying and Handling Tablet

Tablet contains sensitive components. Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into Tablet.

Avoid Water and Wet Locations

Do not use Tablet in rain, or near washbasins or other wet locations. Take care not to spill any food or liquid on Tablet.

In case Tablet gets wet, unplug all cables, turn off Tablet before cleaning, and allow it to dry thoroughly before turning it as a microwave oven or hair dryer. A Tablet that has been damaged as a result of exposure to liquids is not serviceable.

Remove the MicroSD card

Note: Before remove the microSD card in/out, you have to mount/unmount it firstly.

How to remove the microSD card:

1. Insert the microSD card into the SD hole.
2. In Settings, choose SD card&phone storage → Mount SD card. After the installation, you can check it in ES File.
3. Taking it out safely: In settings, choose SD card&phone storage → Unmount SD card, then remove the card from the hole.

Charge the battery

Note: The Tablet battery can not charge by USB cable.

Getting Started

Turn on/off Tablet

Turn Tablet on: Press the Power button for once, then wait for several seconds until the Android logo appears.

Turn Tablet off: Press and hold the Power button for a few seconds until options appears.

Sleep/Wake Button

You can lock Tablet when you're not using it.

Lock Tablet: Press the Sleep/Wake button.

Unlock Tablet: Press the Sleep/Wake button, then draw pattern to unlock.

If you don't touch the screen for five seconds or ten, Tablet locks automatically. To change this, you can reset it according to your require.

Language

Set the language for Tablet: In Settings, choose Language&keyboard → Select language, then choose the language you want to use.

Wi-Fi

Turn Wi-Fi on or off: Choose Settings→ Wireless&networks → Wi-Fi settings, then turn Wi-Fi on or off.

Join a Wi-Fi network: Choose Settings→ Wireless&networks → Wi-Fi settings, wait a moment as Tablet detects networks in range, then select a network.

If necessary, enter a password and tap Connect. (Networks that require a password appear with a lock icon.)

2

Once you join a Wi-Fi network, Tablet automatically joins it whenever the network is in range.

When Tablet joins a Wi-Fi network, the Wi-Fi icon in the status bar at the top of the screen shows signal strength. The more bars you see, the stronger the signal.

Set Tablet to ask if notify me when an open network is available: Choose Wi-Fi settings, then turn "Net notification" on or off.

Bluetooth

You can use Tablet with bluetooth for document transmission. Turn Bluetooth on or off: In Settings, choose Wireless&network → Bluetooth, and turn Bluetooth on or off. When Bluetooth is on, you see the Bluetooth icon in the status bar at the top of the screen.

Pairing Bluetooth Devices

You must first pair the device with Tablet before sent files.

Pair a Bluetooth device with Tablet:

1. Turn on Bluetooth of the device and Tablet to make both of them discoverable.
2. Select the device and if prompted, enter the passkey. Then enter the same passkey in the other device.

3

Connect to a PC

Copying music, photo, and video files to the microSD card in your device.

1. Connect the USB cable to your device and your computer. Wait for your computer to recognize the device.
2. Please install software driver manually. Slide to open the status bar, choose USB connected, then turn on USB storage.



3. Once the installation process is complete, a new "Removable Disk" will become available on your computer. This will allow you to view the contents of the microSD card from your computer.
4. Select the music, photo, and/or video files from your computer, then copy them to the Music, Pictures, and Video folders (respectively) on the Removable Disk.


5. Once the copy is complete, turning off USB storage. Then disconnect the USB cable.

4

Overview



SIM slot

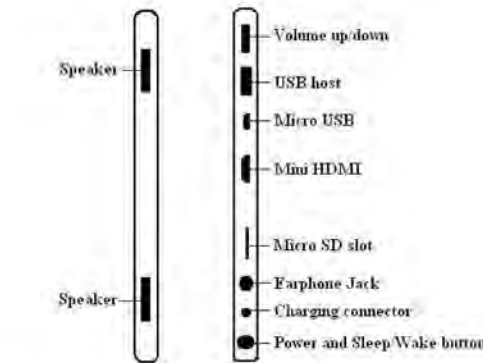

Accessories

- 1× Tablet device 1× Micro USB cable
- 1× AC charger 1× Cleaning cloth 1× Protection Bag

1