

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under

this standard during product certification for use when properly worn on the body is 0.364 W/kg. please avoid using other body-worn accessories containing metallic components to ensure RF exposure compliance.

Diamondking Inc.
3913 schaefer Ave. Chino, CA91710
Toll free : (866) 709-1999



Tablet PC
Model: V700NA



Contents

1 Overview	1
1.1 Appearance and Keys	1
1.2 Basic Operation	1
1.2.1 Switch ON	1
1.2.2 Unlock the Screen	2
1.2.3 Lock the screen	2
1.2.4 Switch OFF	2
1.2.5 Battery charging	2
1.2.6 Switch input methods	3
1.2.7 Use T-Flash card	3
1.2.8 Connected to the computer	4
1.2.9 Browse the file in the device	4
1.2.10 Startup programs	5
1.2.11 Close programs	5
1.2.12 Screen operation	5
1.2.13 Home screen	5
1.2.14 Screen gestures	6
1.2.15 Security setting	6
1.2.16 Display setting	8
1.2.17 Wireless And Network Settings	8
1.3 Technical specifications	9
Warranty	10

Disclaimer

1. Thanks very much for purchasing our MID product! Before using this product, please read the manual carefully.
We will consider that you have read this manual when you use this product.
2. The functions information of this manual is subject to the product itself; we will keep developing new functions. The information in this manual is subject to change without any prior notice.
3. The Company will not be responsible for any loss of personal data and damage caused by incorrect operation of software/Hardware, artificial damages, replacement of batteries or any other accident. To avoid loss of your data, please backup your data to your computer at any time.
4. We can not control any dispute from users misunderstanding or incorrect operation against the manual; the Company will not take any relevant responsibility for any accidental loss potentially occurring in the process of using this manual.
5. Please do not repair it by yourself; otherwise, we will not provide you with after-sale service.
6. Our Company reserves the final explanation right to this manual and other relevant information

Safety notices

- This manual contains important information, in order to avoid accidents, please read this manual carefully before you use this product.
- Please do not let the player fall or rub or compact with hard objects during using, or it may cause surface scratch of the player, battery loose, data loss or damages of other hardware.
 - Never let this product expose to the humid environment or rain as the

- water leaked into may disable it to the extent beyond maintenance.
- You are recommended not to use the headset with large volume continuously, please adjust the volume to the size of appropriate security and control the using time to avoid the damage to your hearing, as excessive volume will cause permanent hearing damage.
 - Please do not cut off the power abruptly during software update and download, or it may cause data loss and system error.
 - Please do not turn on the device where the wireless equipment is forbidden or when the usage of the device will cause interference and danger.
- Please observe any relevant restrictions.
- Please use original accessories and batteries, do not use incompatible products.
 - Please do not use the device in gas station or nearby the fuel and chemicals.
 - Please do not use this product when you are driving or walking in the street, or it may cause an accident.
 - Please do not scrape the screen, it may be damaged and can not be display anything.
 - Never clean the device with any chemicals and detergent, or it will damage the product surface and corrode the spray paint

Packing list


Welcome to purchase this product , when you open the package , acceptance of the following:

Item	Components	Quantity
1	MID Device	1
2	Micro USB Cable	1
3	User Manual	1
4	Adapter	1
5	Service Card	1

Attention: Accessories are subject to the real products and change without notice.

1. Overview

1.1 Appearance and Keys

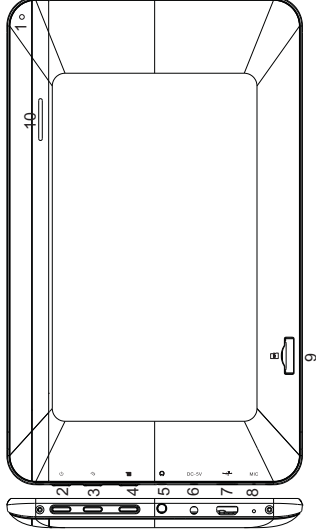

Symbol	Name	Description
1	Front Camera	Built-in 0.3 Megapixel camera
2	Power	Press shortly to enter sleeping/ waking up mode, press long to switch ON/ OFF
3	Return key	Press this key to return the previous interface
4	Menu	Press this key to the home interface
5	Earphone jack	Stereo earphone jack
6	Charger port	Power socket for charging the device
7	Micro USB port	Connect with PC and OTG function
8	MIC	Microphone
9	TF Card	TF Card Slot
10	Speaker	Built-in Speaker


Note: please press and hold the POWER key for 8 seconds to reset the factory default.

1.2 Basic Operation

1.2.1 Switch ON

When the device is in the OFF mode, press and hold POWER key, then you can enter to the system desktop.

1.2.2 Unlock the screen
Please press and drag the  icon to the , then the LCD will unlocked automatically.

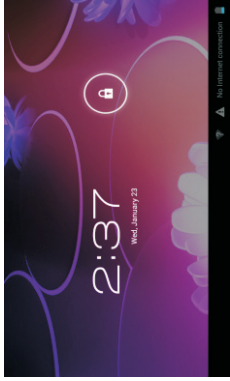

1.2.3 Lock the screen

When the device is in the ON mode, press the POWER key shortly, the system will lock the screen and enter the save power mode. Then the screen is OFF but the system will still operation.


1.2.4 Switch OFF

When the device is in the ON mode, press and hold the POWER key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically.

1.2.5 Battery charging

Insert the micro port of the battery adaptor into 120V AC slot on the device, and connect the other side with the power socket. Then, you can charge the device.

[Note] This device is not recommended to use USB interface to charge, please must use the special power adapter for charging. You should charge the battery for at least 8-12 hours to make sure the battery is fully charged at the first time. On charge the Power


indicating lamp of the device is in high light blue color, the desktop icon of the battery  keep rolling which shows it is connected to the device.

1.2.6 Switch input methods

The device support handwriting, number, letter, pinyin etc. switching follow:

Click any text input area of the working program interface, it will popping input keyboard interface, as shown below:



Press , then it will popping Input Method switch interface. Select the input method you want here.

[Noted] After newly install input method, you should Settings>Language & input>KEYBOARD & INPUT METHODS, then you can use.

1.2.7 Use T-Flash card

- Insert T-FLASH card

Insert the T-Flash card into the slot in direction of the devices bottom shell until you hear a sound of click.

- Browse files in the memory card

In this MID device , you can view and use the needed files in catalogue of MENU>File manager> SD Card.

- Remove T-Flash card

Close all open files from the T-Flash, then enter into MENU>SETTINGS>TF card and & device storage, click Unmount SD card ,System will prompt that TF card was removed safely. Tap with your fingertips to the pop-up T-Flash Card

[Note]

1. Do not insert the T-F card by force, this card can only be applied in one direction.
2. Do not remove the TF card before Unmounted it, or the card may be damaged.