

LOGOTYPE LIGHTS - ADJUSTMENT/TEST

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to do the test of the Logotype Lights.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
33-46-00-700-801-A	LOGOTYPE LIGHTS - OPERATIONAL TEST	ALL

TASK 33-46-00-700-801-A

EFFECTIVITY: ALL

2. LOGOTYPE LIGHTS - OPERATIONAL TEST

A. General

This task gives the procedures to do the Operational Test of the Logotype Lights.

B. References

REFERENCE	DESIGNATION
AMM SDS 33-46-00/1	
AMM TASK 20-40-01-860-801-A/200	ENERGIZATION OF THE AIRCRAFT WITH AN EXTERNAL POWER SOURCE

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

I. Preparation

SUBTASK 841-002-A

- (1) Energize the aircraft with the External DC Power Supply ([AMM TASK 20-40-01-860-801-A/200](#)).
- (2) Make sure that the Circuit Breaker below is closed:
 - LOGO LIGHT ([AMM SDS 33-46-00/1](#)).

J. Operationally Test Logotype Lights ([Figure 501](#))

SUBTASK 710-002-A

- (1) Do the test of the Logotype Lights as follows:
 - (a) Set the LOGO light switch, on the overhead panel, to the ON position.
Result:
 - 1 The left logotype light, on the left stabilizer spar II, comes on.

- 2 The right logotype light, on the right stabilizer spar II, comes on.
- (b) Set the LOGO light switch to the OFF position.
Result:
 - 1 The left logotype light goes off.
 - 2 The right logotype light goes off.

K. Follow-on




SUBTASK 842-002-A

- (1) Deenergize the aircraft ([AMM TASK 20-40-01-860-801-A/200](#)).

EFFECTIVITY: ALL

Logotype Lights

Figure 501

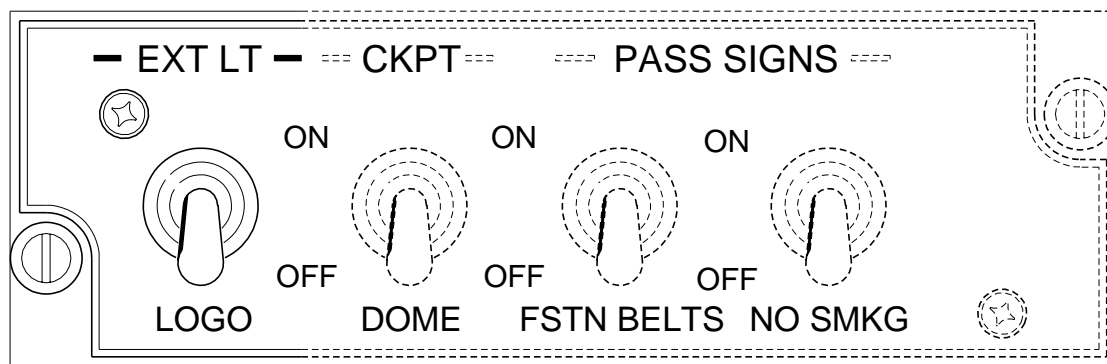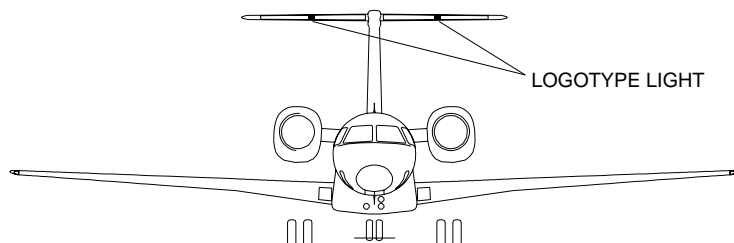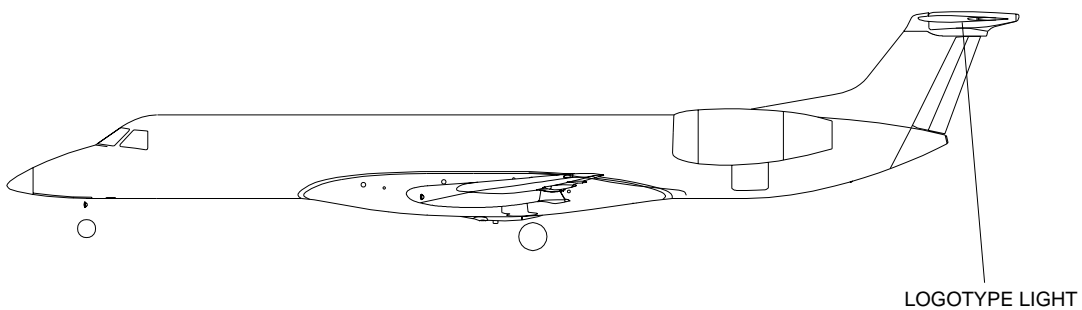

145AMM330042.MCE A