
NOSE WHEEL STEERING INDICATION PLATES - COMPONENT LOCATION

EFFECTIVITY: ALL

1. General

- A. This section gives the location of the nose wheel steering indication marking and scale plates ([Figure 101](#)).

NOSE WHEEL STEERING INDICATION PLATES - COMPONENT LOCATION


EFFECTIVITY: ALL

2. When the old reference markings are illegible or damaged or the plates are lost, replace the plate(s).
Refer to [AMM MPP 32-50-10/400](#).

EFFECTIVITY: ALL

Nose Wheel Steering Indication Marking/Scale Plates - Inspection

Figure 101

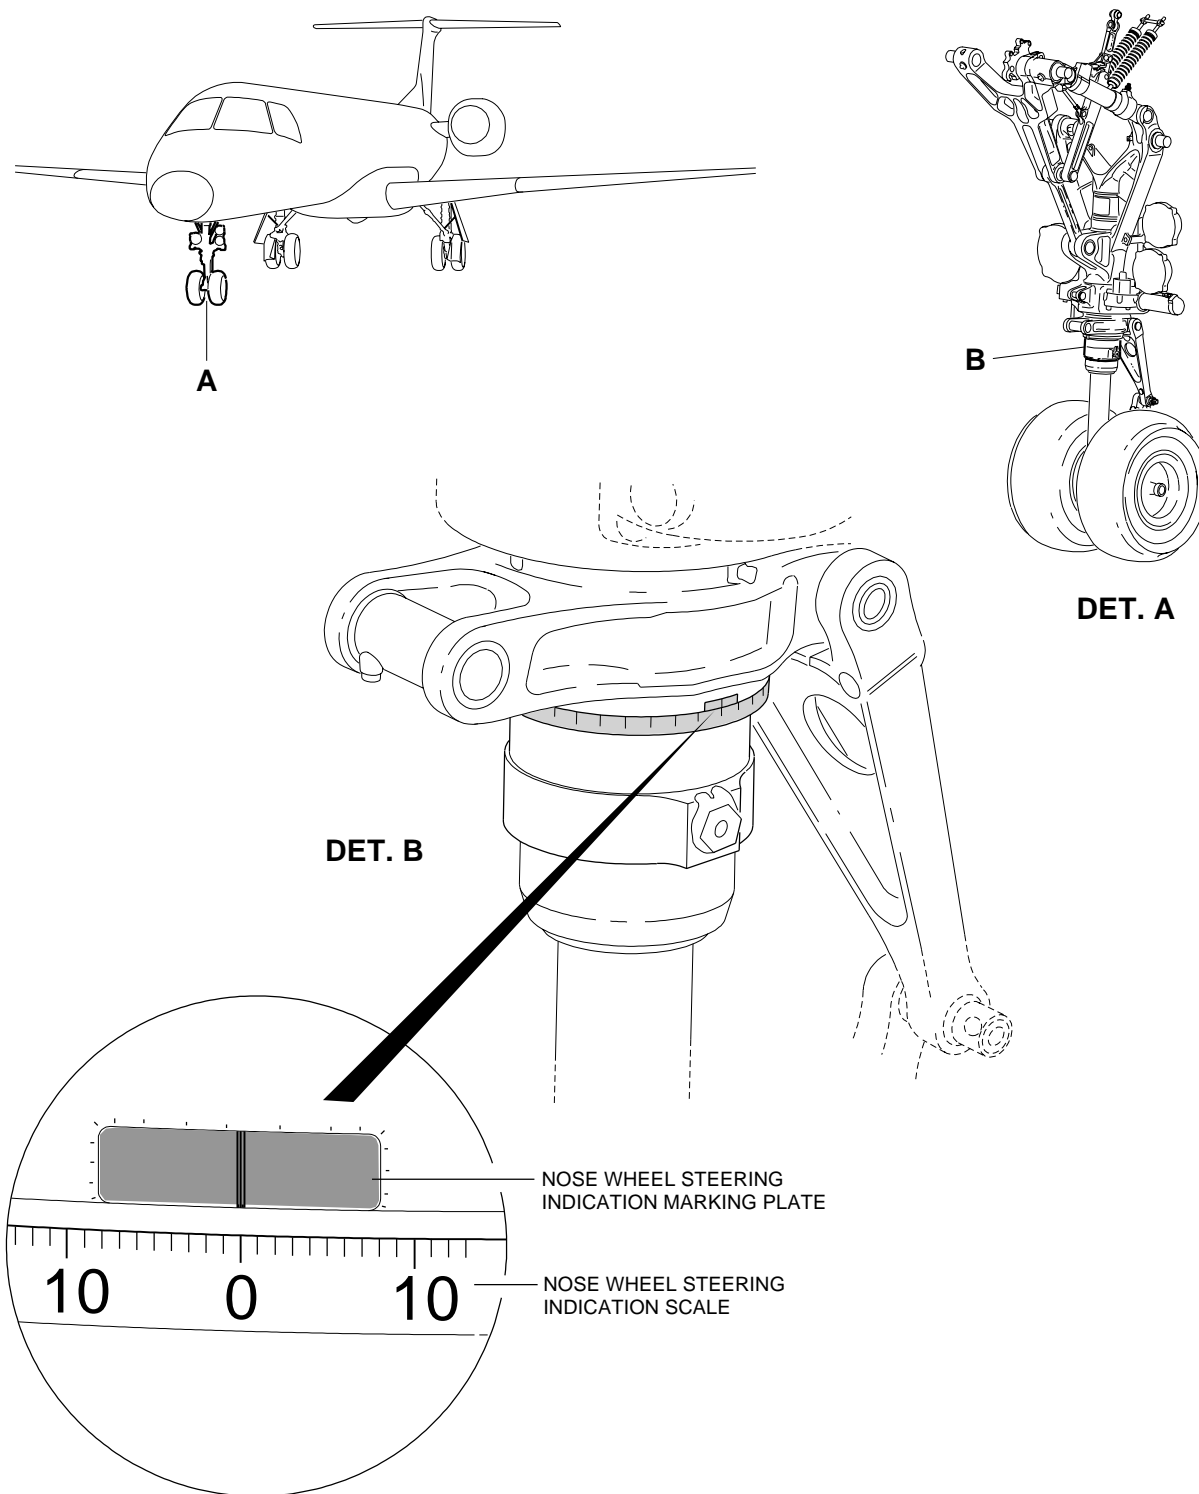

EM145AMM110001A.DGN

