

## BAGGAGE DOOR - INTERNAL - INSPECTION/CHECK

*EFFECTIVITY: ALL*

### 1. General

- A. This section gives the procedures to do the visual inspection of the baggage door for general condition.
- B. Related Zone: 813.
- C. (Applicable to EMB-145 (ALL) models) Zone Boundaries: STA X = 22010.2 thru STA X = 23070.2.  
(Applicable to EMB-135 (ALL) models) Zone Boundaries: STA X = 18465.2 thru STA X = 19525.2.
- D. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
05-30-08-200-801-A ♦	BAGGAGE DOOR - INTERNAL GENERAL VISUAL INSPECTION	ALL

TASK 05-30-08-200-801-A

EFFECTIVITY: ALL

## 2. BAGGAGE DOOR - INTERNAL GENERAL VISUAL INSPECTION

### A. General

- (1) This task gives instructions to do SMRD Zonal Task 52-Z813-214-001-A00.
- (2) You must do the internal general visual inspection (GVI) of baggage door, at zone 813, within a touching distance of the items examined.
- (3) The function of the external visual inspection (GVI) is to find damage, failure, or irregular conditions that can be easily seen.

### B. References

REFERENCE	DESIGNATION
<a href="#">AMM TASK 25-51-02-000-801-A/400</a>	BAGGAGE DOOR LINING - REMOVAL
<a href="#">AMM TASK 25-51-02-400-801-A/400</a>	BAGGAGE DOOR LINING - INSTALLATION

### C. Zones and Accesses

Not Applicable

### D. Tools and Equipment

ITEM	DESCRIPTION	PURPOSE	QTY
Standard	Ladder	To get access to the inspection area	

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Baggage door

### I. Preparation

#### SUBTASK 841-002-A

- (1) Put the ladder in position.
- (2) Open the baggage door.
- (3) Remove the baggage door lining ( [AMM TASK 25-51-02-000-801-A/400](#) ).

J. Internal General Visual Inspection ([Figure 601](#))

*SUBTASK 212-002-A*

- (1) Examine the baggage door actuating and locking mechanism ([Figure 601](#)).
- (2) Examine the upper and lower bellcrank springs ([Figure 601](#)).
- (3) Examine the cables for condition ([Figure 602](#)).
- (4) Examine the bellcrank rollers ([Figure 602](#)).
- (5) Examine the presence of any foreign objects.

K. Follow-on


*SUBTASK 842-002-A*

- (1) Install the baggage door lining ( [AMM TASK 25-51-02-400-801-A/400](#)).
- (2) Remove the ladder.

**EFFECTIVITY: ALL**

Baggage Door - Internal General Visual Inspection

Figure 601

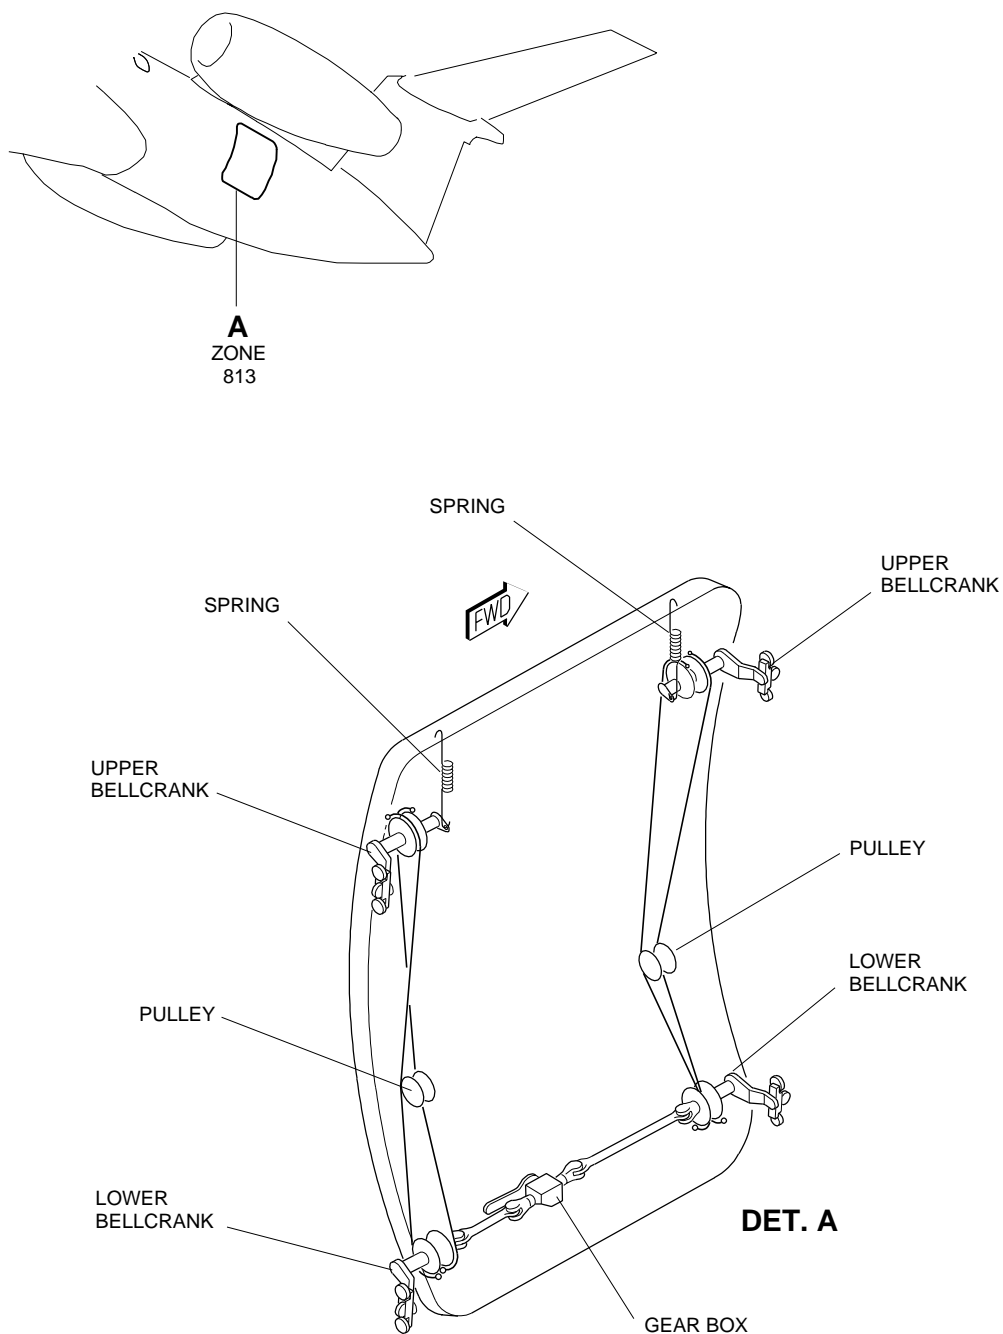

145AMM050060.MCE A

EFFECTIVITY: ALL

Baggage Door Bellcrank Rollers - Internal General Visual Inspection

Figure 602

