

**EWIS COMPONENTS IN THE CENTER FUSELAGE IV UPPER SIDE SURROUNDING ELT UNIT -  
CLEANING/PAINTING**

*EFFECTIVITY: ALL*

1. General

- A. This section gives the procedures to clean the EWIS components at Center Fuselage IV, upper side, surrounding ELT unit.
- B. Zones: 262/264.
- C. Zone Boundaries ( [AMM MPP 06-41-00/100](#) [AMM MPP 06-41-00/100](#)).
- D. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
<a href="#">05-40-03-100-801-A</a> ♦	EWIS COMPONENTS IN THE CENTER FUSELAGE IV (UPPER SIDE - SURROUNDING ELT UNIT) - CLEANING	ALL

TASK 05-40-03-100-801-A

EFFECTIVITY: ALL

## 2. EWIS COMPONENTS IN THE CENTER FUSELAGE IV (UPPER SIDE - SURROUNDING ELT UNIT) - CLEANING

### A. General

- (1) This procedure obeys the EWIS ICA requirement.
- (2) This task gives the instructions to do SMRD Task Number: 20-00-00-140-004-A00.
- (3) You must clean the EWIS components of center fuselage IV, surrounding ELT unit, at zones 262/264, between frame 58 and frame 60.
- (4) Do not unlace or displace the electrical wiring and components during the cleaning procedure.
- (5) Do not disconnect the electrical connectors during cleaning procedures. If contamination is found, clean only the exposed areas.
- (6) Refer to the preparation subtask for access panel information.

### B. References

REFERENCE	DESIGNATION
AMM TASK 25-40-01-000-801-A/400	-
AMM TASK 25-40-01-000-802-A/400	-
AMM TASK 25-81-01-000-801-A/400	-
AMM TASK 25-81-01-000-802-A/400	-
AMM TASK 25-81-01-000-803-A/400	-
AMM TASK 25-81-01-400-801-A/400	-
AMM TASK 25-81-01-400-802-A/400	-
AMM TASK 25-81-01-400-803-A/400	-
WM 20-21-00	-

### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
262		Passenger cabin - RH
264		Passenger cabin ceiling - RH

### D. Tools and Equipment

ITEM	DESCRIPTION	PURPOSE	QTY
Standard	Vacuum cleaner	To clean the area	

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Cloth, Lint-Free	To clean the area	AR

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Center fuselage IV - upper side

I. Preparation

**SUBTASK 841-002-A**

- (1) Remove the lavatory (AMM TASK 25-40-01-000-801-A/400 or AMM TASK 25-40-01-000-802-A/400, as applicable).
- (2) Remove the thermoacoustic insulation from center fuselage IV, at zones 262/264, between frame 58 and frame 60 (AMM TASK 25-81-01-000-801-A/400, AMM TASK 25-81-01-000-802-A/400 or AMM TASK 25-81-01-000-803-A/400, as applicable).

J. EWIS Components in the Center Fuselage IV (Upper Side - Surrounding ELT Unit) - Cleaning ([Figure 701](#))

**SUBTASK 160-002-A**

- (1) The cleaning procedure of this task is applicable to specified components or assemblies of an area/zone.
- (2) Do the cleaning procedure as follows:
  - (a) Use a vacuum cleaner and/or clean and dry cloth to remove the particles from the Center Fuselage IV, upper side, surrounding ELT unit.
  - (b) If contamination is found, clean the EWIS components, surrounding ELT unit. Refer to WM 20-21-00, Section Cleaning Procedures.

K. Follow-on


**SUBTASK 842-002-A**

- (1) Install the thermoacoustic insulation to zones 262/264, between frame 58 and frame 60 (AMM TASK 25-81-01-400-801-A/400, AMM TASK 25-81-01-400-802-A/400 or AMM TASK 25-81-01-400-803-A/400), as applicable.
- (2) Install the lavatory (AMM TASK 25-40-01-000-801-A/400 or AMM TASK 25-40-01-000-802-A/400, as applicable).

EFFECTIVITY: ALL

EWIS Components in the Center Fuselage IV (Upper Side - Surrounding ELT Unit) - Cleaning

Figure 701

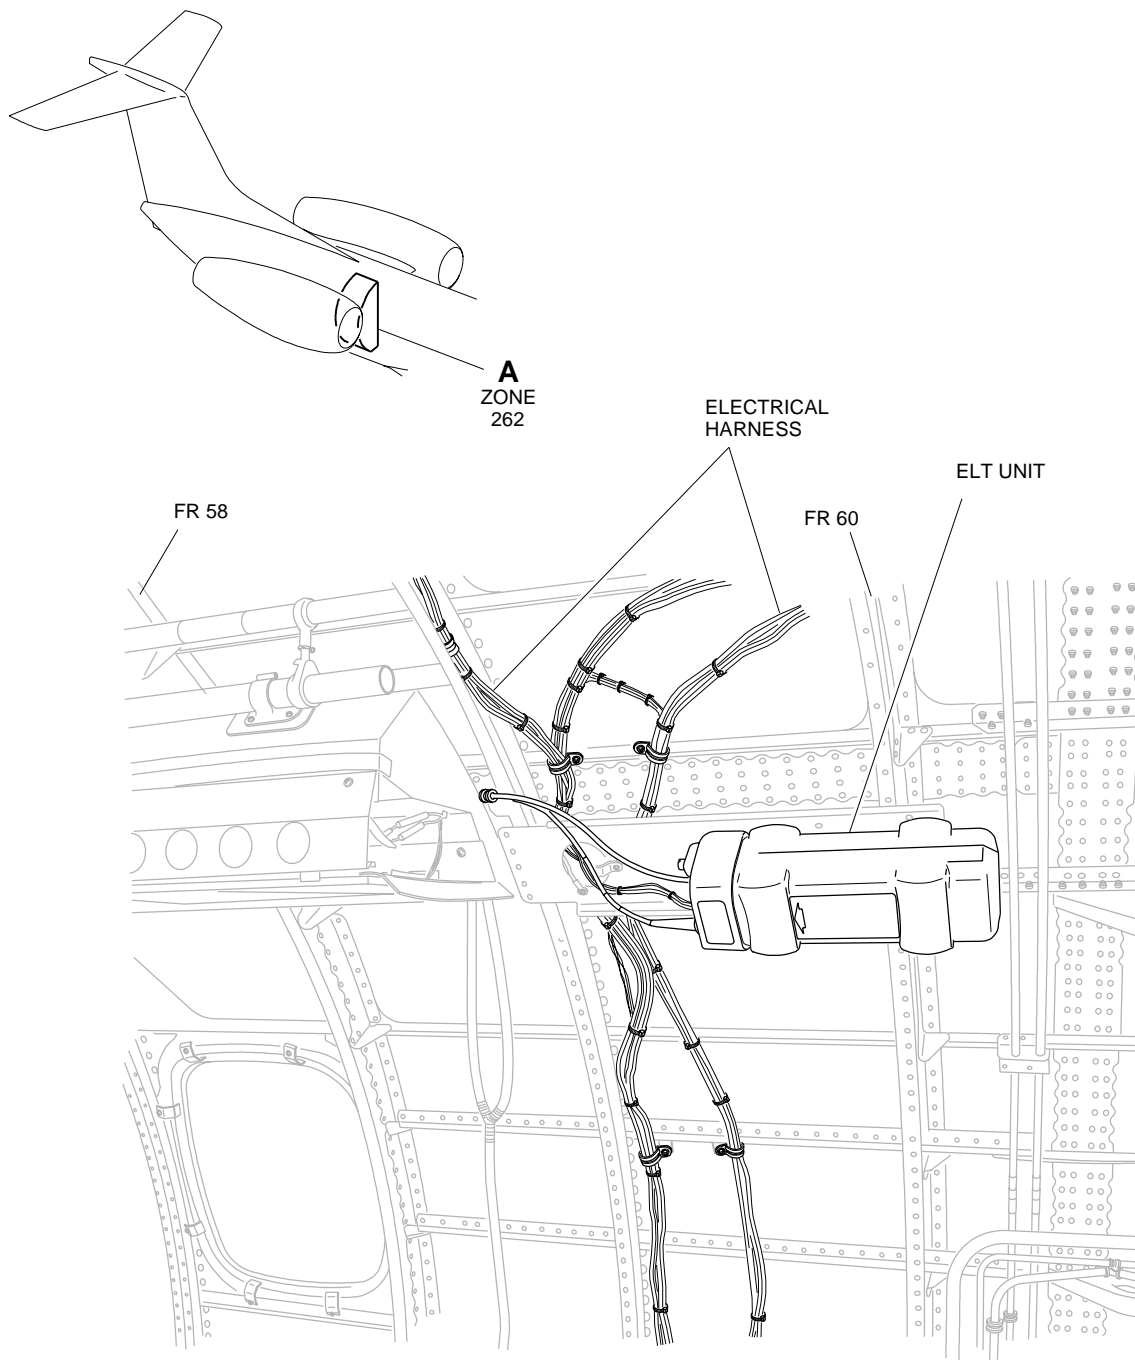

DET. A

EM145AMM050736A.DGN