

RH WARDROBE - REMOVAL/INSTALLATION

EFFECTIVITY: AIRCRAFT WITH RH WARDROBE

1. General

- A. This section gives the procedures to remove/install the RH wardrobe assembly.
- B. The RH wardrobe is installed in the passenger cabin, at zone 232.
- C. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-26-02-000-801-A	RH WARDROBE - REMOVAL	AIRCRAFT WITH RH WARDROBE
25-26-02-400-801-A	RH WARDROBE - INSTALLATION	AIRCRAFT WITH RH WARDROBE

TASK 25-26-02-000-801-A

EFFECTIVITY: AIRCRAFT WITH RH WARDROBE

2. RH WARDROBE - REMOVAL

A. General

(1) This task gives the procedures to remove the RH wardrobe assembly.

B. References

REFERENCE	DESIGNATION
AMM TASK 25-22-04-000-801-A/400	-
AMM TASK 25-22-04-000-802-A/400	-
AMM TASK 25-30-01-000-801-A/400	-
AMM TASK 25-30-01-000-802-A/400	-
AMM TASK 25-30-01-000-803-A/400	-
AMM TASK 25-30-01-000-804-A/400	-

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin
1	Helps the other technician	Passenger cabin

I. Preparation

SUBTASK 841-009-A

- (1) Make sure that the aircraft is safe for maintenance.
- (2) Empty the RH wardrobe.
- (3) Remove the forward galley assembly (AMM TASK 25-30-01-000-801-A/400), (AMM TASK 25-30-01-000-802-A/400), (AMM TASK 25-30-01-000-803-A/400) or (AMM TASK 25-30-01-000-804-A/400), as applicable.

- (4) Remove the main-door region ceiling panel (AMM TASK 25-22-04-000-801-A/400) or (AMM TASK 25-22-04-000-802-A/400), as applicable.
- (5) Remove the emergency equipment from the RH wardrobe.
- (6) Remove the sealant from the interface of the RH wardrobe bottom edge with the aisle floor.

J. RH Wardrobe with center-parting door - Removal ([Figure 401](#))

SUBTASK 020-010-B

EFFECTIVITY: RH WARDROBE WITH CENTER-PARTING DOOR

- (1) Open the miscellaneous door (2). Refer to DET. A.
- (2) Remove the screw (7) and washer (8). Refer to DET. B.
- (3) Remove the screws (4) and washers (3). Refer to DET. A.
- (4) Close the miscellaneous door (2).
- (5) Open the door (9).
- (6) Remove the screws (5) and washers (6). Refer to DET. C.
- (7) Close the door (9). Refer to DET. A.
- (8) Remove the RH wardrobe (1).

K. RH Wardrobe with RH-opening foldable door - Removal ([Figure 402](#))

SUBTASK 020-011-A

EFFECTIVITY: RH WARDROBE WITH RH-OPENING FOLDABLE DOOR


- (1) Remove the sealant from the interface of the RH wardrobe (3) bottom edge with the floor.
- (2) Open the door (7) of the RH wardrobe (3).
- (3) Remove the floor fitting covers (14) that is attached with the screws (15). Refer to DET. C.
- (4) Remove the bolts (13) and washers (12) that attach the RH wardrobe (3) to the floor.
- (5) Remove the access panel (6) that is attached with the screws (5). Refer to DET. A.
- (6) Remove the bolts (11) and washers (10) that attach the RH wardrobe (3).
- (7) Close the door (7) of the RH wardrobe (3).
- (8) Open the miscellaneous door (4).
- (9) Remove the access plate (9) that is attached with the screws (8). Refer to DET. B.
- (10) Remove the bolt (2), washers (1) and (16), and nut (17) to disconnect the tie rod (18) from the aircraft structure. Refer to DET. A.
- (11) Close the miscellaneous door (4).

- (12) To remove the RH wardrobe (3) from the aircraft, it is necessary to divide it into two portions, the front portion and the rear portion. For this, do the steps below:
- (a) Open the door (7).
 - (b) Remove the coat rod (22) that is attached with the screws (19).
 - (c) Remove the panel (20) with the screws (21).
 - (d) Remove the screws (30) that attach the door tracks (23) to the rear portion of the RH wardrobe (3).
 - (e) Remove the painted-red screws (29), (31), and (32) from the RH wardrobe (3). Refer to DET. D.
 - (f) Remove the fitting covers (24). Refer to DET. E.
 - (g) Remove the screws (25), washers (26), and nuts (28) that attach the fittings (27).
- (13) Remove the the both parts of the RH wardrobe (3).

EFFECTIVITY: RH WARDROBE WITH CENTER-PARTING DOOR

RH Wardrobe - Removal/Installation

Figure 401

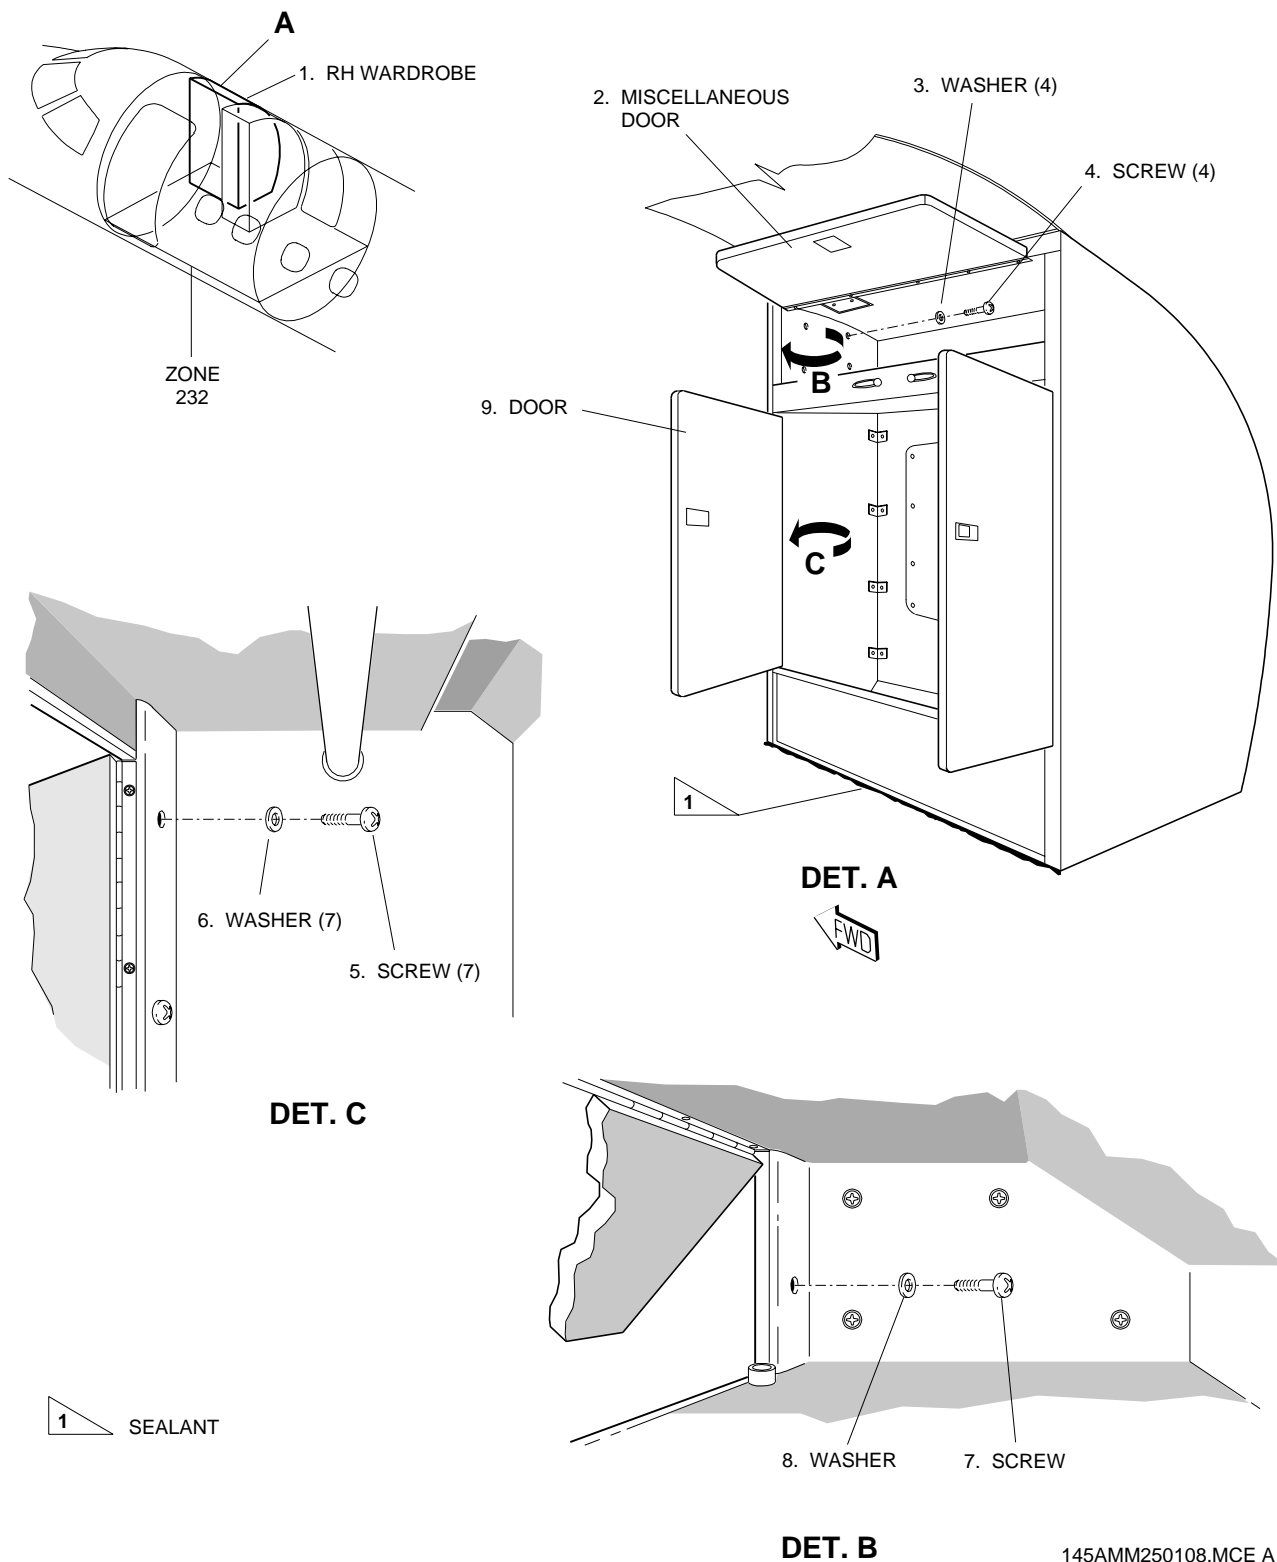


145AMM250108.MCE A

EFFECTIVITY: RH WARDROBE WITH RH-OPENING FOLDABLE DOOR

RH Wardrobe - Removal/Installation

Figure 402 - Sheet 1

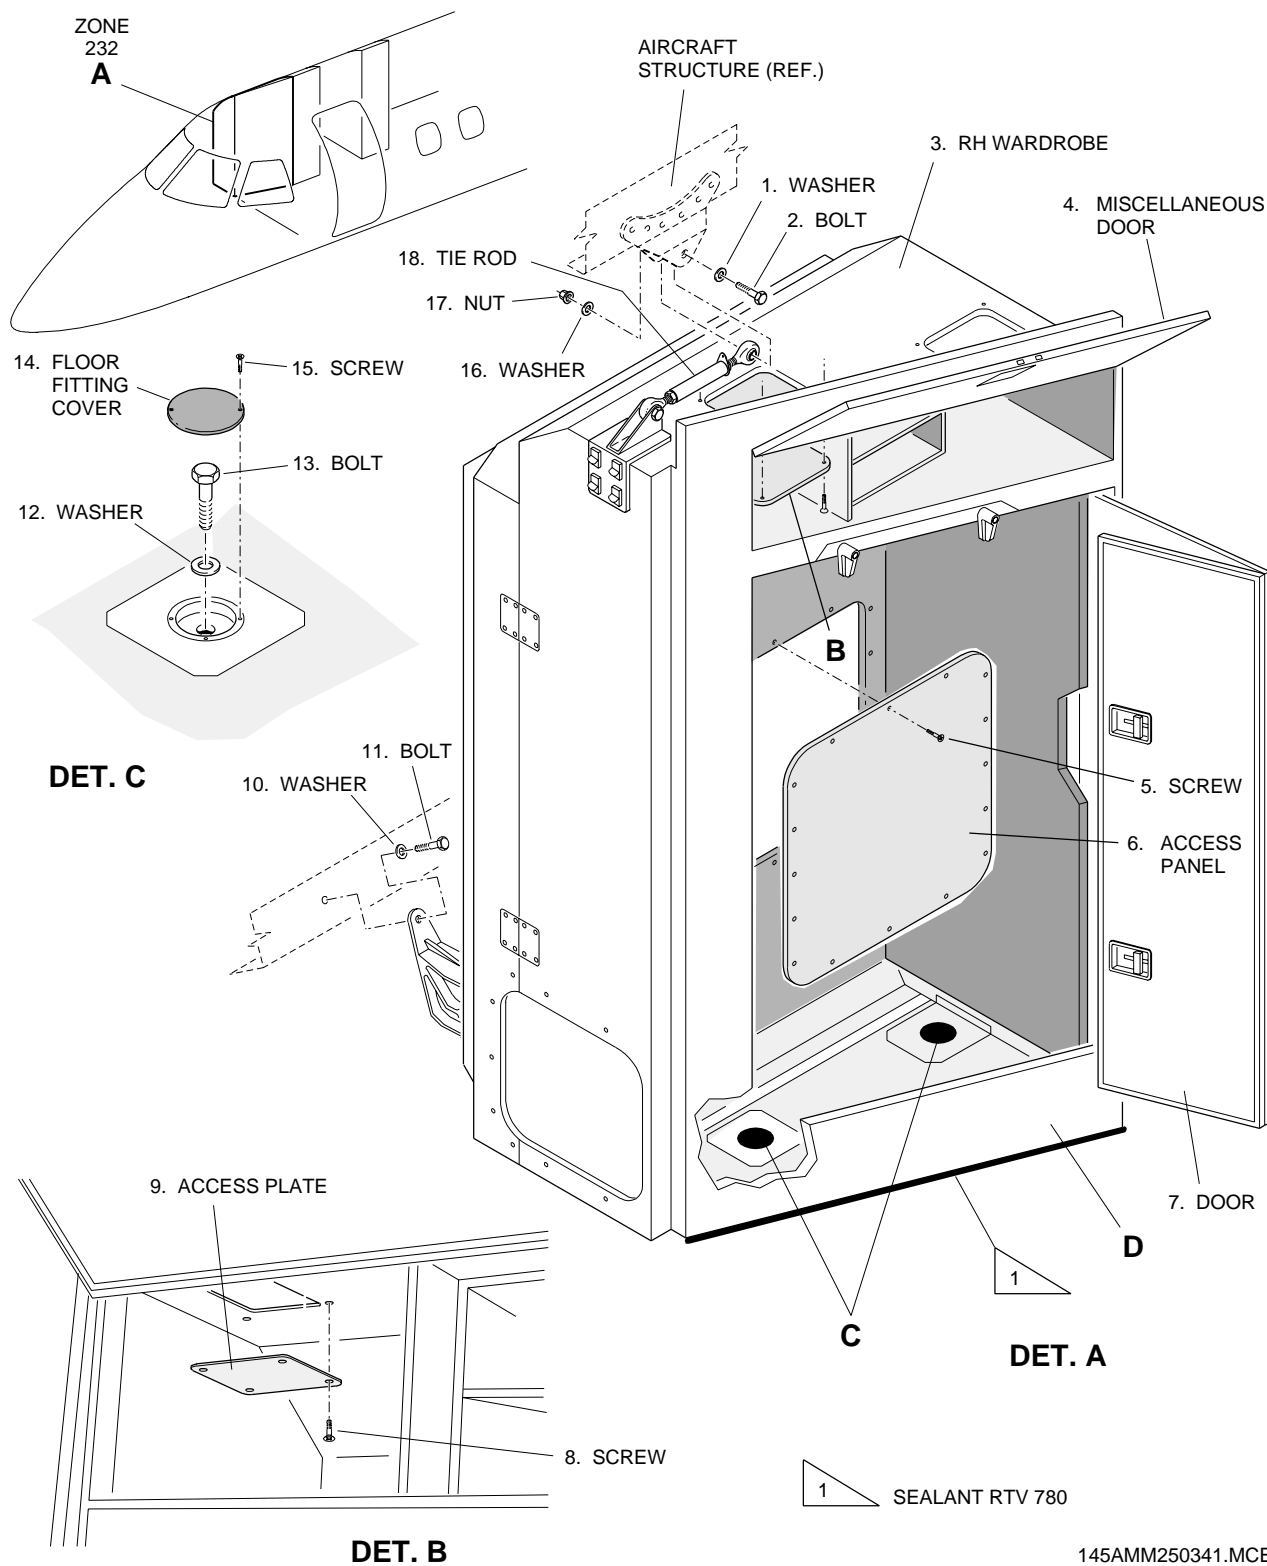


145AMM250341.MCE

EFFECTIVITY: RH WARDROBE WITH RH-OPENING FOLDABLE DOOR

RH Wardrobe - Removal/Installation

Figure 402 - Sheet 2

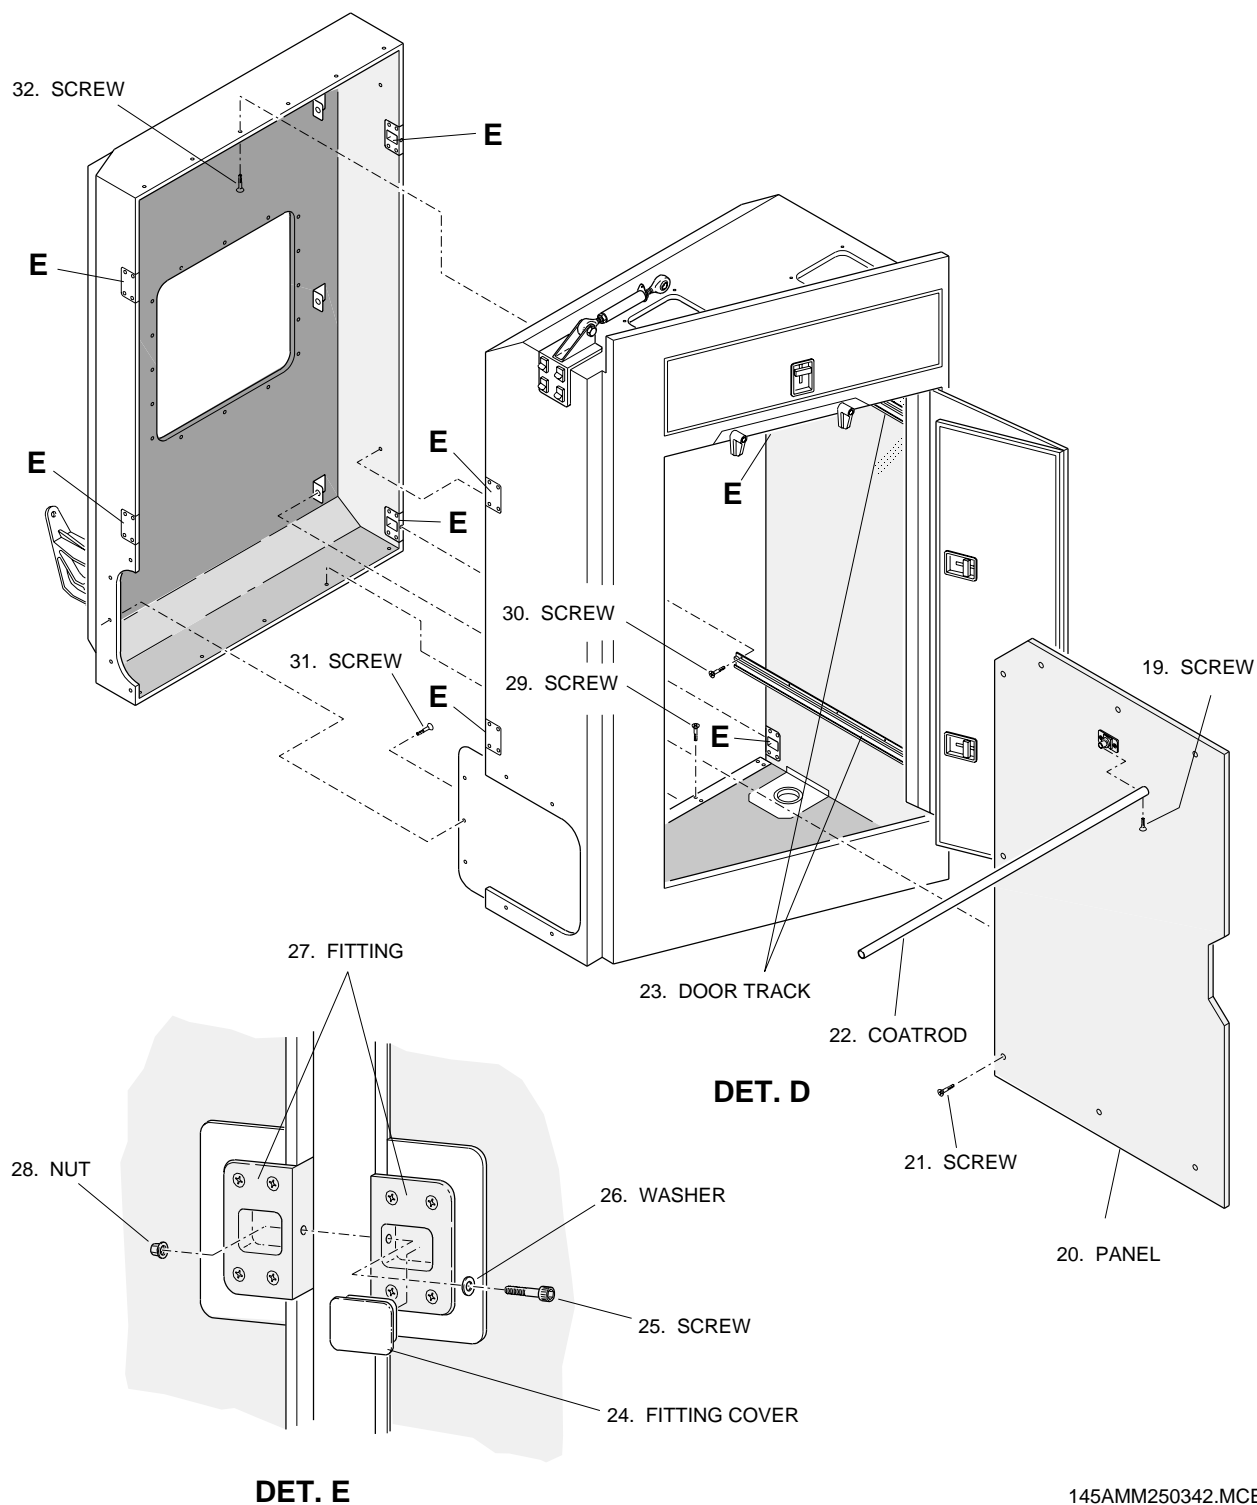

145AMM250342.MCE

TASK 25-26-02-400-801-A

EFFECTIVITY: AIRCRAFT WITH RH WARDROBE

3. RH WARDROBE - INSTALLATION

A. General

(1) This task gives the procedures to install the RH wardrobe assembly.

B. References

REFERENCE	DESIGNATION
AMM TASK 25-22-04-400-801-A/400	-
AMM TASK 25-30-01-400-801-A/400	-
AMM TASK 25-30-01-400-802-A/400	-
AMM TASK 25-30-01-400-803-A/400	-
SRM 51-20-01	-
TASK 25-22-04-400-804-A	-

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

SPECIFICATION (BRAND)	DESCRIPTION	QTY
RTV 780 (Black)	Sealant	AR

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin
1	Helps the other technician	Passenger cabin

I. RH Wardrobe with center-parting door - Installation (Figure 401)

SUBTASK 420-010-B

EFFECTIVITY: RH WARDROBE WITH CENTER-PARTING DOOR

- (1) Remove the sealant residues (SRM 51-20-01) from the related area. Refer to DET. A.
- (2) Put the RH wardrobe (1) in its installation position.

- (3) Open the miscellaneous door (2).
- (4) Install the screws (4) and washers (3).
- (5) Install the screw (7) and washer (8). Refer to DET. B.
- (6) Close the miscellaneous door (2). Refer to DET. A.
- (7) Open the door (9).
- (8) Install the screws (5) and washers (6). Refer to DET. C.
- (9) Close the door (9).

J. RH Wardrobe with RH-opening foldable door - Installation (Figure 402)

SUBTASK 420-011-A

EFFECTIVITY: RH WARDROBE WITH RH-OPENING FOLDABLE DOOR

- (1) If you disassembled the RH wardrobe, do steps (a) thru (f) below:
 - (a) Put the parts of the RH wardrobe (3) into the aircraft. Refer to DET. A.
 - (b) Put the parts of the RH wardrobe (3) together and attach them as follows:
 - 1 Attach the fittings (27) with the screws (25), washers (26), and nuts (28). Refer to DET. E.
 - 2 Attach the painted-red screws (29), (31), and (32). Refer to DET. D.
 - (c) Install the fitting covers (24). Refer to DET. E.
 - (d) Attach the door tracks (23) to the rear portion of the RH wardrobe (3) with the screws (30). Refer to DET. D.
 - (e) Install the panel (20) with the screws (21).
 - (f) Install the coat rod (22) with the screws (19).
- (2) Remove the sealant residues (SRM 51-20-01) from the related area. Refer to DET. A.
- (3) Put the RH wardrobe (3) assembly in its installation position.
- (4) Open the door (7) of the RH wardrobe (3).
- (5) Attach the RH wardrobe (3) with the bolts (11) and washers (10).
- (6) Attach the RH wardrobe (3) to the floor with the bolts (13) and washers (12). Refer to DET. C.
- (7) Install the floor fitting covers (14) with the screws (15).
- (8) Install the access panel (6) with the screws (5). Refer to DET. A.
- (9) Close the door (7) of the RH wardrobe (3).
- (10) Open the miscellaneous door (4).

- (11) Install the bolt (2), washers (1) and (16), and nut (17) that attach the tie rod assembly (18) to the aircraft structure.
- (12) Install the access plate (9) with the screws (8). Refer to DET. B.
- (13) Close the miscellaneous door (4).

K. Follow-on

SUBTASK 842-009-B

- (1) Install the forward galley assembly (AMM TASK 25-30-01-400-801-A/400) or (AMM TASK 25-30-01-400-803-A/400), as applicable.
- (2) Install the main-door region ceiling panel (AMM TASK 25-22-04-400-801-A/400), (AMM TASK 25-30-01-400-802-A/400), (AMM TASK 25-30-01-400-803-A/400) or (TASK 25-22-04-400-804-A), as applicable.
- (3) Install the emergency equipment into the RH wardrobe.
- (4) Apply the sealant to the interface of the RH wardrobe bottom edge with the aisle floor (Figure 401) (SRM 51-20-01).