

APU COWLING AIR INTAKES/OFFTAKES - INSPECTION/CHECK

EFFECTIVITY: FOR AIRCRAFT WITH APU T-62T-40C11

1. General

- A. This section gives the procedures to do the visual inspection of the APU and starter-generator air intake and exhaust ducts.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
49-11-01-200-801-A ◆	APU AND STARTER-GENERATOR AIR INTAKE AND EXHAUST DUCTS - INSPECTION	FOR AIRCRAFT WITH APU T-62T-40C11

TASK 49-11-01-200-801-A

EFFECTIVITY: FOR AIRCRAFT WITH APU T-62T-40C11

2. APU AND STARTER-GENERATOR AIR INTAKE AND EXHAUST DUCTS - INSPECTION

A. General

- (1) Obey the instructions below to inspect the APU and starter-generator air intake and exhaust ducts.

B. References

REFERENCE	DESIGNATION
AMM MPP 49-00-00/200	- MAINTENANCE PRACTICES

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
313		APU cowling

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
	Workstand	To get access to the APU	1

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	On the engine

I. Preparation

SUBTASK 841-002-A

- (1) On the left power control and distribution box, open the APU GEN START circuit breaker and attach DO-NOT-CLOSE tag to it.
- (2) Put the work stand in the work area.

- J. Inspect (Visual Inspection) APU and Starter-Generator Air Intake and Exhaust Ducts for Foreign Material or Obstruction ([Figure 601](#))

SUBTASK 212-002-A

WARNING: BEFORE YOU DO THE TASK OBEY THE SAFETY PRECAUTIONS GIVEN IN [AMM MPP 49-00-00/200](#) TO PREVENT INJURY TO PERSONS AND DAMAGE TO THE MATERIAL.

- (1) Do a visual inspection of the APU and starter-generator air intake and exhaust ducts to make sure that there is no unwanted matter or blockage. Remove the unwanted matter or blockage if applicable.

- K. Follow-on


SUBTASK 842-002-A

- (1) On the left power control and distribution box, remove the DO-NOT-CLOSE tag and close the APU GEN START circuit breaker.
- (2) Remove the work stand from the work area.

EFFECTIVITY: FOR AIRCRAFT WITH APU T-62T-40C11

APU and Starter-Generator Air Intake and Exhaust Ducts - Inspection

Figure 601

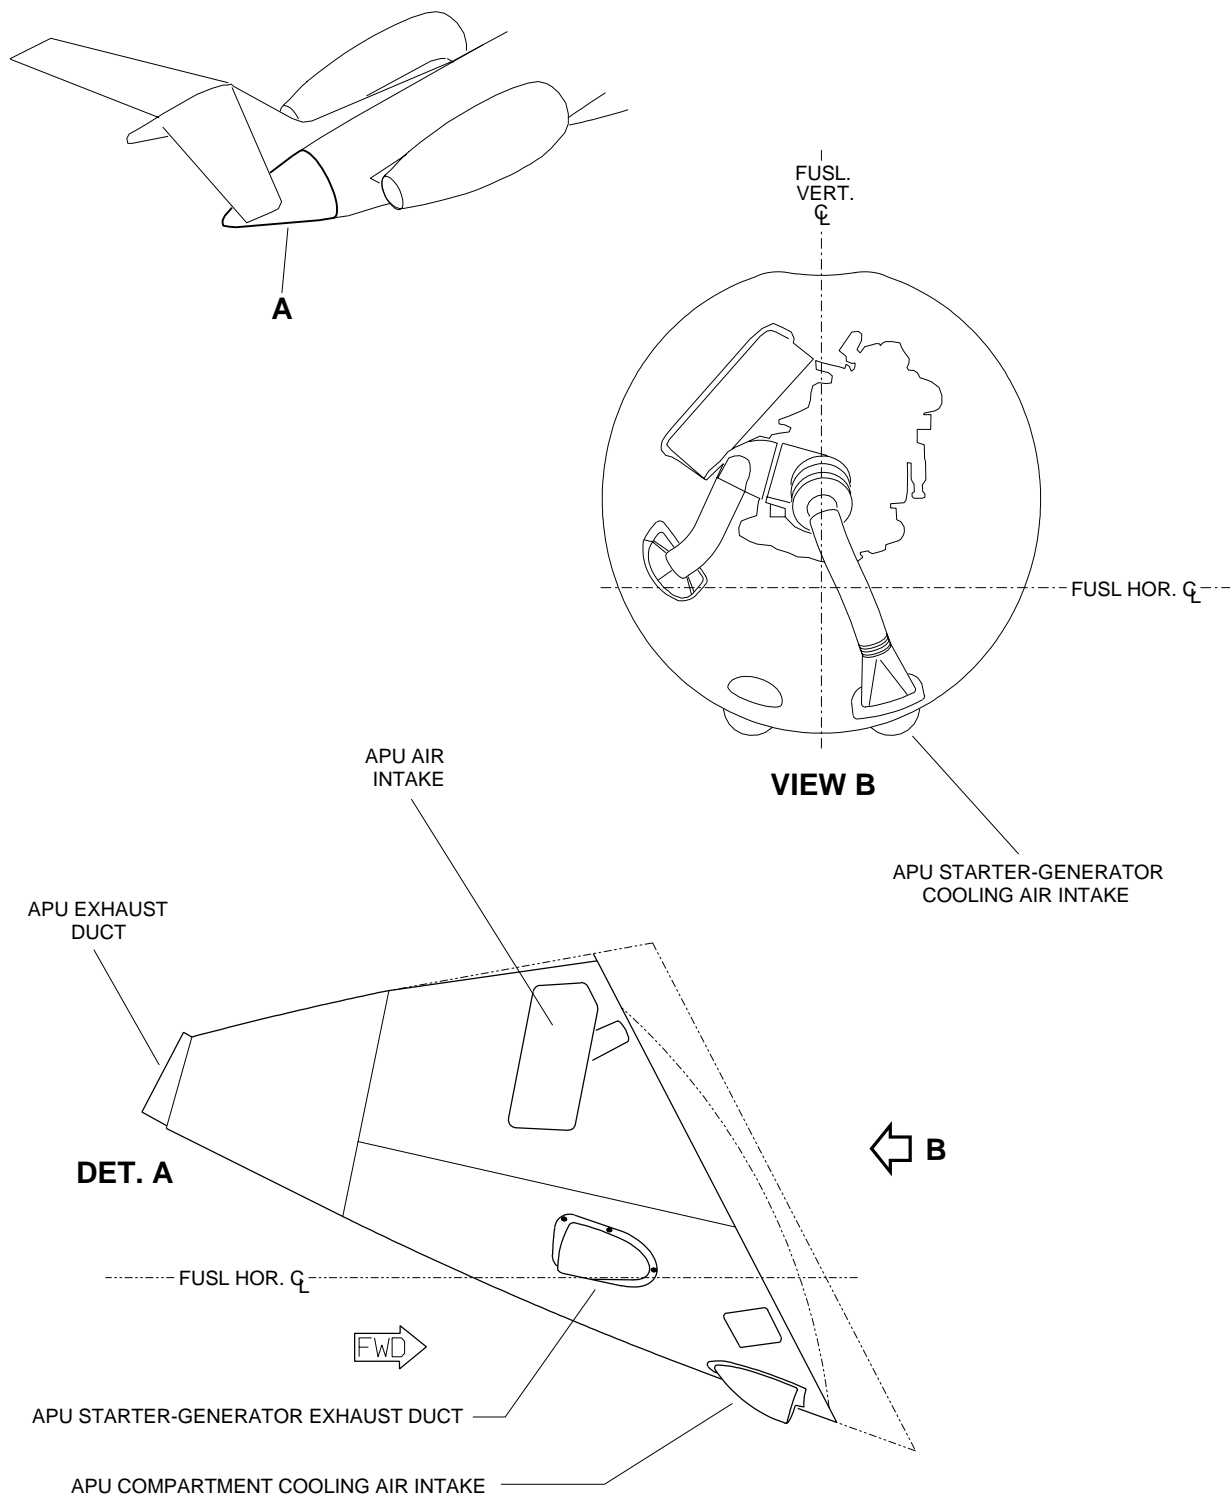

145AMM490076.MCE A