

BAGGAGE LIGHT - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the baggage light lamp and baggage light assembly.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
33-31-01-000-801-A	BAGGAGE LIGHT LAMP - REMOVAL	ALL
33-31-01-400-801-A	BAGGAGE LIGHT LAMP - INSTALLATION	ALL
33-31-01-000-802-A	BAGGAGE LIGHT ASSEMBLY - REMOVAL	ALL
33-31-01-400-802-A	BAGGAGE LIGHT ASSEMBLY - INSTALLATION	ALL

TASK 33-31-01-000-801-A

EFFECTIVITY: ALL

2. BAGGAGE LIGHT LAMP - REMOVAL

A. General

(1) This procedure gives the instructions to remove the baggage light lamp.

B. References

REFERENCE

DESIGNATION

[AMM SDS 24-60-00/1](#)

C. Zones and Accesses

ZONE

PANEL/DOOR

LOCATION

273

Baggage compartment

274

Baggage compartment

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY

FUNCTION

PLACE

1

Does the task

On the ceiling of the baggage compartment

I. Preparation

SUBTASK 841-002-A

(1) On the circuit breaker panel, open the COMPT circuit breaker (Location Tip: DC BUS 2/LIGHTS/COMPT) and attach a DO-NOT-CLOSE tag to it.

(2) On the RH electrical-power control/distribution box ([AMM SDS 24-60-00/1](#)), open the COMPT circuit breaker (Location Tip: RB SERVBUS/COMPT) and attach a DO-NOT-CLOSE tag to it.

J. Removal ([Figure 401](#))

SUBTASK 020-002-A


(1) Release the four dzus-type screws (5).

- (2) Remove the protection (4).
- (3) Remove the lens (3).
- (4) Remove the seal (2).
- (5) Remove the lamp (1).

EFFECTIVITY: ALL

Baggage Light Lamp - Removal/Installation

Figure 401

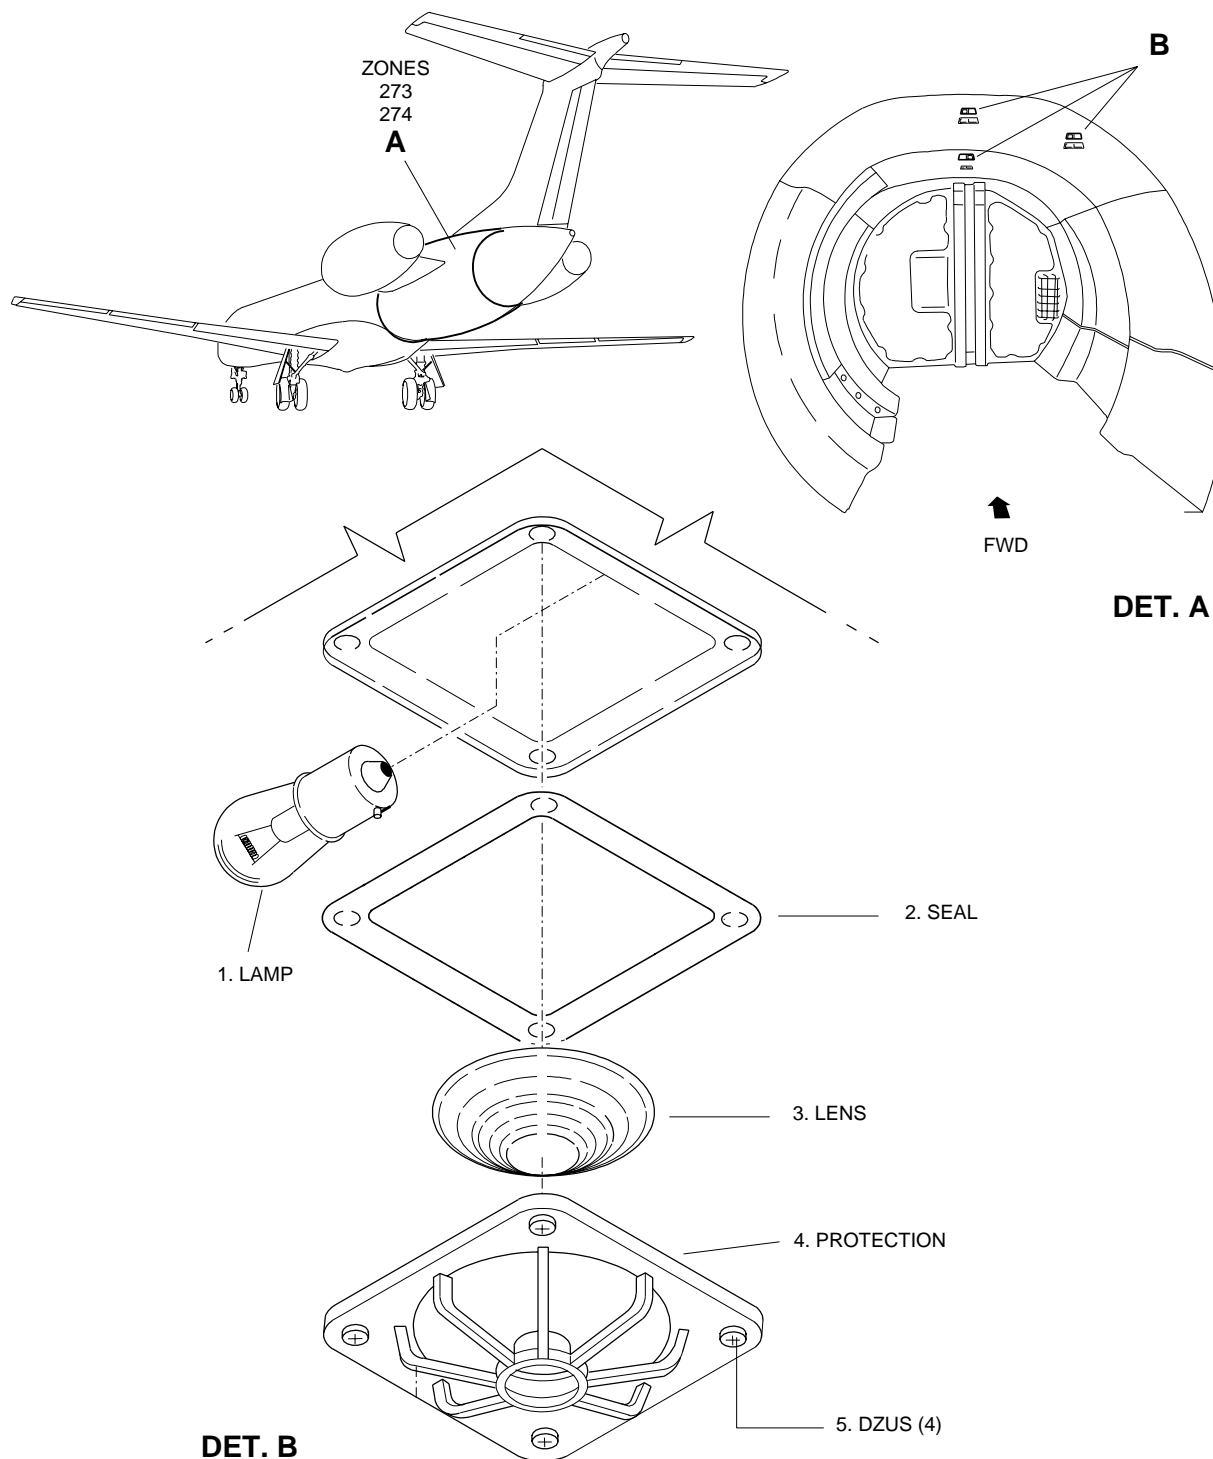

145AMM330110.MCE

TASK 33-31-01-400-801-A
EFFECTIVITY: ALL

3. BAGGAGE LIGHT LAMP - INSTALLATION

A. General

(1) This procedure gives the instructions to install the baggage light lamp.

B. References

REFERENCE	DESIGNATION
AMM SDS 24-60-00/1	
AMM TASK 33-30-00-700-801-A/500	BAGGAGE AND SERVICE COMPARTMENT LIGHTS - OPERATIONAL TEST

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
273		Baggage compartment
274		Baggage compartment

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	On the ceiling of the baggage compartment

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Install the lamp (1).
- (2) Install the seal (2).
- (3) Install the lens (3).
- (4) Install the protection (4).
- (5) Attach the four dzus-type screws (5).

J. Follow-on

SUBTASK 842-002-A

- (1) On the circuit breaker panel, remove the DO-NOT-CLOSE tag from the COMPT circuit breaker (Location Tip: DC BUS 2/LIGHTS/COMPT) and close it.
- (2) On the RH electrical-power control/distribution box ([AMM SDS 24-60-00/1](#)), remove the DO-NOT-CLOSE tag from the COMPT circuit breaker (Location Tip: RB SERVBUS/COMPT) and close it.
- (3) Do the Baggage Compartment Light test ([AMM TASK 33-30-00-700-801-A/500](#)).

TASK 33-31-01-000-802-A
EFFECTIVITY: ALL

4. BAGGAGE LIGHT ASSEMBLY - REMOVAL

A. General

(1) This procedure gives the instructions to remove the baggage light assembly.

B. References

REFERENCE	DESIGNATION
AMM SDS 24-60-00/1	
AMM TASK 25-51-01-000-801-A/400	BAGGAGE COMPARTMENT LINING - REMOVAL

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
273		Baggage compartment
274		Baggage compartment

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	On the ceiling of the baggage compartment

I. Preparation

SUBTASK 841-003-A

- (1) On the circuit breaker panel, open the COMPT circuit breaker (Location Tip: DC BUS 2/LIGHTS/COMPT) and attach a DO-NOT-CLOSE tag to it.
- (2) On the RH electrical-power control/distribution box ([AMM SDS 24-60-00/1](#)), open the COMPT circuit breaker (Location Tip: RB SERVBUS/COMPT) and attach a DO-NOT-CLOSE tag to it.
- (3) Refer to [AMM TASK 25-51-01-000-801-A/400](#) and remove the baggage compartment lining and the light cover to get access to the baggage light assembly.

J. Removal (Figure 401)


SUBTASK 020-003-A

- (1) Release the four dzus-type screws (7).
- (2) Remove the protection (6).
- (3) Remove the lens (5).
- (4) Remove the seal (4).
- (5) Remove the three screw (1), and three washer (2) that attach the baggage light assembly to the lining.
- (6) Release the sleeve (10).
- (7) Release the two terminal sleeve (9).
- (8) Disconnect the two terminal wire (8).
- (9) Remove the baggage light assembly (3).

EFFECTIVITY: ALL

Baggage Light Assembly - Removal/Installation

Figure 402

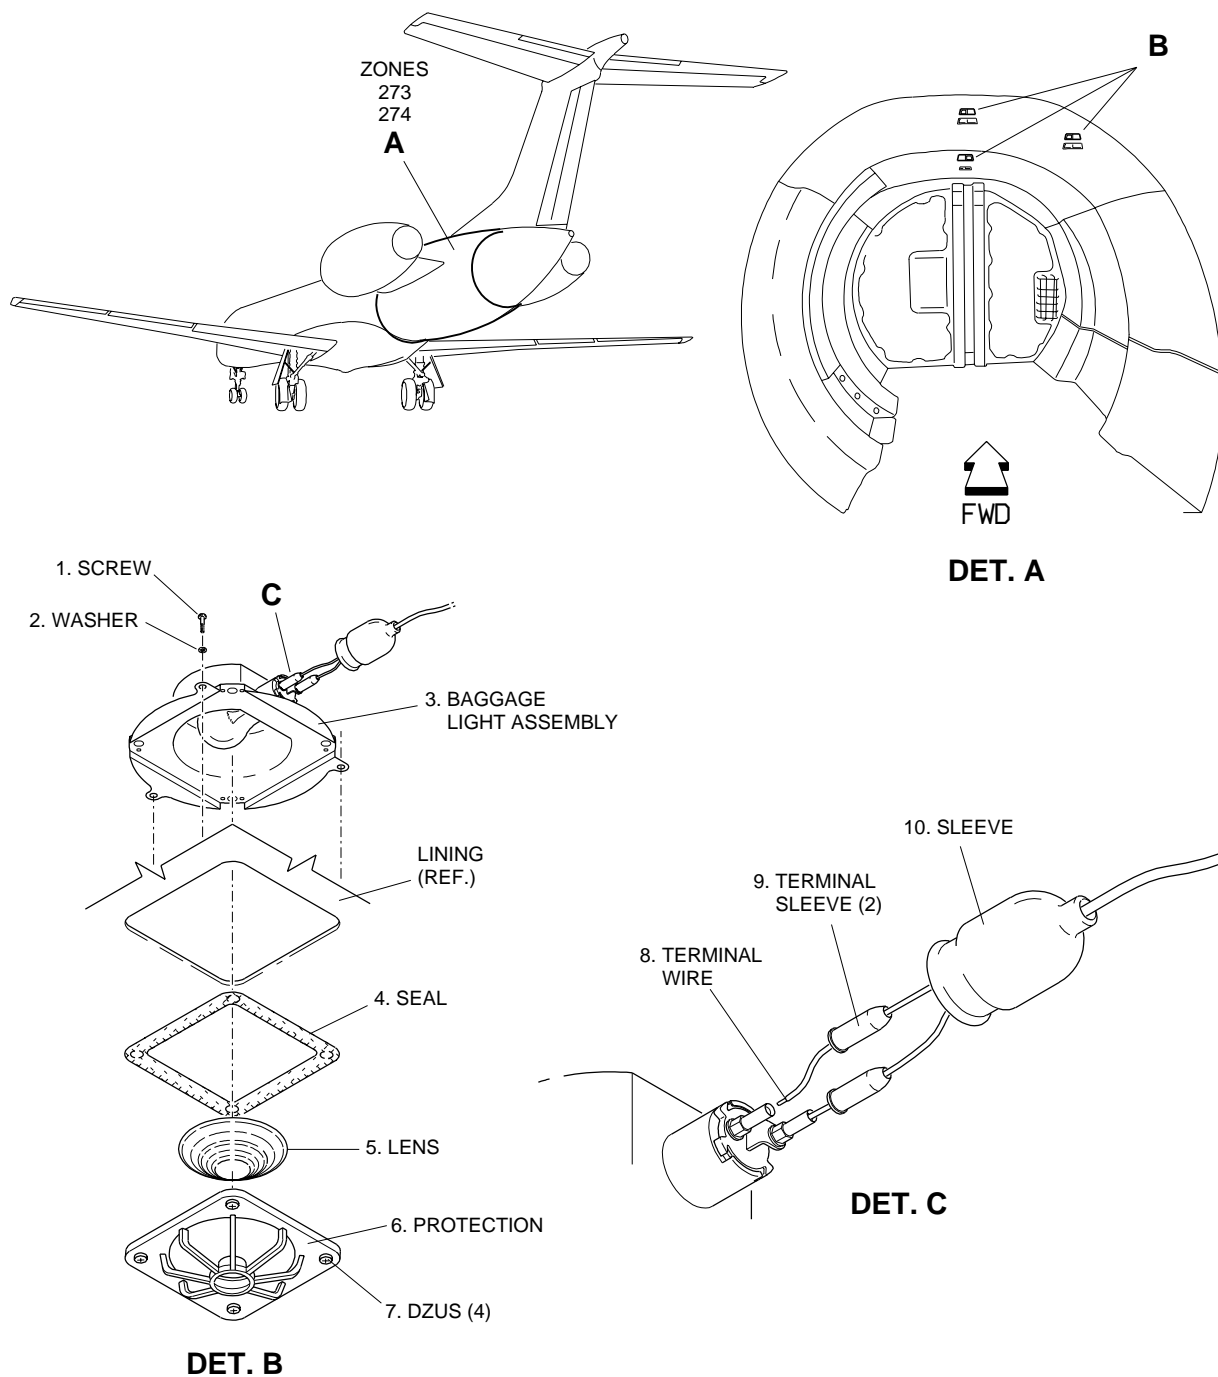

145AMM330471.MCE

TASK 33-31-01-400-802-A

EFFECTIVITY: ALL

5. BAGGAGE LIGHT ASSEMBLY - INSTALLATION

A. General

(1) This procedure gives the instructions to install the Baggage Light Assembly.

B. References

REFERENCE	DESIGNATION
AMM SDS 24-60-00/1	
AMM TASK 25-51-01-400-801-A/400	BAGGAGE COMPARTMENT LINING - INSTALLATION
AMM TASK 33-30-00-700-801-A/500	BAGGAGE AND SERVICE COMPARTMENT LIGHTS - OPERATIONAL TEST

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
273		Baggage compartment
274		Baggage compartment

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	On the ceiling of the baggage compartment

I. Installation (Figure 401)

SUBTASK 420-003-A

- (1) Connect the two terminal wire (8) to the baggage light assembly (1).
- (2) Install the terminal sleeve (9).
- (3) Install the sleeve (10).
- (4) Put the baggage light assembly (3) in position.

- (5) Tighten the three screw (1), and three washer (2) that attach the baggage light assembly (3) to the lining.
- (6) Install the seal (2).
- (7) Install the lens (3).
- (8) Install the protection (4).
- (9) Attach the four dzus-type screws (5).

J. Follow-on

SUBTASK 842-003-A

- (1) Refer to [AMM TASK 25-51-01-400-801-A/400](#) and install the light cover and the baggage compartment lining.
- (2) On the circuit breaker panel, remove the DO-NOT-CLOSE tag from the COMPT circuit breaker (Location Tip: DC BUS 2/LIGHTS/COMPT) and close it.
- (3) On the RH electrical-power control/distribution box ([AMM SDS 24-60-00/1](#)), remove the DO-NOT-CLOSE tag from the COMPT circuit breaker (Location Tip: RB SERVBUS/COMPT) and close it.
- (4) Do the Baggage Compartment Light test ([AMM TASK 33-30-00-700-801-A/500](#)).

