

## LH AFT CONSOLE - REMOVAL/INSTALLATION

*EFFECTIVITY: ALL*

1. General

- A. This section gives the procedures to remove/install the LH aft console.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

<i>TASK NUMBER</i>	<i>DESCRIPTION</i>	<i>EFFECTIVITY</i>
25-12-05-000-801-A	LH AFT CONSOLE - REMOVAL	ALL
25-12-05-400-801-A	LH AFT CONSOLE - INSTALLATION	ALL

TASK 25-12-05-000-801-A

EFFECTIVITY: ALL

## 2. LH AFT CONSOLE - REMOVAL

### A. General

(1) This task gives the procedures to remove the LH aft console.

### B. References

REFERENCE	DESIGNATION
<a href="#">AMM TASK 23-24-02-000-801-A/400</a>	CMU PRINTER - REMOVAL
<a href="#">AMM TASK 31-17-01-000-801-A/400</a>	MAINTENANCE PANEL - REMOVAL

### C. Zones and Accesses

Not Applicable

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit LH

### I. Preparation

**SUBTASK 841-002-A**

(1) For aircraft with CMU printer installed on the LH aft console, remove it ( [AMM TASK 23-24-02-000-801-A/400](#) ).

### J. Removal (Figure 401)

**SUBTASK 020-002-A**

(1) Remove the maintenance panel (3) ( [AMM TASK 31-17-01-000-801-A/400](#) ).


(2) Remove the screws (2) that attach the console (1).

(3) Remove the LH aft console (1).

EFFECTIVITY: ALL

LH Aft Console - Removal/Installation

Figure 401

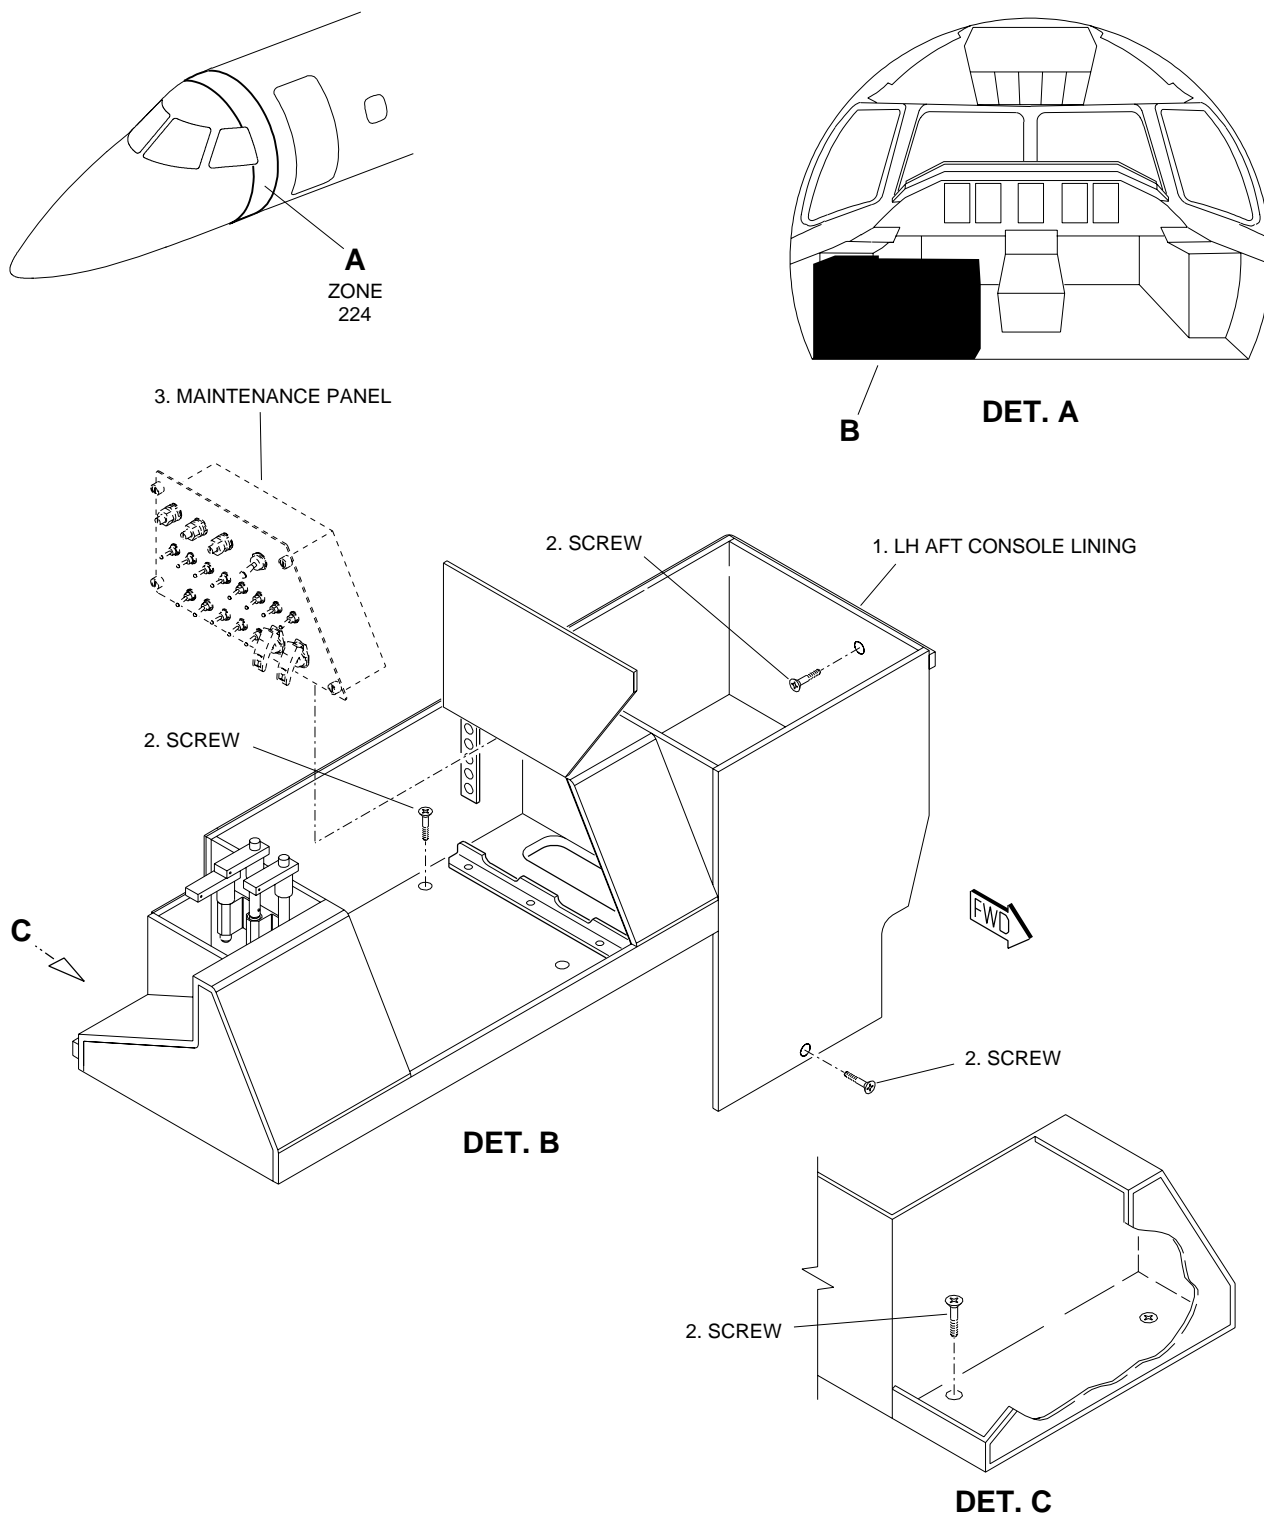

145AMM250005.MCE B

TASK 25-12-05-400-801-A

EFFECTIVITY: ALL

### 3. LH AFT CONSOLE - INSTALLATION

#### A. General

(1) This task gives the procedures to install the LH aft console.

#### B. References

REFERENCE	DESIGNATION
<a href="#">AMM TASK 23-24-02-400-801-A/400</a>	CMU PRINTER - INSTALLATION
<a href="#">AMM TASK 31-17-01-400-801-A/400</a>	MAINTENANCE PANEL - INSTALLATION

#### C. Zones and Accesses

Not Applicable

#### D. Tools and Equipment

Not Applicable

#### E. Auxiliary Items

Not Applicable

#### F. Consumable Materials

Not Applicable

#### G. Expandable Parts

Not Applicable

#### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit LH

#### I. Installation (Figure 401)

##### *SUBTASK 420-002-A*

- (1) Put the LH aft console (1) in the installation position.
- (2) Attach it with the screws (2).
- (3) Install the maintenance panel (3) ( [AMM TASK 31-17-01-400-801-A/400](#)).

#### J. Follow-on

##### *SUBTASK 842-002-A*

- (1) If you removed the CMU printer installed on the LH aft console, install it again ( [AMM TASK 23-24-02-400-801-A/400](#)).