

## BAGGAGE-DOOR WARNING MICROSWITCHES - REMOVAL/INSTALLATION

*EFFECTIVITY: ALL*

1. General

- A. This section gives the procedures to remove and install the baggage-door warning microswitches.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
52-76-01-000-801-A	BAGGAGE DOOR WARNING MICRO-SWITCHES - REMOVAL	ALL
52-76-01-400-801-A	BAGGAGE DOOR WARNING MICRO-SWITCHES - INSTALLATION	ALL

TASK 52-76-01-000-801-A

EFFECTIVITY: ALL

## 2. BAGGAGE DOOR WARNING MICROSWITCHES - REMOVAL

### A. General

(1) This task gives the procedures to remove the baggage-door warning microswitch.

### B. References

REFERENCE	DESIGNATION
<a href="#">AMM MPP 06-41-05/100</a>	- COMPONENT LOCATION

### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
271	813	Cargo compartment - LH

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In the cargo compartment - LH

### I. Preparation

**SUBTASK 841-002-A**

(1) Remove the cargo-compartment lining panels ( [AMM MPP 06-41-05/100](#) ).

### J. Removal (Figure 401)


**SUBTASK 020-002-A**

- (1) Release the electrical connections.
- (2) Remove the screw and washer of the clamp.
- (3) Remove the screws (1) and washers (2) of the support (5) attach of fuselage.
- (4) Remove the assembly support (5) and microswitch (6).
- (5) Remove the screws (3), nuts (4) of the microswitch (6).

EFFECTIVITY: ALL

Warning Microswitch - Removal/Installation

Figure 401

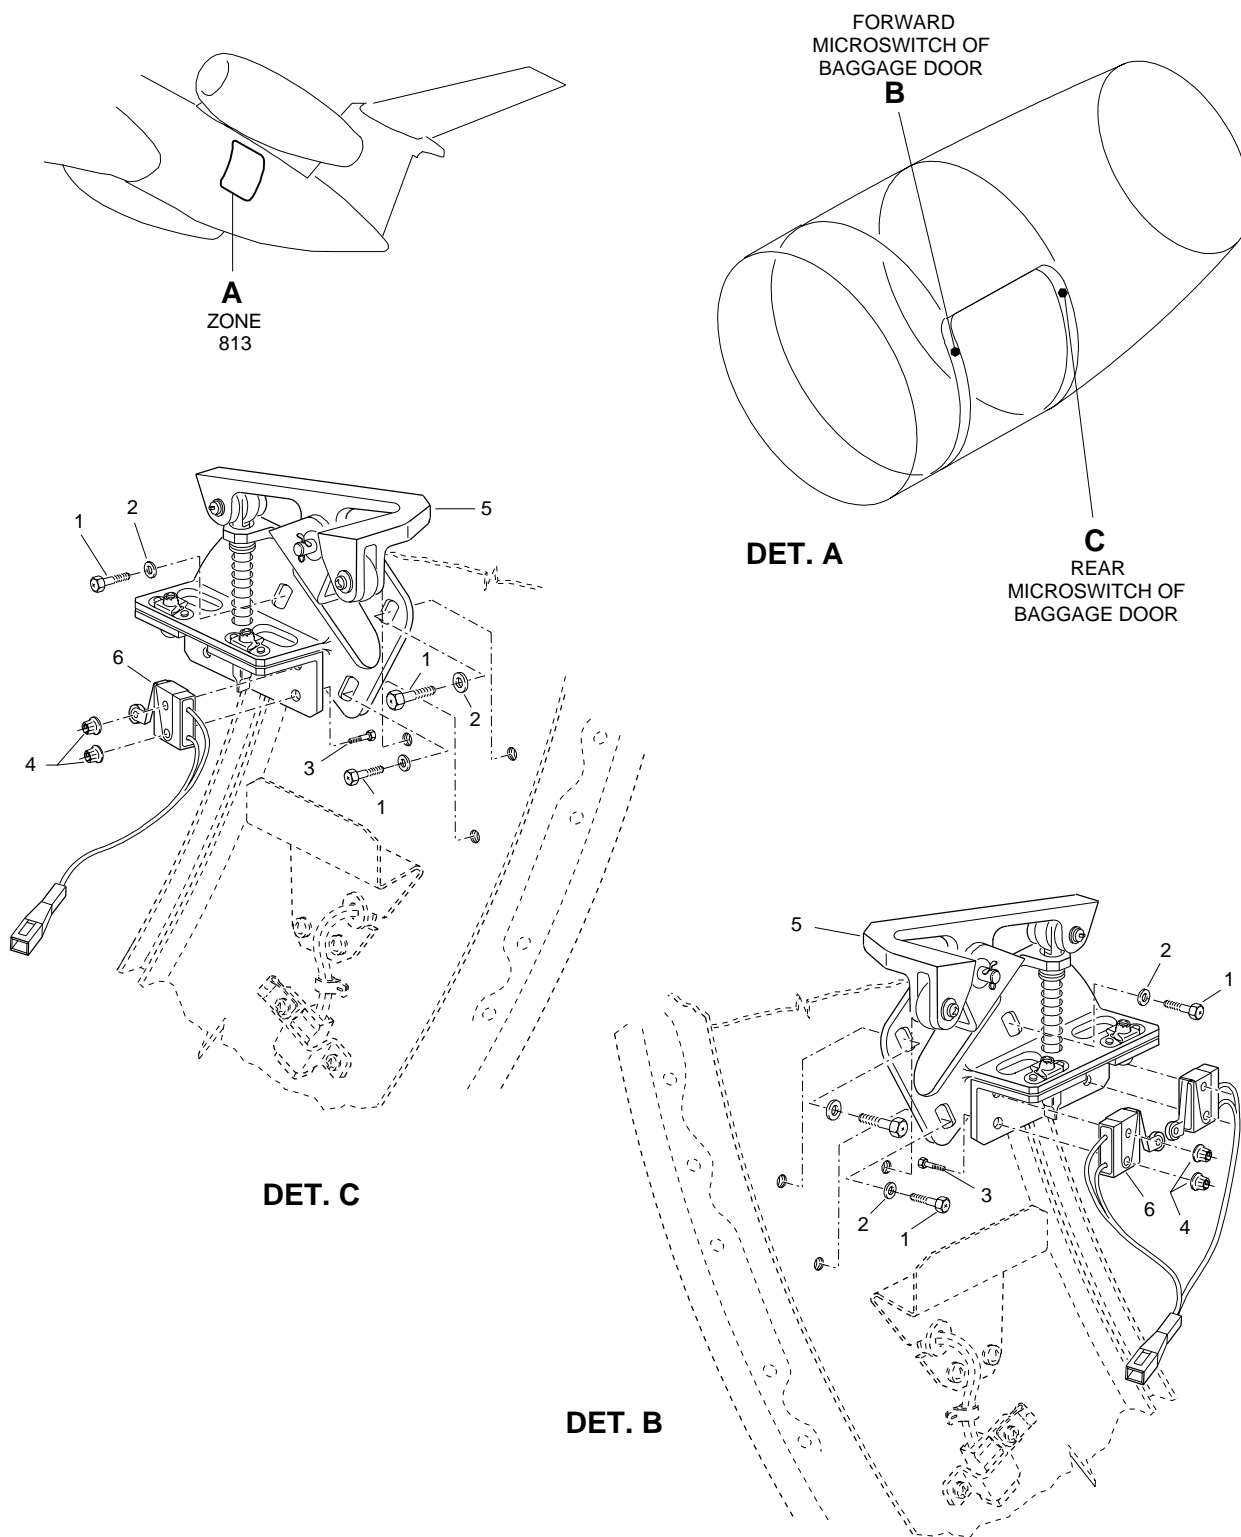

145AMM520118.MCE B

TASK 52-76-01-400-801-A

EFFECTIVITY: ALL

### 3. BAGGAGE DOOR WARNING MICROSWITCHES - INSTALLATION

#### A. General

(1) This task gives the procedures to install the baggage-door warning microswitch.

#### B. References

REFERENCE	DESIGNATION
AMM TASK 52-76-01-700-801-A/500	BAGGAGE DOOR WARNING MICROSWITCHES - OPERATIONAL TEST
AMM TASK 52-76-01-820-801-A/500	BAGGAGE DOOR WARNING MICROSWITCHES - ADJUSTMENT

#### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
271	813	Cargo compartment - LH

#### D. Tools and Equipment

Not Applicable

#### E. Auxiliary Items

Not Applicable

#### F. Consumable Materials

SPECIFICATION (BRAND)	DESCRIPTION	QTY
MS20995C	Lockwire	AR

#### G. Expandable Parts

Not Applicable

#### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In the cargo compartment - LH

#### I. Installation (Figure 401)

##### SUBTASK 420-002-A

- (1) Put the microswitch (6) on the support (5).
- (2) Install the screws (3) and nuts (4 ) of the microswitch (6).
- (3) Put the washer (2) and screws (1) of support (5) attachment of fuselage.
- (4) Install the clamp with washer and screw.

- (5) Make the electrical connections of the microswitch (6).
- (6) Make sure correct functional the microswitch ( [AMM TASK 52-76-01-700-801-A/500](#)).

J. Follow-on

*SUBTASK 842-002-A*

- (1) Do an operational test ( [AMM TASK 52-76-01-700-801-A/500](#)) and adjustment ( [AMM TASK 52-76-01-820-801-A/500](#)) of the microswitches of the baggage door warning system.
- (2) Close the baggage door.

