

LAVATORY SOAP DISPENSER - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove/install the soap dispenser.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-40-07-000-801-A	LAVATORY SOAP DISPENSER- REMOV- AL	ALL
25-40-07-400-801-A	LAVATORY SOAP DISPENSER - INSTAL- LATION	ALL

TASK 25-40-07-000-801-A

EFFECTIVITY: ALL

2. LAVATORY SOAP DISPENSER- REMOVAL

A. General

(1) This task gives the procedures to remove the lavatory soap dispenser.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Lavatory

H. Preparation

SUBTASK 841-003-A

(1) Open the sink cabinet door.

I. Removal [\(Figure 401\)](#) [\(Figure 402\)](#)

SUBTASK 020-003-A

EFFECTIVITY: FOR AIRCRAFT PRE-MOD SB 145-25-0290

(1) Lavatory Soap Dispenser Removal. Refer to [Figure 401](#).

(a) Remove the soap container (7) and adapter (6).

(b) Remove the nut (5) and tooth lock washer (4).

(c) Lift the soap dispenser assembly (1) and remove the washer (2) and rubber washer (3).

SUBTASK 020-004-A

EFFECTIVITY: FOR AIRCRAFT POST MOD SB 145-25-0290

(2) Lavatory Soap Dispenser Removal. Refer to [Figure 402](#).

(a) Remove the soap dispenser (1) from the base (3).


(b) If it is necessary to remove the base (3) from the sink cabinet, do as follows:

- 1 Remove the nut (7), nut (6), and washer (5).
- 2 Remove the bolt (2), base (3), and rubber washer (4).

EFFECTIVITY: FOR AIRCRAFT PRE-MOD SB 145-25-0290

Lavatory Soap Dispenser - Removal/Installation

Figure 401

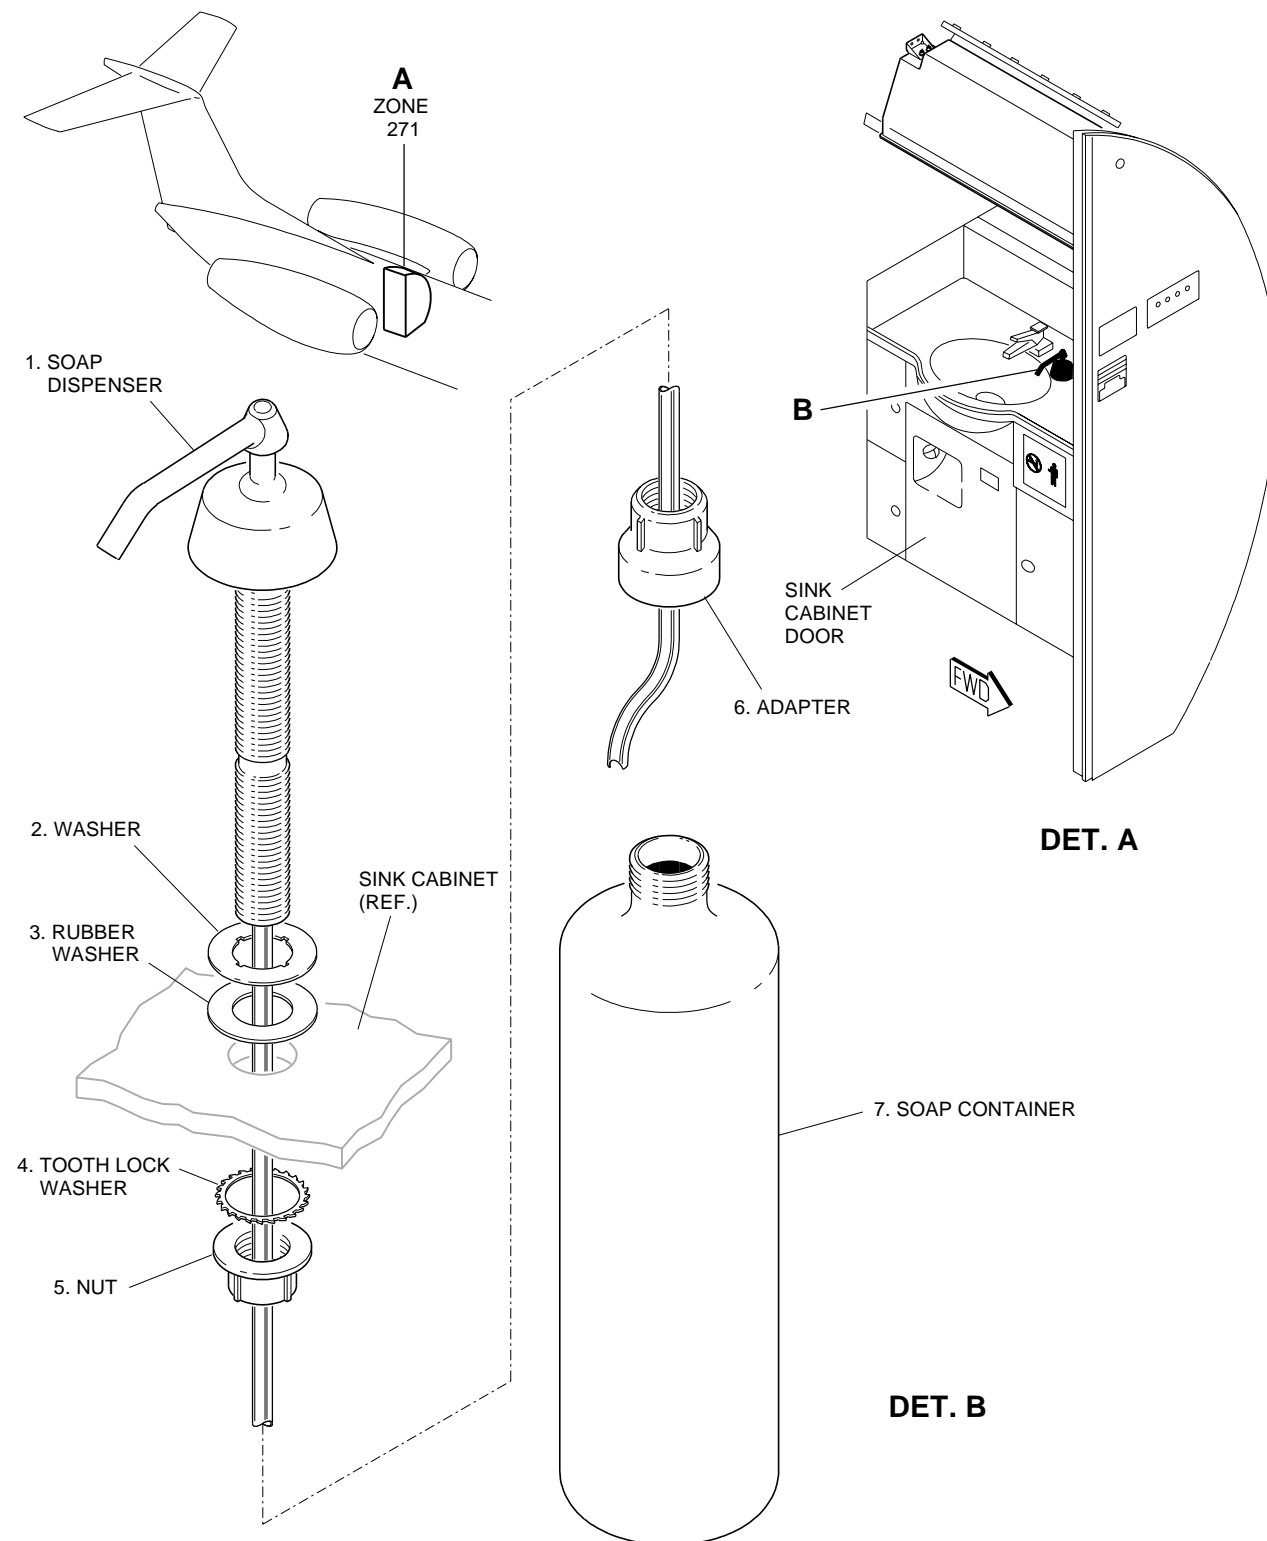


EM145AMM252793A.DGN

EFFECTIVITY: FOR AIRCRAFT POST MOD SB 145-25-0290

Lavatory Soap Dispenser - Removal/Installation

Figure 402

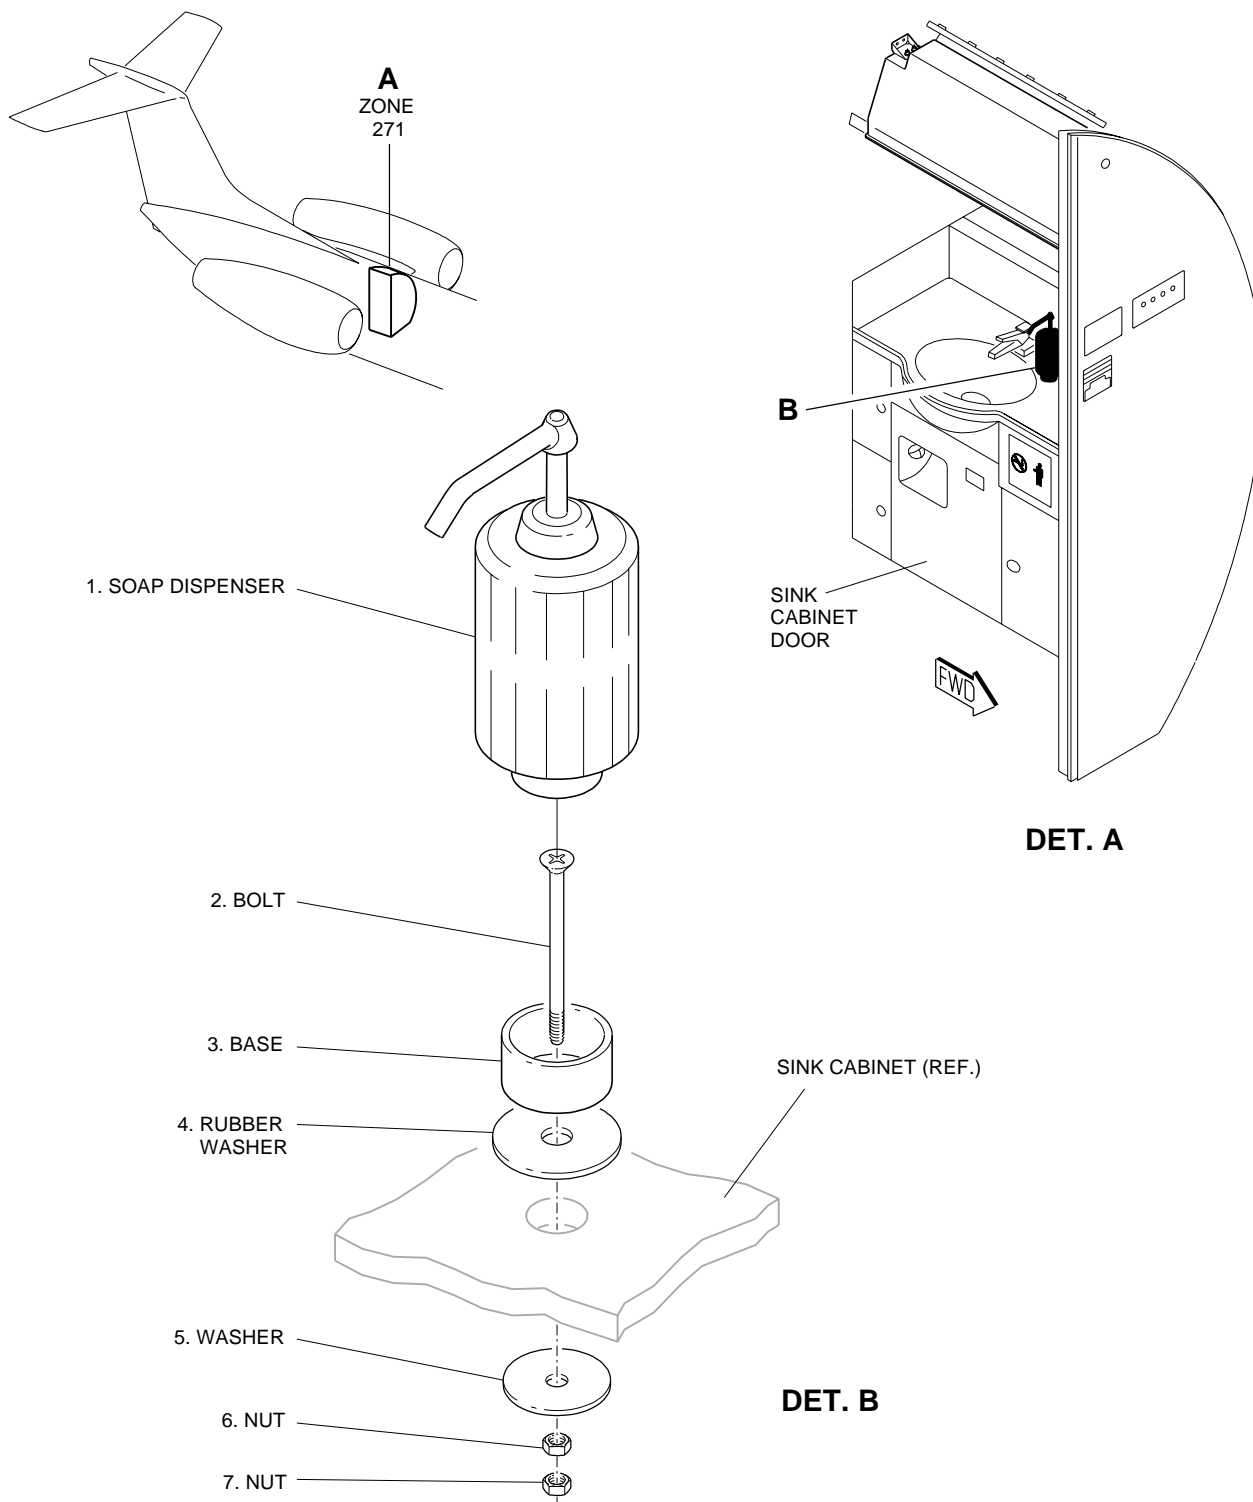

EM145AMM252792A.DGN

TASK 25-40-07-400-801-A

EFFECTIVITY: ALL

3. LAVATORY SOAP DISPENSER - INSTALLATION

A. General

(1) This task gives the procedures to install the lavatory soap dispenser.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Does the task	Lavatory

H. Installation (Figure 401) (Figure 402)

SUBTASK 420-003-A

EFFECTIVITY: FOR AIRCRAFT PRE MOD SB 145-25-0290

(1) Lavatory Soap Dispenser Installation. Refer to (Figure 401).

(a) Put the washer (2) and rubber washer (3) on the soap dispenser assembly (1). Refer to (Figure 401), DET. B.

(b) Put the soap dispenser assembly (1) in position.

(c) Put the tooth lock washer (4) in position and screw the nut (5) down.

(d) Screw the adapter (6) to the soap dispenser assembly (1) and then screw the soap container (7) down to the adapter (6).

SUBTASK 420-004-A

EFFECTIVITY: FOR AIRCRAFT POST MOD SB 145-25-0290

(2) Lavatory Soap Dispenser Installation. Refer to (Figure 402).

(a) If you removed the base (3) from the sink cabinet, do as follows:

1 Put the rubber washer (4), base (3), and bolt (2) in position.

2 Put the washer (5) in position and, screw the nut (6) and nut (7) down.

(b) Install the soap dispenser (1) on the base (3).

I. Follow-on

SUBTASK 842-003-A

(1) Close the sink cabinet door.

