

## TRANSMITTER BATTERY - INSPECTION/CHECK

*EFFECTIVITY: ALL*

### 1. General

- A. This section gives the procedures to make sure that the permitted life of the battery installed on the Emergency Locator Transmitter (ELT) is not expired.
- B. The ELT is installed in center fuselage IV, on the right side.
- C. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-61-04-200-801-A	ELT BATTERY EXPIRATION DATE - GEN- ERAL VISUAL INSPECTION	ALL

TASK 25-61-04-200-801-A

EFFECTIVITY: ALL

## 2. ELT BATTERY EXPIRATION DATE - GENERAL VISUAL INSPECTION

### A. General

(1) This task gives the procedure to make sure that the ELT battery service life is not expired.

### B. References

REFERENCE	DESIGNATION
<a href="#">AMM TASK 25-61-04-900-801-A/200</a>	ELT BATTERY - REPLACEMENT

### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
262		Center fuselage IV, on the right side

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Toilet right upper side

### I. Preparation [\(Figure 601\)](#) [\(Figure 602\)](#) [\(Figure 603\)](#)

**SUBTASK 841-002-A**

(1) Open the toilet speaker panel (1).

(2) Remove the electrical cover (2).

### J. Visually Check ELT Battery Expiration Date [\(Figure 601\)](#) [\(Figure 602\)](#) [\(Figure 603\)](#)

**SUBTASK 212-002-A**

(1) On the decal (4) attached to the ELT body (3), see the battery expiration date (month/year).

(2) If the date is expired, replace the battery ( [AMM TASK 25-61-04-900-801-A/200](#) ).

K. Follow-on ([Figure 601](#)) ([Figure 602](#)) ([Figure 603](#))


*SUBTASK 842-002-A*

- (1) Install the electrical cover (2).
- (2) Close the toilet speaker panel (1).

EFFECTIVITY: AIRCRAFT WITH ELT ARTEX 110-4

Battery Expiration Date - Inspection

Figure 601

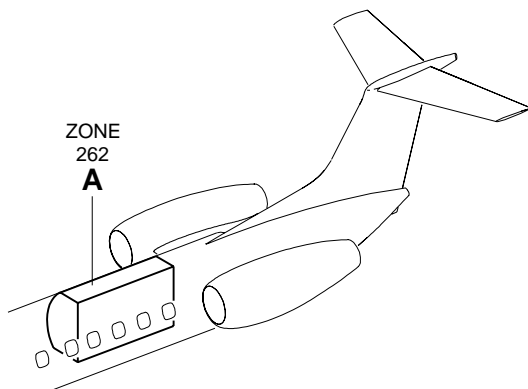


ARTEX AIRCRAFT SUPPLIES, INC.  
P O BOX 1270 CANBY, OR 97013  
(503)265-3959 800-547-8901  
  
BATTERY PACK: ELT 110-4  
EXPIRATION DATE: .....  
PART NO: 452-01300 W.O.\*9269  
  
EN Cat CIR/DC 183/XXXXXXXX88888 TSO C91

DET. D




DET. A

4. BATTERY  
EXPIRATION  
DATE DECAL

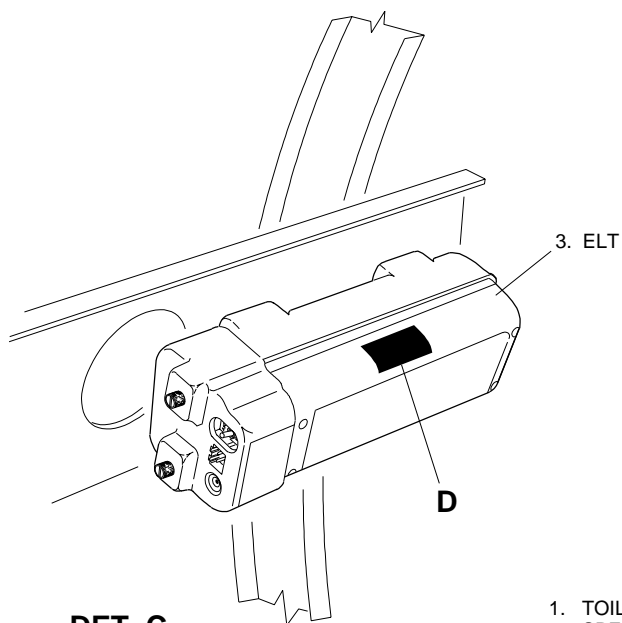

DET. C

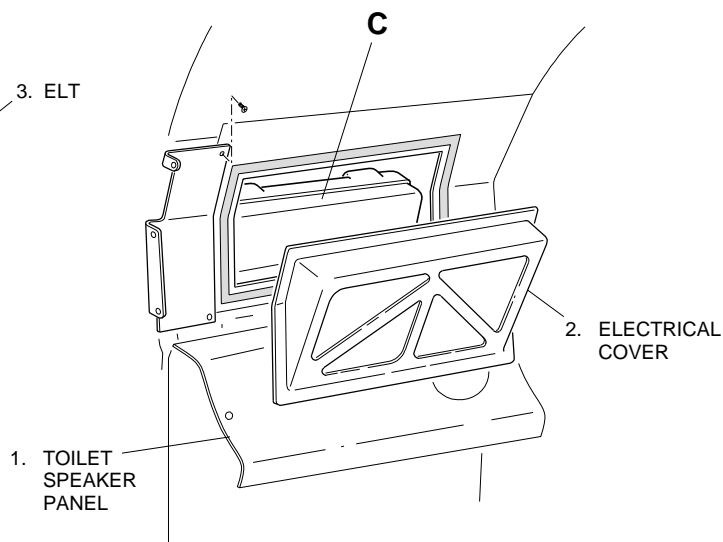


DET. B

145AMM250028.MCE A

**EFFECTIVITY: AIRCRAFT WITH ELT ARTEX C406-2**

Battery Expiration Date - Inspection

Figure 602

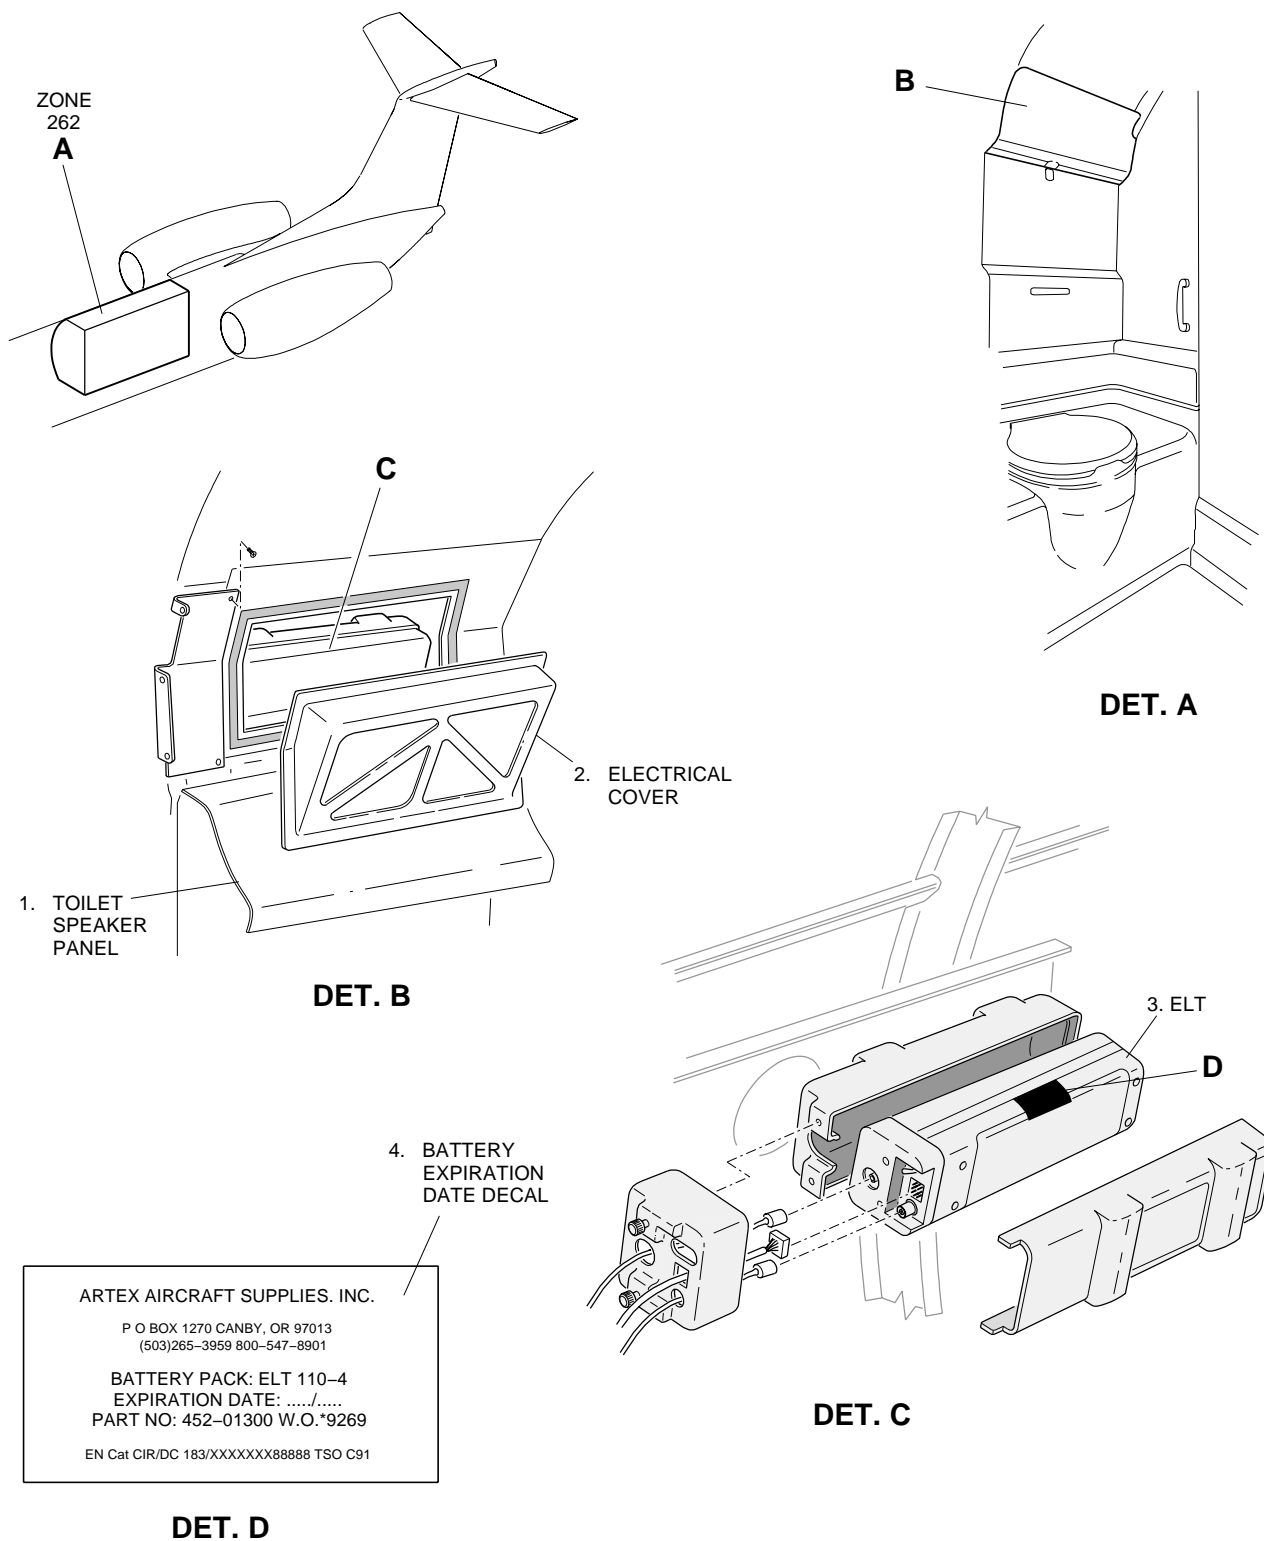

EM145AMM252839A.DGN

## Figure 603

