

EWIS COMPONENTS IN THE CENTER FUSELAGE IV LOWER SIDE - CLEANING/PAINTING

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to clean the EWIS components and floor beam in the center fuselage IV, lower side.
- B. Zones: 161/162.
- C. Zone Boundaries ([AMM MPP 06-41-00/100](#) [AMM MPP 06-41-00/100](#)).
- D. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
05-40-02-100-801-A ♦	EWIS COMPONENTS IN THE CENTER FUSELAGE IV (LOWER SIDE) - CLEANING	ALL

TASK 05-40-02-100-801-A

EFFECTIVITY: ALL

2. EWIS COMPONENTS IN THE CENTER FUSELAGE IV (LOWER SIDE) - CLEANING

A. General

- (1) This procedure obeys the EWIS ICA requirement.
- (2) This task gives the instructions to do SMRD Task Number: 20-00-00-140-003-A00.
- (3) You must clean the EWIS components, lines and floor beams, at center fuselage IV, zones 161/162.
- (4) Do not unlace or displace the electrical wiring and components during the cleaning procedure.
- (5) Do not disconnect electrical connectors during cleaning procedures. If contamination is found, clean only exposed areas.
- (6) Refer to the preparation subtask for access panel information.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-02/100	-
AMM TASK 25-81-01-000-801-A/400	-
AMM TASK 25-81-01-000-802-A/400	-
AMM TASK 25-81-01-000-803-A/400	-
AMM TASK 25-81-01-400-801-A/400	-
AMM TASK 25-81-01-400-802-A/400	-
AMM TASK 25-81-01-400-803-A/400	-
AMM TASK 53-01-02-000-801-A/400	-
AMM TASK 53-01-02-000-802-A/400	-
AMM TASK 53-01-02-400-801-A/400	-
AMM TASK 53-01-02-400-802-A/400	-
WM 20-21-00	-

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
261		Passenger cabin - LH
262		Passenger cabin - RH

D. Tools and Equipment

ITEM	DESCRIPTION	PURPOSE	QTY
Standard	Vacuum cleaner	To clean the area	

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Cloth, Lint-Free	To clean the area	AR

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Center fuselage IV - lower side

I. Preparation

SUBTASK 841-002-A

- (1) Identify the passenger-cabin floor panels of center fuselage IV, at sub-zone 260 (AMM MPP 06-41-02/100), that give access to zones 161/162.
- (2) Remove passenger-cabin floor panels from center fuselage IV at sub-zone 260 to access zones 161/162. Refer to AMM TASK 53-01-02-000-801-A/400 (applicable to EMB-140 and EMB-145 models) or AMM TASK 53-01-02-000-802-A/400 (applicable to EMB-135 model).
- (3) Remove, if necessary, the thermoacoustic insulation from center fuselage IV, at zones 161/162 (AMM TASK 25-81-01-000-801-A/400, AMM TASK 25-81-01-000-802-A/400 or AMM TASK 25-81-01-000-803-A/400, as applicable).

J. EWIS Components in the Center Fuselage IV (Lower Side) - Cleaning (Figure 701) (Figure 702)

SUBTASK 160-002-A

- (1) The cleaning procedure of this task is applicable to the specified components or assemblies of an area/zone.
- (2) Do the cleaning procedure as follows:
 - (a) Use a vacuum cleaner and/or clean and dry cloth to remove the particles from the area under passenger cabin floor, lines and floor beams.
 - (b) If contamination is found, clean the EWIS components. Refer to WM 20-21-00, Section Cleaning Procedures.

K. Follow-on

SUBTASK 842-002-A


- (1) If the thermoacoustic insulation was previously removed, install it at zones 161/162 (AMM TASK 25-81-01-400-801-A/400, AMM TASK 25-81-01-400-802-A/400 or AMM TASK 25-81-01-400-803-A/400), as applicable.

- (2) Install the passenger-cabin floor panels to center fuselage IV, at sub-zone 260 related to zones 161/162. Refer to AMM TASK 53-01-02-400-801-A/400 (applicable to EMB-140 and EMB-145 models) or AMM TASK 53-01-02-400-802-A/400 (applicable to EMB-135 model).

EFFECTIVITY: ALL

EWIS Components in the Center Fuselage IV (Lower Side) - Cleaning

Figure 701

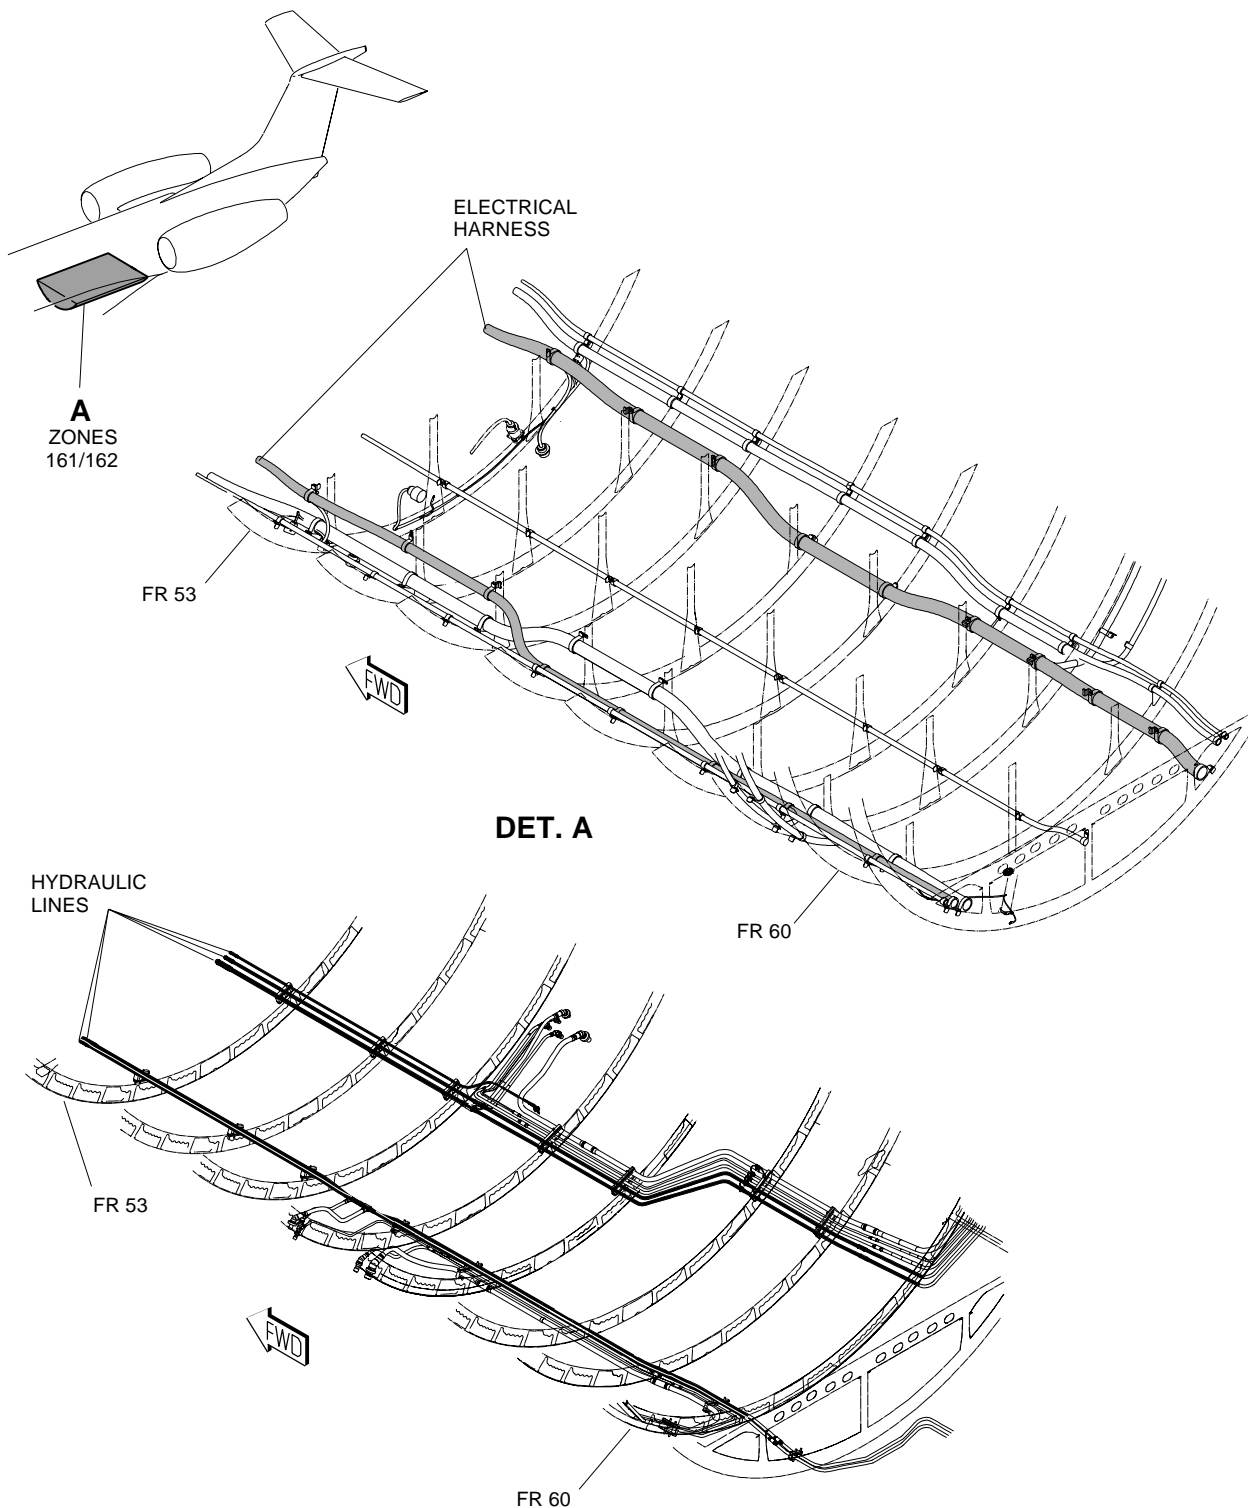


EM145AMM050742A.DGN

EFFECTIVITY: ALL

Floor Beam in the Center Fuselage IV (Lower Side) - Cleaning

Figure 702

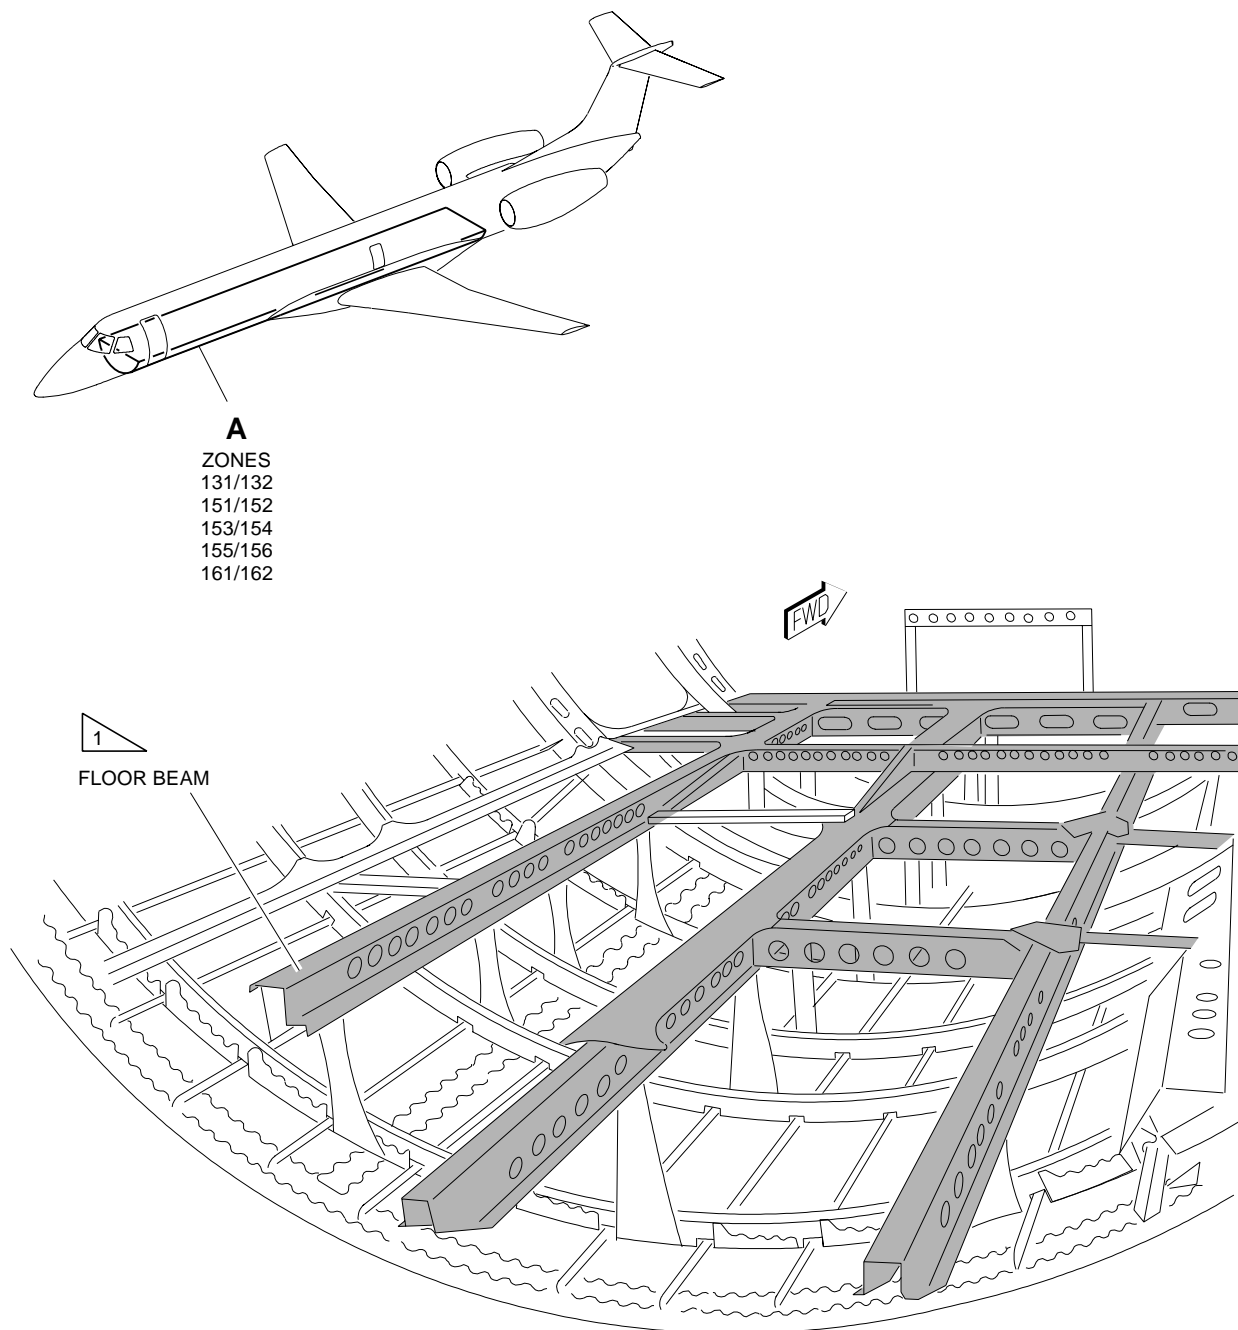

A
 ZONES
 131/132
 151/152
 153/154
 155/156
 161/162

1
 FLOOR BEAM

DET. A

1 MAKE SURE THAT THERE IS NO DUST QUANTITY ON FLOOR BEAM HOLES.

EM145AMM050960A.DGN