

FAUCET SUPPLY TUBING - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the faucet supply tubing.
- B. The faucet supply tubing is installed in the lavatory.
- C. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
38-10-02-000-801-A	FAUCET SUPPLY TUBING - REMOVAL	ALL
38-10-02-400-801-A	FAUCET SUPPLY TUBING - INSTALLATION	ALL

TASK 38-10-02-000-801-A

EFFECTIVITY: ALL

2. FAUCET SUPPLY TUBING - REMOVAL

A. General

(1) This task gives the procedure to remove the faucet supply tubing.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Performs the task	Passenger cabin

H. Preparation

SUBTASK 841-002-A

(1) Make sure that the water tank is empty before you continue.

(2) Make sure that the water supply lines are disconnected.

I. Removal of the Faucet Supply Tubing ([Figure 401](#))

SUBTASK 020-002-A

(1) Remove the drain connect tube (1) from the faucet/tank drain tube (2).

(2) Remove the faucet/tank drain tube (2) from the tee (3).

(3) Remove the tee (3) and the faucet connector tube assembly (4) from the faucet.

(4) Remove the clamp (5) from the water tank tube (9) with the screw (6) the washer (7), and the spacer (8).

(5) Remove the water tank tube (9) from the union (10).


(6) Remove the union (10) and the water tank tube assembly (11) from the water tank.

(7) Remove the water faucet assembly (12).

EFFECTIVITY: ALL

Faucet Supply Tubing - Removal/Installation

Figure 401

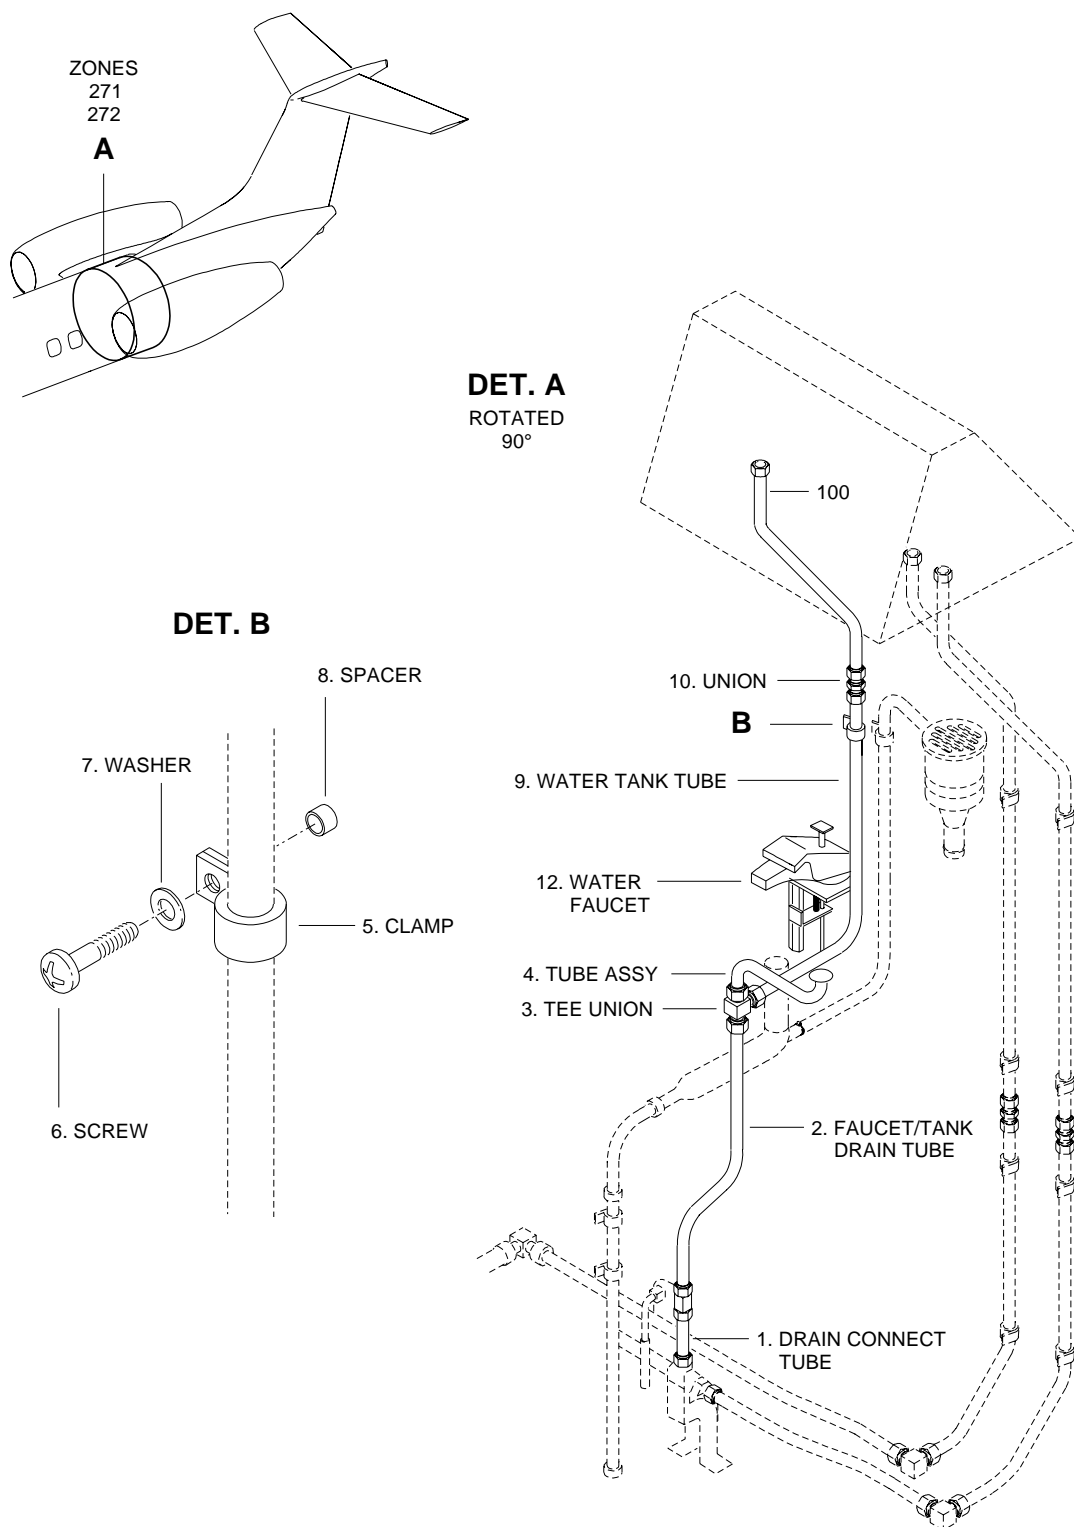

EM145AMM380470A.DGN

TASK 38-10-02-400-801-A

EFFECTIVITY: ALL

3. FAUCET SUPPLY TUBING - INSTALLATION

A. General

(1) This task gives the procedure to install the faucet supply tubing.

B. References

REFERENCE	DESIGNATION
AMM TASK 12-15-01-600-801-A/300	WATER TANK - FILLING

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Performs the task	Passenger cabin

I. Installation of the Faucet Supply Tubing (Figure 401)

SUBTASK 420-002-A

- (1) Install the water faucet assembly (12).
- (2) Connect the water tank tube assembly (11) to the water tank.
- (3) Install the union (10) on the water tank tube assembly (11).
- (4) Connect the water tank tube (9) to the union (10).
- (5) Install the clamp (5) on the water tank tube (9) and attach with the screw (6) the washer (7), and the spacer (8).
- (6) Connect the faucet connector tube assembly (4) to the faucet.
- (7) Install the tee (3) on the faucet connector tube assembly (4).
- (8) Connect the faucet/tank drain tube (2) to the tee (3).

- (9) Connect the drain connect tube (1) to the faucet/tank drain tube (2) and the supply line.
- (10) Pressurize the system and do a check for leaks.

J. Follow-on

SUBTASK 842-002-A

- (1) Fill the water tank ([AMM TASK 12-15-01-600-801-A/300](#)).
- (2) Connect outside water supply and test for leaks.

