

CARGO LOADING/UNLOADING RAMP - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures for the removal/installation of the cargo loading/unloading ramp.
- B. The cargo loading/unloading ramp is installed in the baggage compartment, at zone 271.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-50-03-000-802-A	CARGO LOADING/UNLOADING RAMP - REMOVAL	ALL
25-50-03-400-802-A	CARGO LOADING/UNLOADING RAMP - INSTALLATION	ALL

TASK 25-50-03-000-802-A

EFFECTIVITY: ALL

2. CARGO LOADING/UNLOADING RAMP - REMOVAL

A. General

(1) This task gives the procedures for the removal of the cargo loading/unloading ramp.

B. References

REFERENCE	DESIGNATION
AMM SDS 52-30-00/1	

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

I. Preparation

SUBTASK 841-002-A

(1) Make sure that the aircraft is safe for maintenance.

(2) Open the baggage compartment door ([AMM SDS 52-30-00/1](#)).

J. Removal ([Figure 401](#))

SUBTASK 020-002-A

(1) Lift the cargo loading/unloading ramp (3).


(2) Remove the screws (1) and washers (2).

(3) Remove the cargo loading/unloading ramp (1).

EFFECTIVITY: ALL

Cargo Loading/Unloading Ramp - Removal/Installation

Figure 401

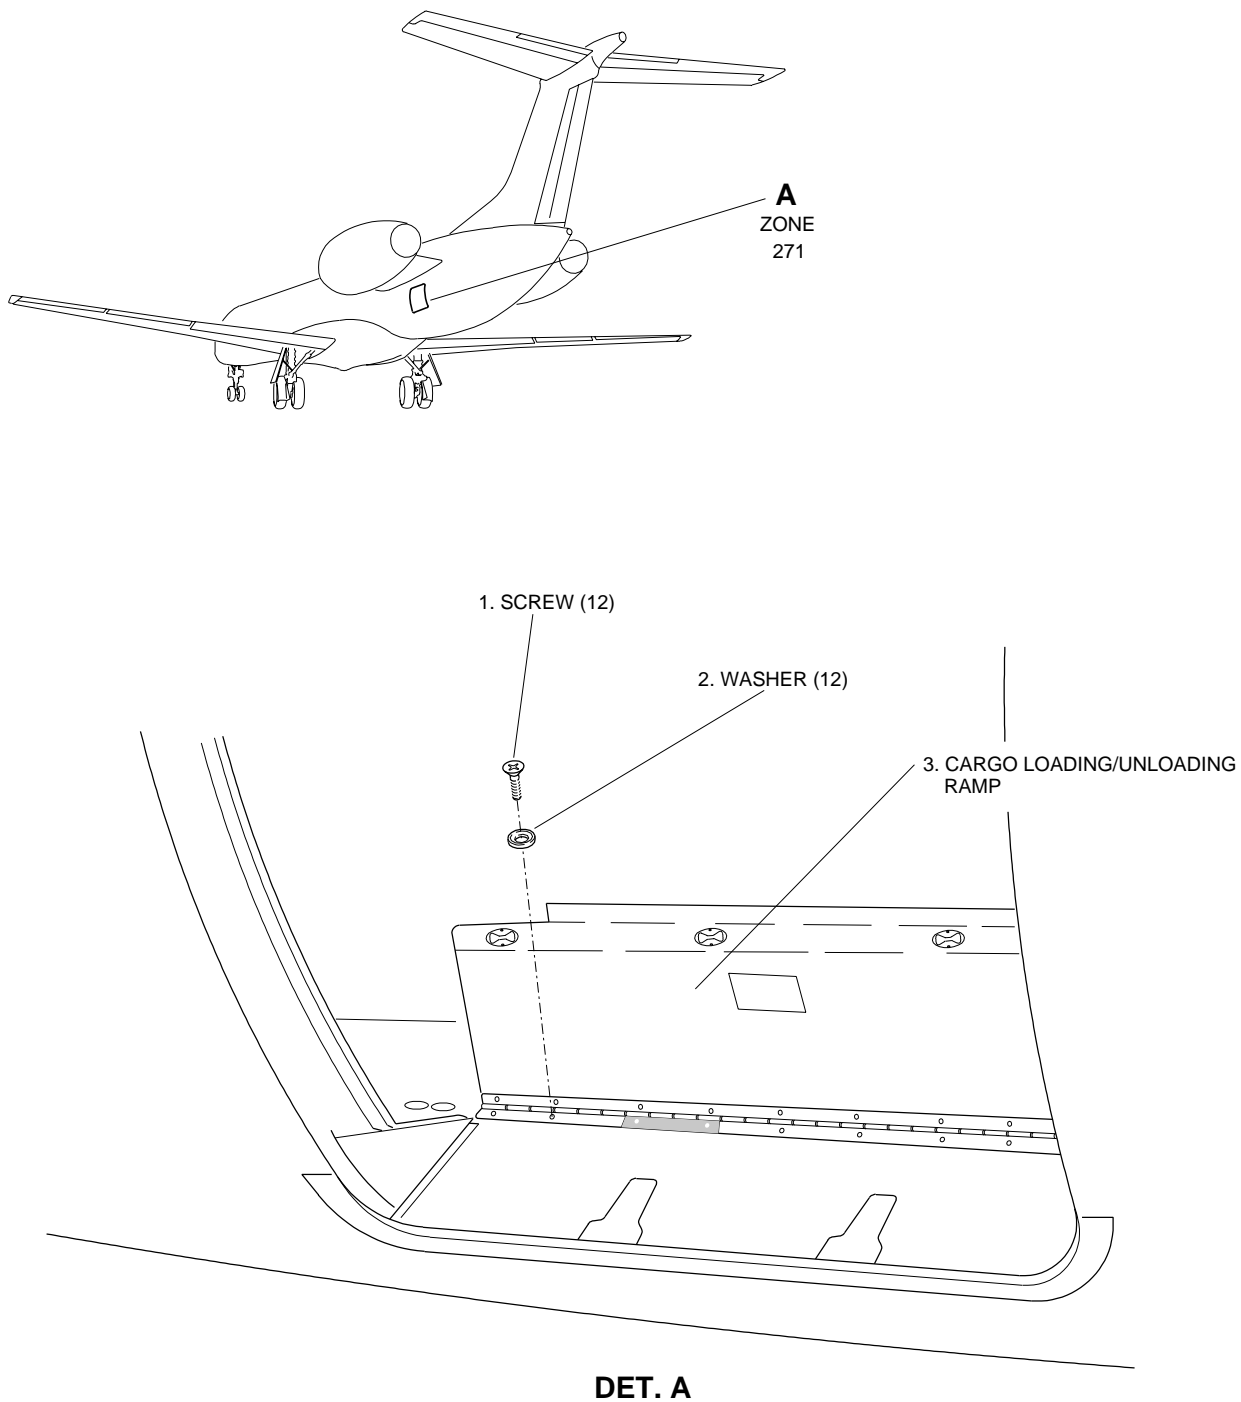

145AMM250114.MCE

TASK 25-50-03-400-802-A

EFFECTIVITY: ALL

3. CARGO LOADING/UNLOADING RAMP - INSTALLATION

A. General

(1) This task gives the procedures for the installation of the cargo loading/unloading ramp.

B. References

REFERENCE	DESIGNATION
AMM SDS 52-30-00/1	

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

I. Installation (Figure 401)

SUBTASK 420-002-A

(1) Put the cargo loading/unloading ramp (3) in the installation position.

(2) Install the cargo loading/unloading ramp (3) with the screws (1) and washers (2).

J. Follow-on

SUBTASK 842-002-A

(1) Close the baggage compartment door ([AMM SDS 52-30-00/1](#)).