

SELCAL ANNUNCIATOR PANEL - REMOVAL/INSTALLATION

EFFECTIVITY: AIRCRAFT EQUIPPED WITH SELCAL SYSTEM

1. General

- A. This section gives the procedures to remove and install the SELCAL Annunciator Panel.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
23-21-02-000-801-A	SELCAL ANNUNCIATOR PANEL - REMOVAL	AIRCRAFT EQUIPPED WITH SELCAL SYSTEM
23-21-02-400-801-A	SELCAL ANNUNCIATOR PANEL - INSTALLATION	AIRCRAFT EQUIPPED WITH SELCAL SYSTEM

TASK 23-21-02-000-801-A

EFFECTIVITY: AIRCRAFT EQUIPPED WITH SELCAL SYSTEM

2. SELCAL ANNUNCIATOR PANEL - REMOVAL

A. General

(1) This procedure gives the instructions to remove the Annunciator Panel.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Does the task	In the cockpit, on the main instrument panel

H. Preparation

SUBTASK 841-002-A

(1) On the circuit breaker panel, open the SELCAL circuit breaker and attach a DO-NOT-CLOSE tag to it.

I. Removal [\(Figure 401\)](#) [\(Figure 402\)](#) [\(Figure 403\)](#)



SUBTASK 020-002-A

- (1) Release the two turnlock fasteners (2).
- (2) Carefully pull the Annunciator Panel (3).
- (3) Disconnect the electrical connector (1).
- (4) Remove the Annunciator Panel (3).

EFFECTIVITY: AIRCRAFT WITH SELCAL SYSTEM

SELCAL Annunciator Panel - Removal/Installation

Figure 401

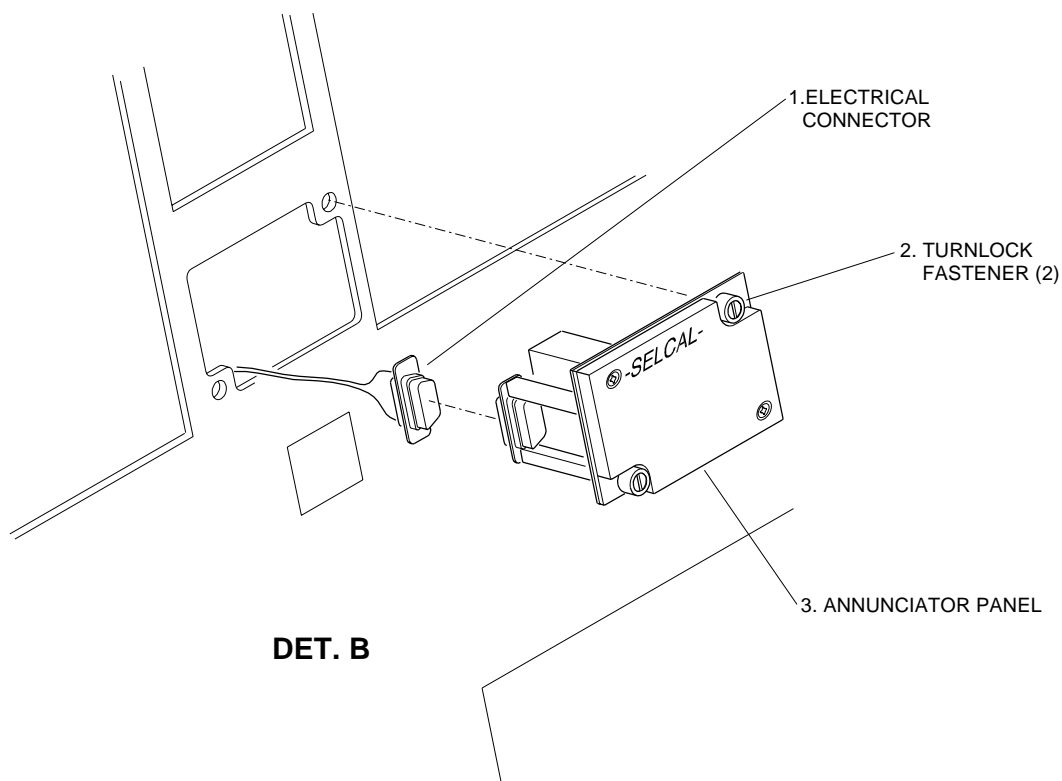
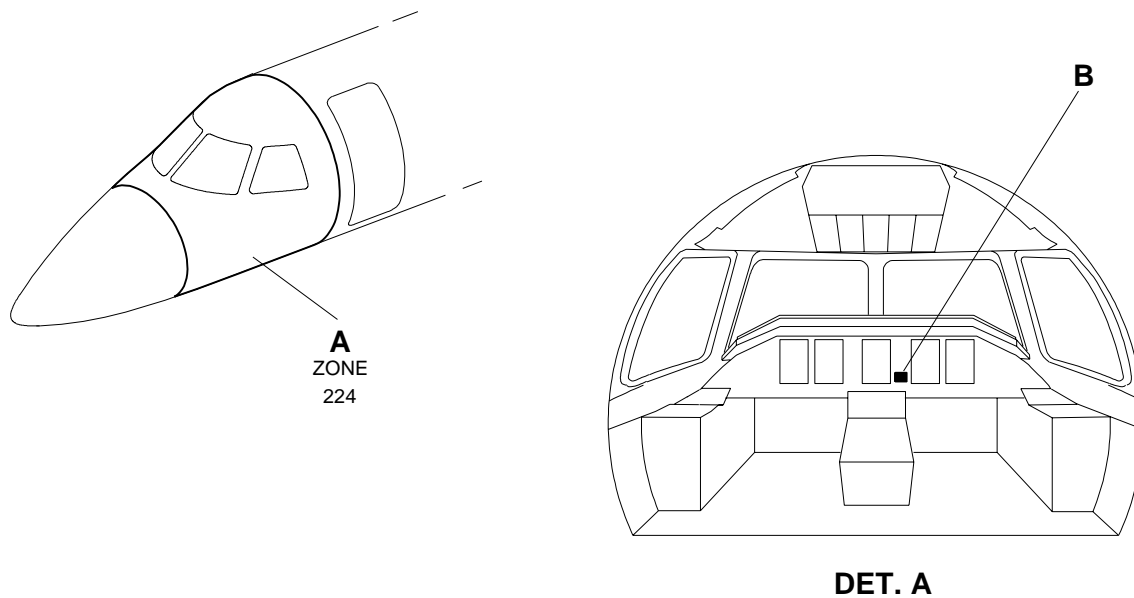


EM145AMM230128B.DGN

EFFECTIVITY: AIRCRAFT WITH SELCAL SYSTEM

SELCAL Annunciator Panel (Aircraft with RMU's on Main Panel)- Removal/Installation

Figure 402

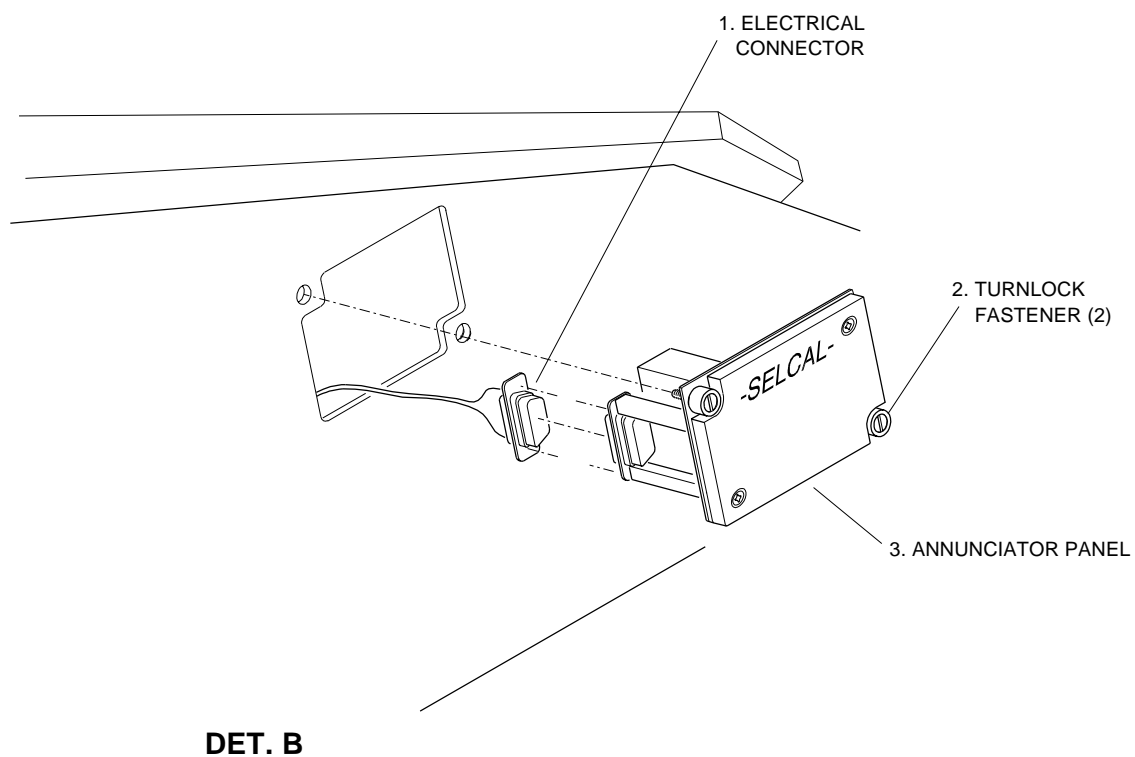
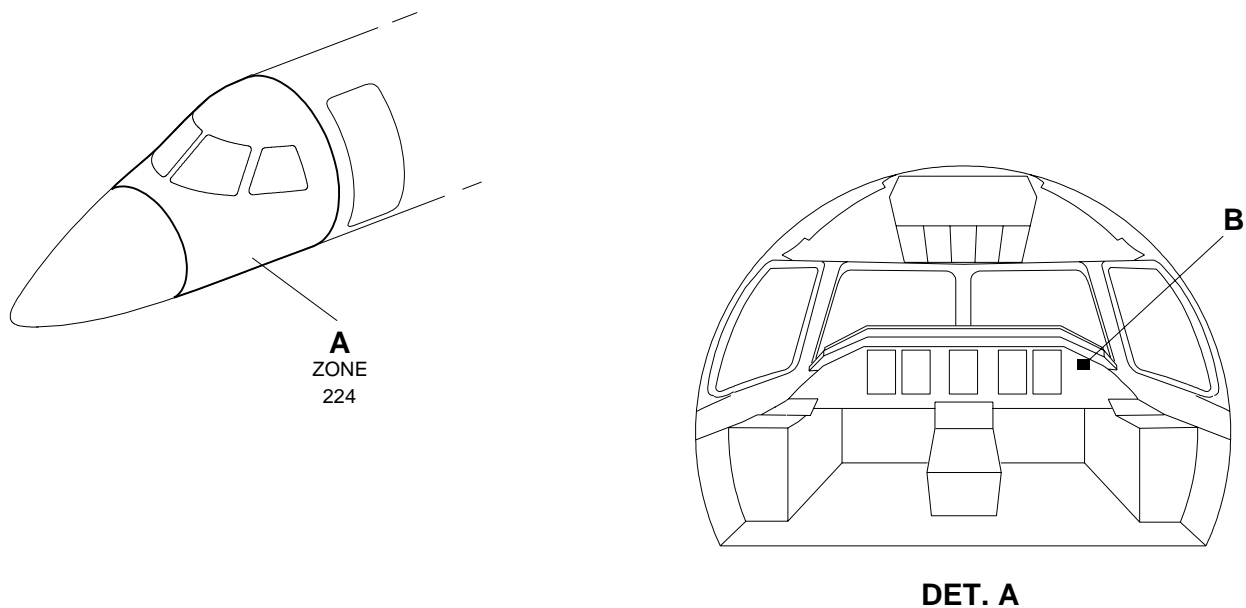


EM145AMM230252A.DGN

EFFECTIVITY: AIRCRAFT WITH SELCAL SYSTEM

SELCAL Annunciator Panel (Aircraft with RMU's on Main Panel)- Removal/Installation

Figure 403

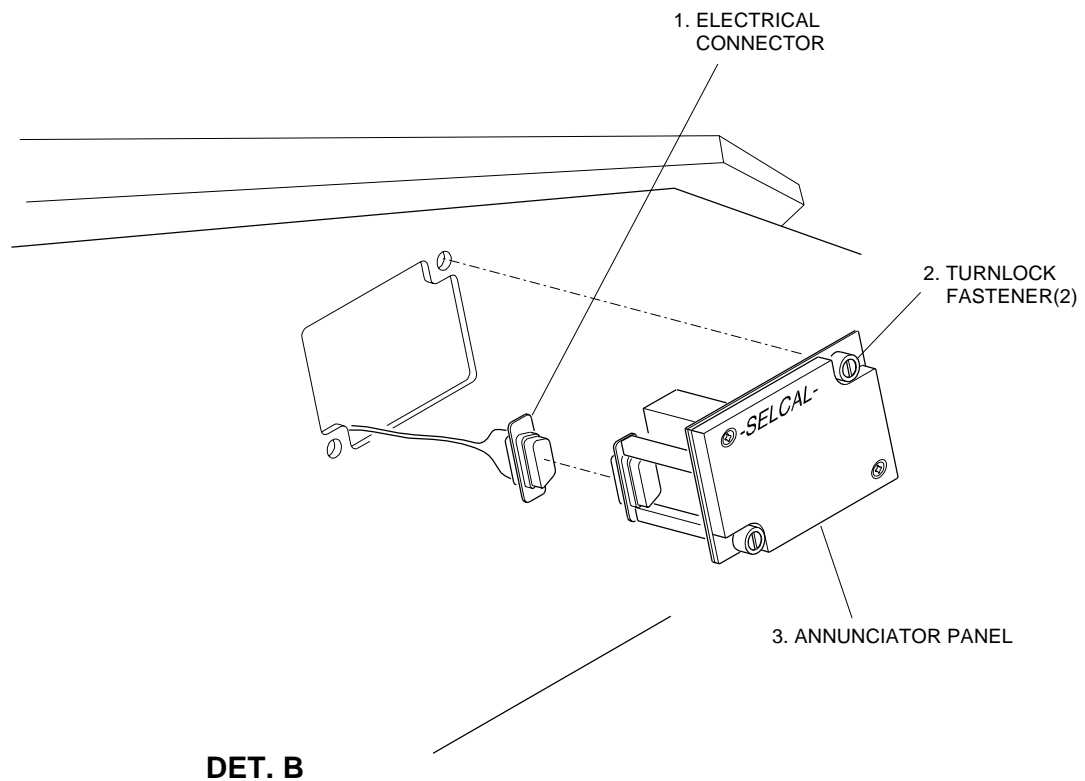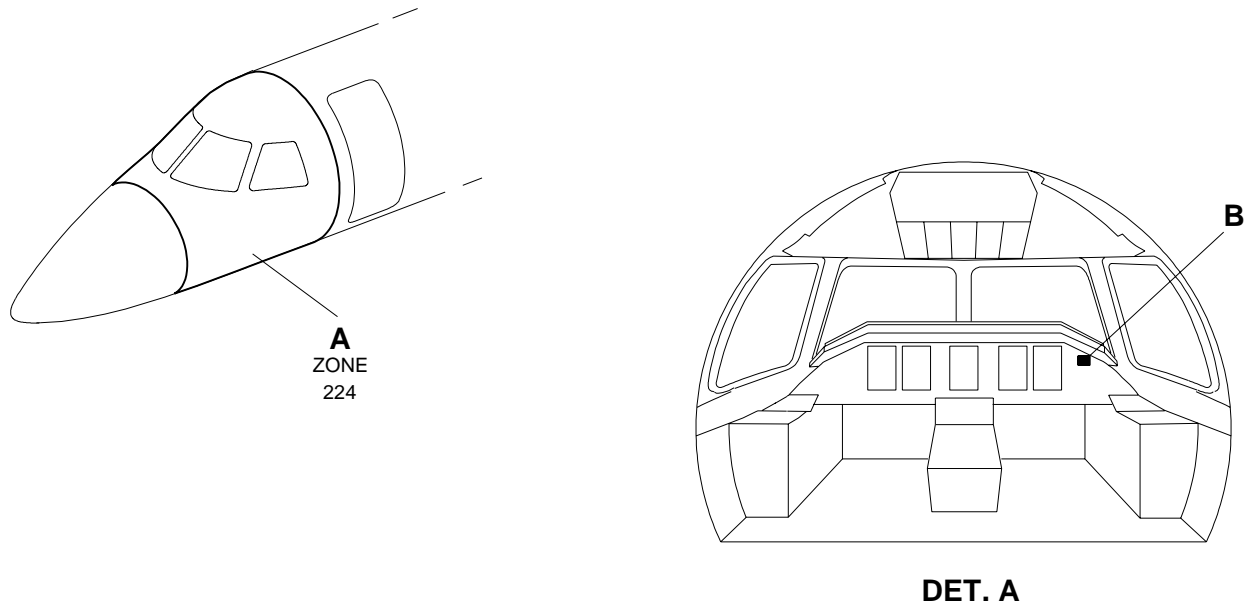

EM145AMM231037A.DGN

TASK 23-21-02-400-801-A

EFFECTIVITY: AIRCRAFT EQUIPPED WITH SELCAL SYSTEM

3. SELCAL ANNUNCIATOR PANEL - INSTALLATION

A. General

(1) This procedure gives the instructions to install the Annunciator Panel.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Does the task	In the cockpit, on the main instrument panel

H. Installation (Figure 401) (Figure 402) (Figure 403)

SUBTASK 420-002-A

(1) Connect the electrical connector (1).

(2) Install the Annunciator Panel (3) in its installation position.

(3) Attach the two turnlock fasteners (2).

I. Follow-on

SUBTASK 842-002-A

(1) On the circuit breaker panel, close the SELCAL circuit breaker and remove the DO-NOT-CLOSE tag from it.