

## COCKPIT-UNDERFLOOR ACCESS HATCH - INSPECTION/CHECK

*EFFECTIVITY: ALL*

### 1. General

- A. This section gives the procedures to do an inspection on the cockpit underfloor access-hatch mechanism.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
52-42-01-200-801-A ♦	COCKPIT UNDERFLOOR ACCESS-HATCH MECHANISM - DETAILED INSPECTION	ALL

TASK 52-42-01-200-801-A

EFFECTIVITY: ALL

## 2. COCKPIT UNDERFLOOR ACCESS-HATCH MECHANISM - DETAILED INSPECTION

### A. General

- (1) This task gives the procedures to do an inspection on the cockpit underfloor access-hatch mechanism.

### B. References

REFERENCE	DESIGNATION
<a href="#">AMM TASK 52-42-01-000-801-A/400</a>	COCKPIT UNDERFLOOR ACCESS HATCH - REMOV- AL
<a href="#">AMM TASK 52-42-01-400-801-A/400</a>	COCKPIT UNDERFLOOR ACCESS HATCH - INSTAL- LATION

### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
123	123BL	Area below the cockpit floor - LH

### D. Tools and Equipment

Not Applicable

### E. Auxiliary Items

Not Applicable

### F. Consumable Materials

Not Applicable

### G. Expandable Parts

Not Applicable

### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	In the maintenance shop

### I. Preparation

**SUBTASK 841-002-A**

**CAUTION:** AFTER YOU REMOVE THE COCKPIT UNDERFLOOR ACCESS HATCH, PUT IT ON A SAFE SURFACE TO PREVENT SCRATCHES.

- (1) Remove the cockpit underfloor access hatch ([AMM TASK 52-42-01-000-801-A/400](#)).

### J. Inspect (Detailed Inspection) Cockpit Underfloor Access Hatch Mechanism ([Figure 601](#))

**SUBTASK 220-002-A**

- (1) With the mechanism on the locked position, examine the bellcrank, the lock rod, the lock pin, and the door lock ([Figure 601](#)).

- (2) After you examine the components, actuate the handle and move the mechanism to the unlocked position and examine the parts of the lock pin which were inside the door lock.

K. Follow-on


*SUBTASK 842-002-A*

- (1) Install the cockpit underfloor access hatch ([AMM TASK 52-42-01-400-801-A/400](#)).

EFFECTIVITY: ALL

Cockpit Underfloor Access Hatch - Detailed Inspection

Figure 601

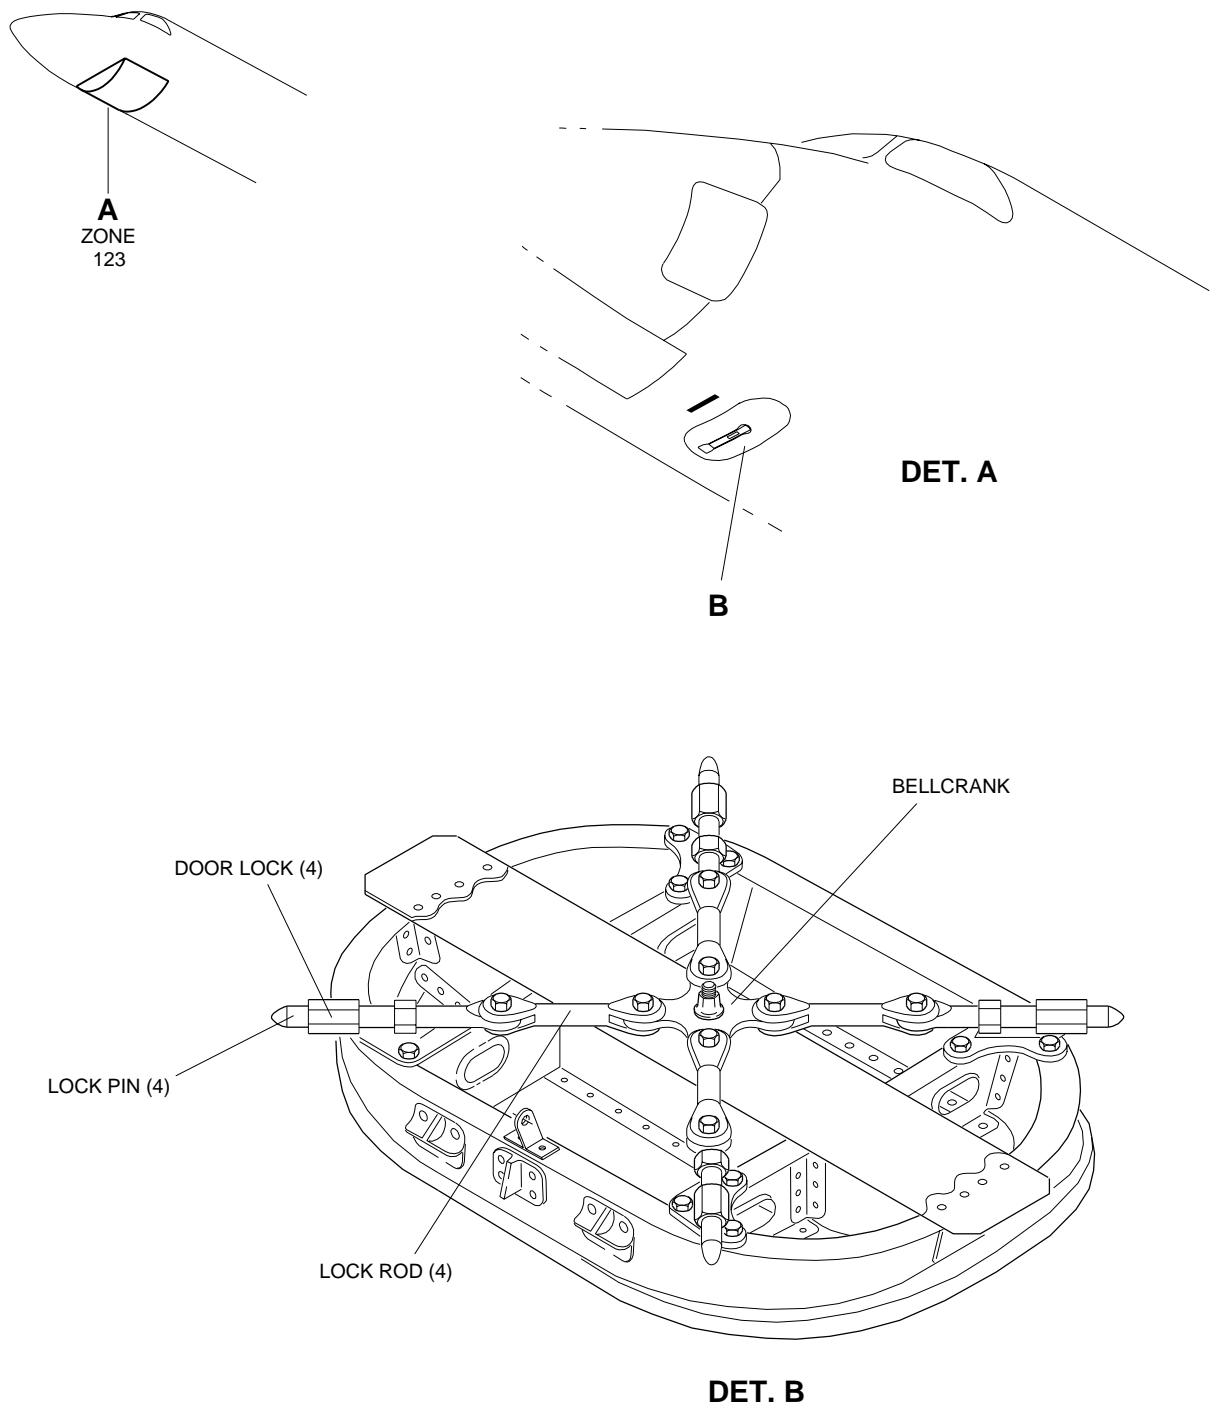

145AMM520481.MCE