

BAGGAGE DOOR LOCK - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the lock of the baggage door.
- B. These procedures are applicable to the two locks of the baggage door.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
52-31-02-000-801-A	BAGGAGE DOOR LOCK - REMOVAL	ALL
52-31-02-400-801-A	BAGGAGE DOOR LOCK - INSTALLATION	ALL

TASK 52-31-02-000-801-A

EFFECTIVITY: ALL

2. BAGGAGE DOOR LOCK - REMOVAL

A. General

(1) This procedure gives the instructions to remove the lock of the baggage door.

B. Zones and Accesses

<i>ZONE</i>	<i>PANEL/DOOR</i>	<i>LOCATION</i>
813		Baggage door

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Does the task	Baggage door

H. Preparation

SUBTASK 841-002-A

(1) Open the baggage door.

I. Removal [\(Figure 401\)](#)

SUBTASK 020-002-A


(1) Remove the nut (2), washer (3), and bolt (4).

(2) Remove the lock (1).

EFFECTIVITY: ALL

Lock - Removal/Installation

Figure 401

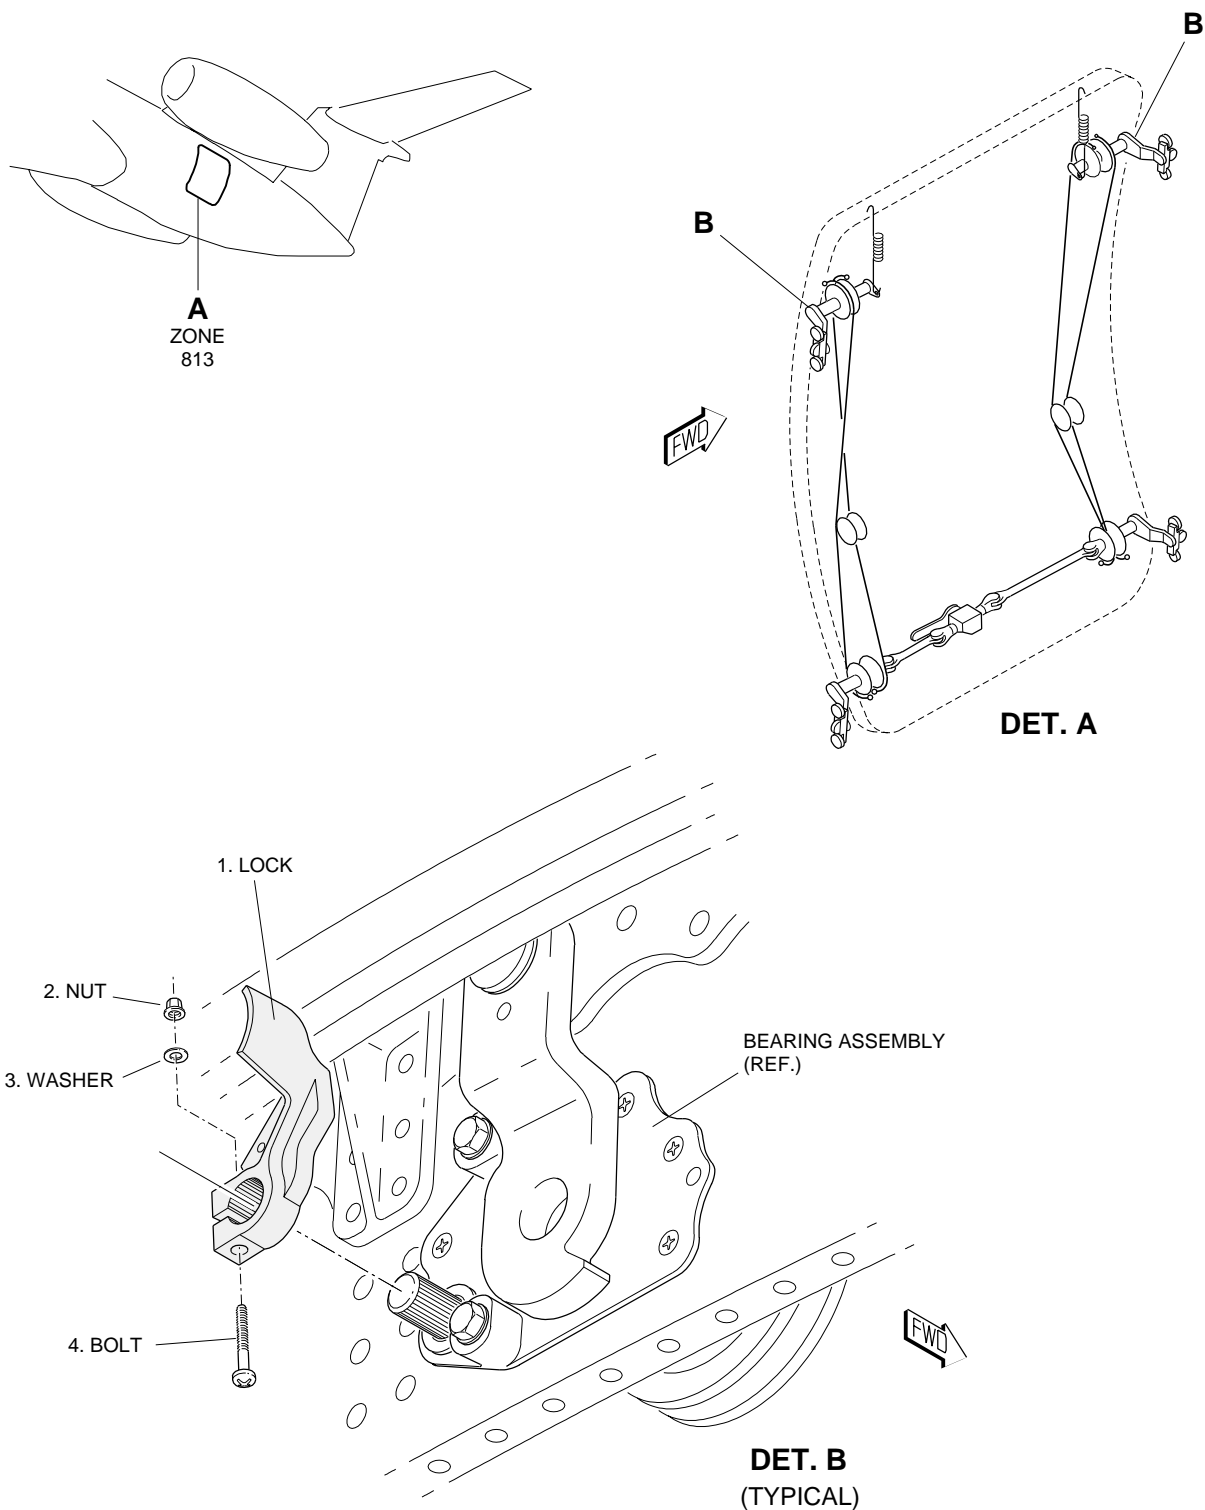

145AMM520132.MCE B

TASK 52-31-02-400-801-A

EFFECTIVITY: ALL

3. BAGGAGE DOOR LOCK - INSTALLATION

A. General

(1) This procedure gives the instructions to install the lock of the baggage door.

B. References

REFERENCE	DESIGNATION
AMM TASK 52-31-00-700-801-A/500	BAGGAGE-DOOR ACTUATING AND LOCKING MECHANISM - OPERATIONAL TEST/ADJUSTMENT

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
813		Baggage door

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Baggage door

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Put the lock (1) in its installation position.
- (2) Install the bolt (4), washer (3), and nut (2).

J. Follow-on

SUBTASK 842-002-A

- (1) Do an operational check of the locking/unlocking mechanism of the baggage door ([AMM TASK 52-31-00-700-801-A/500](#)).
- (2) Close the baggage door.