

MEGAPHONE - MAINTENANCE PRACTICES

EFFECTIVITY: ALL

1. General

- A. This section gives the procedure to discard the megaphone batteries.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-60-04-960-801-A ◆	MEGAPHONE BATTERY - DISCARD	ALL

TASK 25-60-04-960-801-A

EFFECTIVITY: ALL

2. MEGAPHONE BATTERY - DISCARD

A. General

- (1) This task gives the procedure to discard the megaphone batteries.
- (2) The megaphone is attached by a clamp in a specified support and is installed inside of the outboard galley or the RH wardrobe.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

<i>QTY</i>	<i>FUNCTION</i>	<i>PLACE</i>
1	Does the task	Passenger cabin

H. Discard of Megaphone Batteries ([Figure 201](#))


SUBTASK 960-002-A

- (1) On the outboard galley or the RH wardrobe, open the access door.
- (2) Discard the batteries (5) of the megaphone (3) as follows:
 - (a) Open the clamp (4) and remove the megaphone (3) from its support.
 - (b) Remove the screws (1) that attach the microphone and mouthpiece assembly (6) to housing (2).
 - (c) Pull the microphone and mouthpiece assembly (6) to remove it from the housing (2).
 - (d) Tilt the megaphone (3) and remove the batteries (5) from the housing (2). Discard the batteries(5) in the correct location.
 - (e) Put new batteries (5) in the housing (2).

NOTE: Make sure that the poles of the new batteries are in the correct position before you put each battery in its compartment.

- (f) Put the microphone and mouthpiece assembly (6) in their installation position and install the screws (1).
- (g) Put the megaphone (3) back on the support and close the clamp (4).
- (3) On the outboard galley or the RH wardrobe, close the access door.

EFFECTIVITY: ALL
Megaphone Batteries - Discard
Figure 201

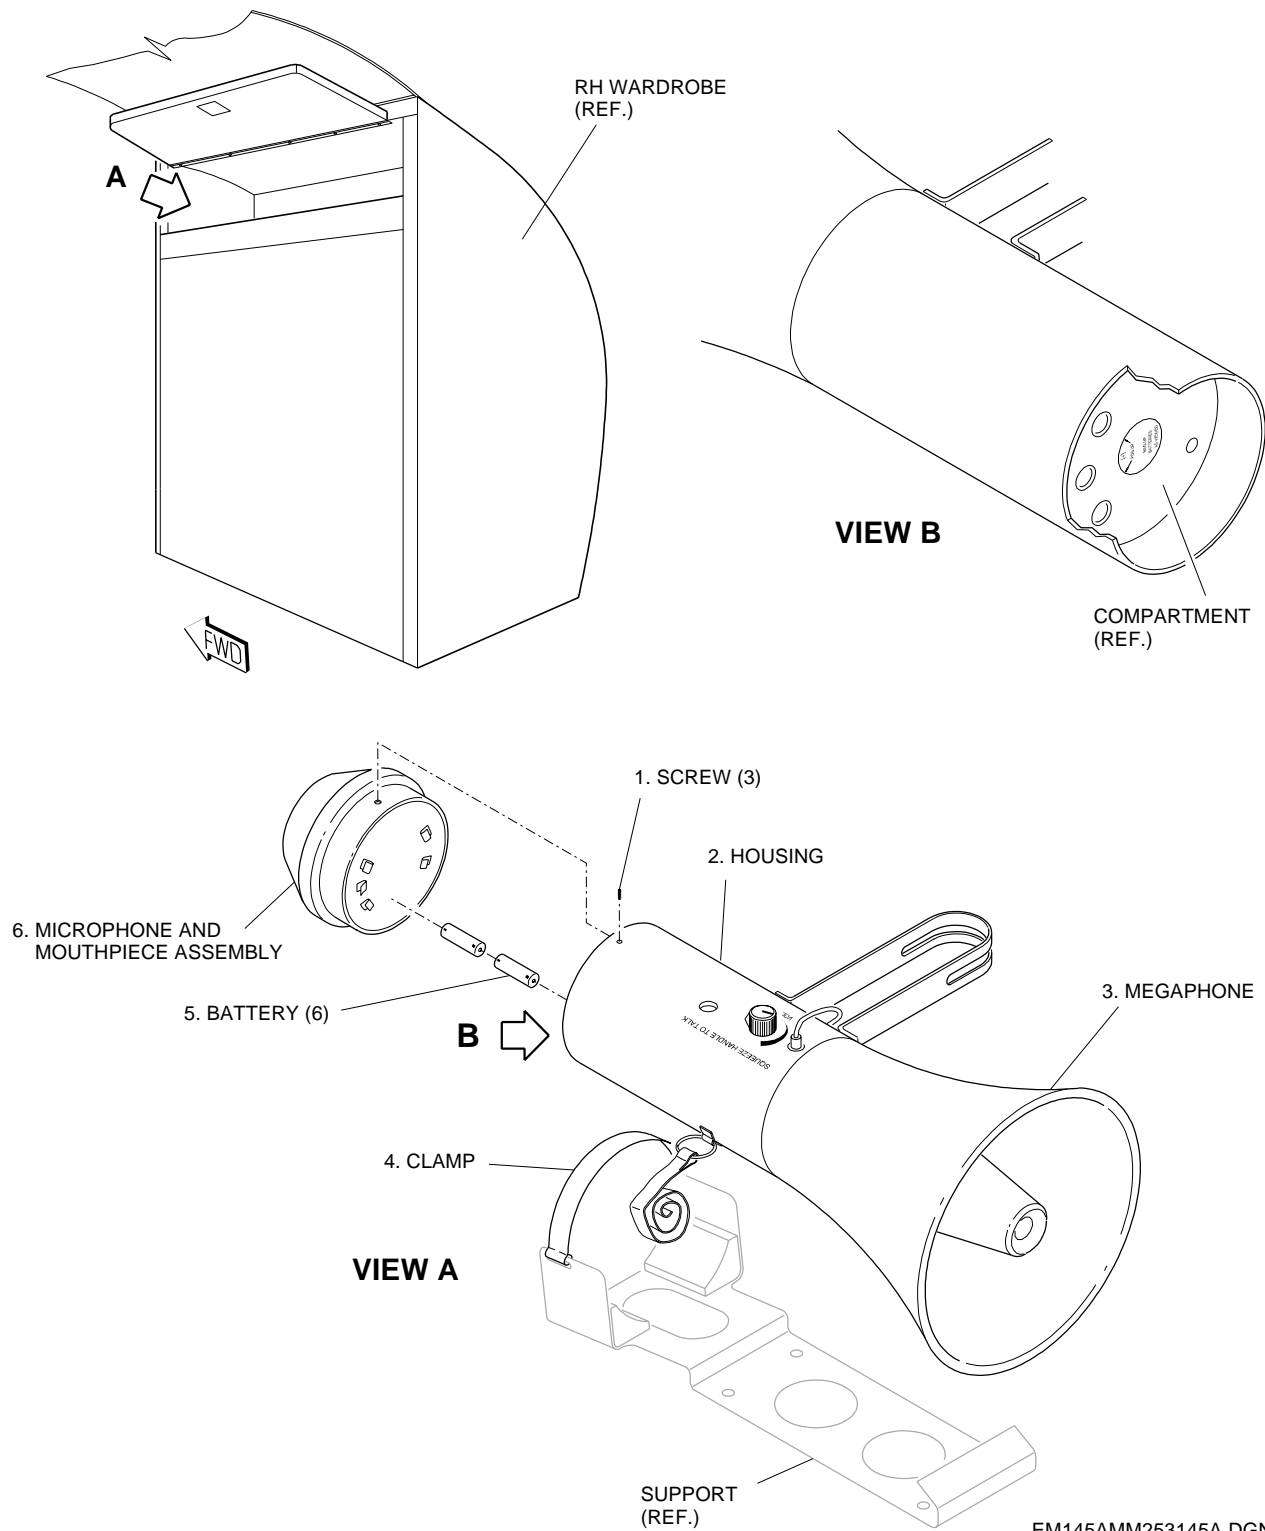

EM145AMM253145A.DGN