

PORTABLE FIRE EXTINGUISHING SYSTEM - INSPECTION/CHECK

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to do the inspection on the portable fire extinguishers.
- B. Figure 601 shows the locations of the portable fire extinguishers in the passenger cabin and cockpit.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
26-24-00-200-802-A ♦	PORTABLE FIRE EXTINGUISHERS - WEIGHT INSPECTION	ALL
26-24-00-200-803-A ♦	PORTABLE FIRE EXTINGUISHERS - VIS- UAL INSPECTION	ALL

TASK 26-24-00-200-802-A

EFFECTIVITY: ALL

2. PORTABLE FIRE EXTINGUISHERS - WEIGHT INSPECTION

A. General

- (1) This task gives the procedures to do the check of the portable fire extinguishers for the correct weight.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit/Passenger cabin

H. Inspect Portable Fire Extinguishing Bottle for Weight (Figure 601)

SUBTASK 280-002-A

- (1) Weigh the fire extinguisher bottles. Refer to the placard attached to the bottles.

TASK 26-24-00-200-803-A

EFFECTIVITY: ALL

3. PORTABLE FIRE EXTINGUISHERS - VISUAL INSPECTION

A. General

- (1) This task gives the procedures to do the visual inspection of the portable fire extinguishers for integrity and general condition.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit/Passenger cabin

H. Visually Check Portable Fire Extinguishers ([Figure 601](#))


SUBTASK 211-002-A

- (1) Do a visual inspection of the portable fire extinguishers:
- Inspect the extinguisher for exterior damage and corrosion.
 - Inspect the nozzle or hose, as applicable, for obstructions.
 - Inspect the pull-out and pull-tight seal for damage and correct installation.
 - If applicable, inspect the pressure gauge. Make sure the indicator is in the green section.

EFFECTIVITY: ALL

Portable Fire Extinguishers - Component Locations

Figure 601

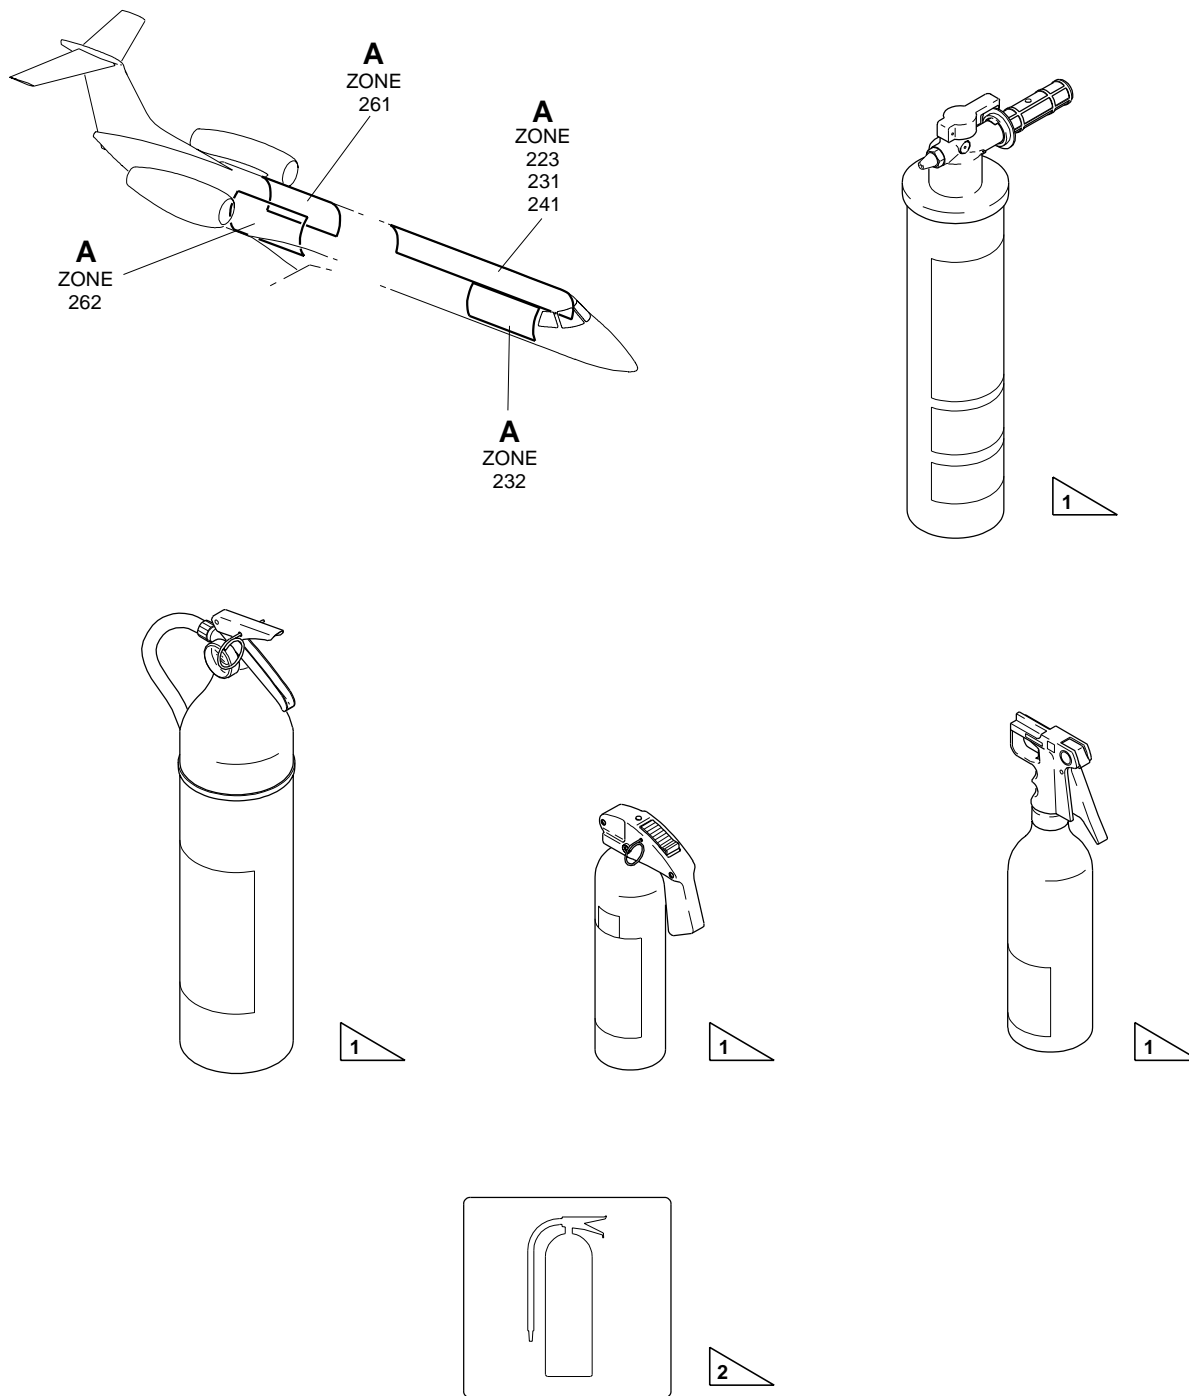

1 ONLY CONSIDER THE TYPE AND LOCATION OF THE FIRE
EXTINGUISHERS APPLICABLE TO YOUR AIRCRAFT CONFIGURATION.

2 FIRE EXTINGUISHER GLYPH

145AMM260191.MCE A