

FUEL FILLER CAP SEAL - INSPECTION/CHECK

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to do the inspection of the fuel filler cap seal.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

<i>TASK NUMBER</i>	<i>DESCRIPTION</i>	<i>EFFECTIVITY</i>
28-11-05-200-801-A	FUEL FILLER CAP SEAL - INSPECTION	ALL

TASK 28-11-05-200-801-A

EFFECTIVITY: ALL

2. FUEL FILLER CAP SEAL - INSPECTION

A. General

(1) This task permits you to examine the condition of the seal of the fuel filler cap.

B. References

REFERENCE	DESIGNATION
AMM MPP 28-00-00/200	- MAINTENANCE PRACTICES

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Ladder	To get access to the wing top	1

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Wing top surface

I. Preparation

SUBTASK 841-002-A

WARNING: BEFORE YOU DO THE TASK, OBEY THE SAFETY PRECAUTIONS GIVEN IN AMM MPP 28-00-00/200 TO PREVENT INJURY TO PERSONS AND DAMAGE TO THE MATERIAL.

(1) Put the ladder in the work area.

J. Inspect Fuel Filler Cap (Figure 601)

SUBTASK 212-002-A

(1) Remove the fuel filler cap and examine the seal for general condition. If necessary, replace or repair as required.

K. Follow-on




SUBTASK 842-002-A

- (1) Remove the ladder.

EFFECTIVITY: ALL

Fuel Filler Cap Seal Inspection - Component Locations

Figure 601

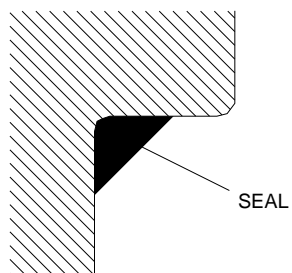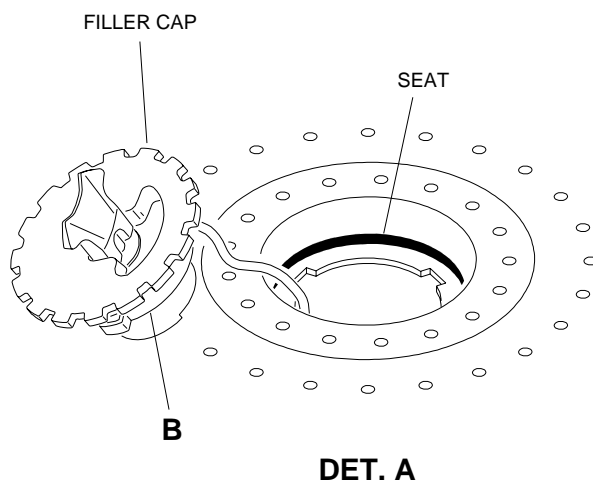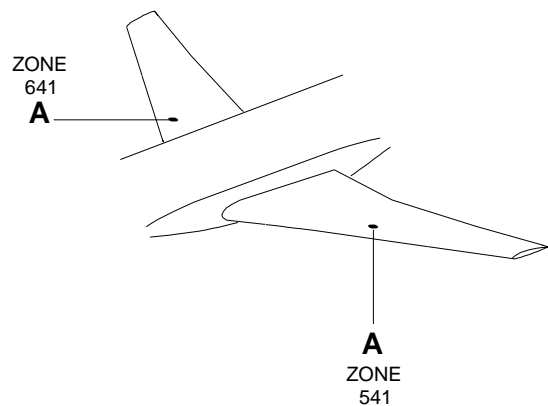

DET. B

145AMM280005.MCE A