

ZONAL-ATTENDANT-CALL ANNUNCIATOR - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove and install the zonal-attendant-call annunciator.
- B. The aircraft has four zonal-attendant-call annunciators.
- C. The zonal-attendant-call annunciators are installed in the passenger cabin, on the ceiling lining panels.
- D. Obey the safety precautions below, when you work on the switch of the zonal-attendant-call annunciator:
 - Disconnect the electrical power.
 - Always use insulated tools when you work on or near electrical circuits.
- E. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
33-25-05-000-801-A	ZONAL-ATTENDANT-CALL ANNUNCIATOR - REMOVAL	ALL
33-25-05-400-801-A	ZONAL-ATTENDANT-CALL ANNUNCIATOR - INSTALLATION	ALL

TASK 33-25-05-000-801-A

EFFECTIVITY: ALL

2. ZONAL-ATTENDANT-CALL ANNUNCIATOR - REMOVAL

A. General

(1) This procedure gives the instructions to remove the zonal-attendant-call annunciator.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-30-00/100	-
AMM TASK 25-22-04-000-801-A/400	-
AMM TASK 25-22-04-000-802-A/400	-

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
243	243ALC	Passenger cabin
243	243DLC	Passenger cabin
253	253CLC	Passenger cabin
263	263ALC	Passenger cabin

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

I. Preparation

SUBTASK 841-002-A

- (1) On the LH Electrical Power Control/Distribution Box, open the RDNG LT/ATTD CALL 1 circuit breaker and attach a DO-NOT-CLOSE tag to it.
- (2) On the RH Electrical Power Control/Distribution Box, open the RDNG LT/ATTD CALL 2 and RDNG LT/ATTD CALL 3 circuit breakers and attach a DO-NOT-CLOSE tag to them.

- (3) Remove headliner panels 243ALC, 243DLC, 253CLC, and 263ALC (AMM MPP 06-30-00/100). Refer to Standard Headliner Panel - Removal (AMM TASK 25-22-04-000-801-A/400 or AMM TASK 25-22-04-000-802-A/400, as applicable).

J. Removal [\(Figure 401\)](#)


SUBTASK 020-002-A

- (1) Disconnect the electrical connector (1).
- (2) Remove the clamp (2).
- (3) Remove the zonal attendant call annunciator (3) from the headliner.

EFFECTIVITY: ALL

Zonal-Attendant-Call Annunciator - Removal/Installation

Figure 401

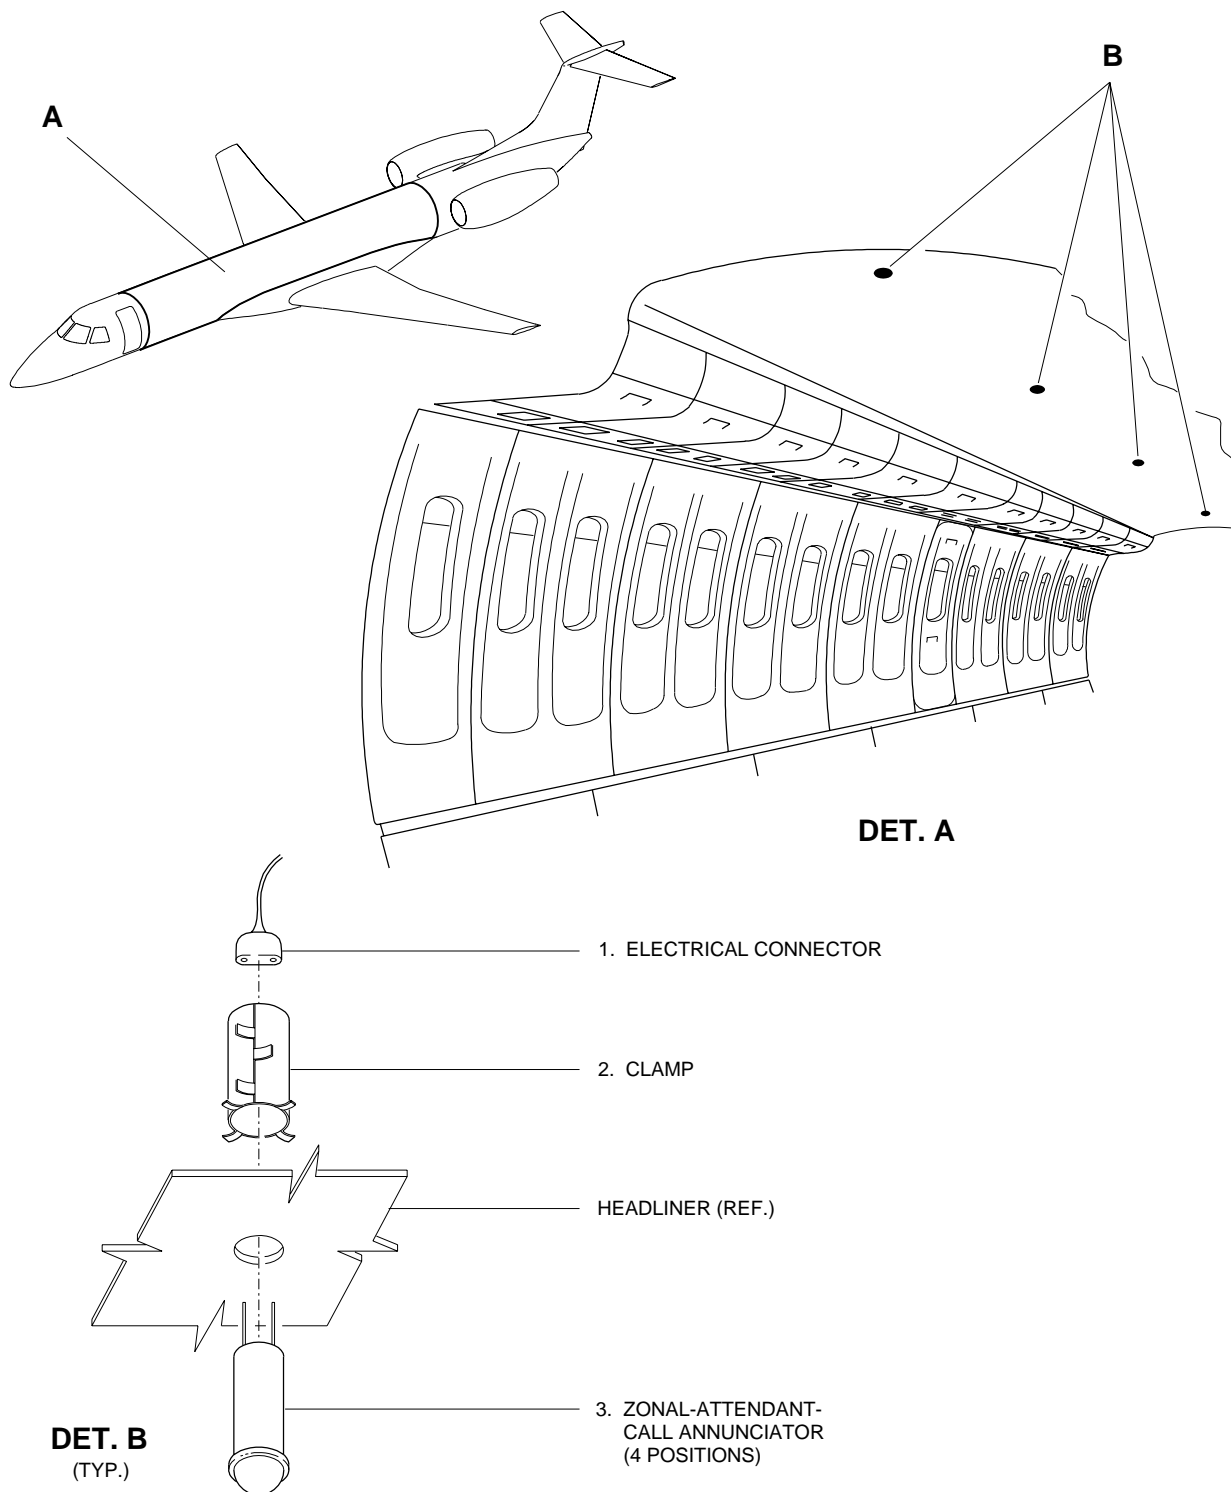

145AMM330114.MCE B

TASK 33-25-05-400-801-A
EFFECTIVITY: ALL

3. ZONAL-ATTENDANT-CALL ANNUNCIATOR - INSTALLATION

A. General

(1) This procedure gives the instructions to install the zonal-attendant-call annunciator.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-30-00/100	-
AMM TASK 25-22-04-400-801-A/400	-
AMM TASK 25-22-04-400-802-A/400	-
AMM TASK 33-25-00-700-801-A/500	READING AND ATTENDANT CALL LIGHTS (1) - OPERATIONAL TEST

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
243	243ALC	Passenger cabin
243	243DLC	Passenger cabin
253	253CLC	Passenger cabin
263	263ALC	Passenger cabin

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Put the zonal-attendant-call annunciator (3) on the headliner.
- (2) Install the clamp (2).
- (3) Connect the electrical connector (3).

J. Follow-on

SUBTASK 842-002-A

- (1) Install headliner panels 243ALC, 243DLC, 253CLC, and 263ALC (AMM MPP 06-30-00/100). Refer to Standard Headliner Panel - Installation (AMM TASK 25-22-04-400-801-A/400 or AMM TASK 25-22-04-400-802-A/400, as applicable).
- (2) On the LH Electrical Power Control/Distribution Box, close the RDNG LT/ATTD CALL 1 circuit breaker and remove the DO-NOT-CLOSE tag from it.
- (3) On the RH Electrical Power Control/Distribution Box, close the RDNG LT/ATTD CALL 2 and RDNG LT/ATTD CALL 3 circuit breakers and remove the DO-NOT-CLOSE tag from them.
- (4) Do an operational test on the Reading and Attendant Call Lights ([AMM TASK 33-25-00-700-801-A/500](#)).