

MAIN-DOOR STEPTREAD LINING PANEL - REMOVAL/INSTALLATION

EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR

1. General

- A. This section gives the procedures to remove and install the lining panels of the main-door step-treads.
- B. These procedures are applicable to the five steps of the main door.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
52-10-02-000-801-A	MAIN-DOOR STEP-TREAD LINING PANEL - REMOVAL	AIRCRAFT WITH AIR- STAIRS DOOR
52-10-02-400-801-A	MAIN-DOOR STEP-TREAD LINING PANEL - INSTALLATION	AIRCRAFT WITH AIR- STAIRS DOOR

TASK 52-10-02-000-801-A

EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR

2. MAIN-DOOR STEP-TREAD LINING PANEL - REMOVAL

A. General

- (1) This procedure gives the instructions to remove the lining panel from the tread of the main door steps.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Main door

H. Preparation

SUBTASK 841-002-A

- (1) Open the main door.

I. Removal (Figure 401)


SUBTASK 020-002-A

- (1) Remove the eight or ten screws (1), as applicable.
- (2) Remove the scuff angle (3), if applicable.
- (3) Remove the tread lining panel (2).

EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR

Tread Lining Panel - Removal/Installation

Figure 401

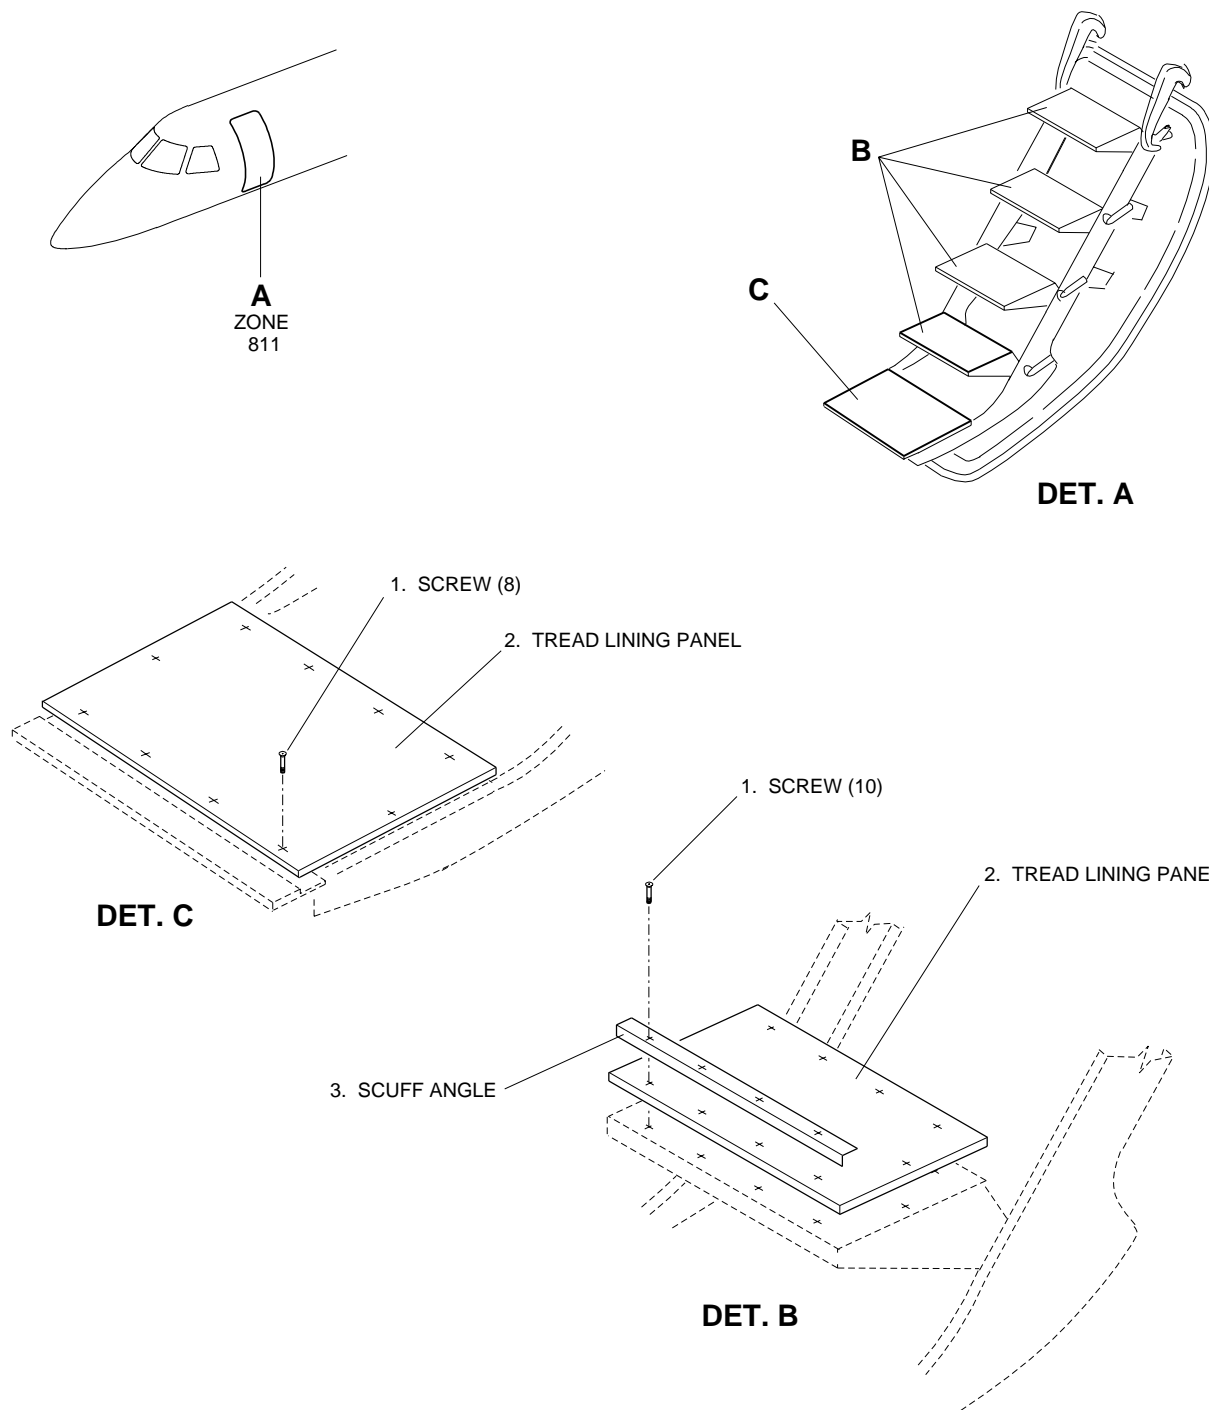

145AMM520035.MCE A

TASK 52-10-02-400-801-A

EFFECTIVITY: AIRCRAFT WITH AIRSTAIRS DOOR

3. MAIN-DOOR STEP-TREAD LINING PANEL - INSTALLATION

A. General

- (1) This procedure gives the instructions to install the lining panel on the tread of the main door steps.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Main door

H. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Put the lining panel (2) on the tread of the main door step.
- (2) Put the scuff angle (3) (if applicable) on the lining panel.
- (3) Install the eight or ten screws (1), as applicable.

I. Follow-on

SUBTASK 842-002-A

- (1) Close the main door.