

## MAIN DOOR CURTAIN - REMOVAL/INSTALLATION

*EFFECTIVITY: ACFT MODEL(S) EMB-135*

### 1. General

- A. This section gives the procedures to remove/install the main door curtain.
- B. The main door curtain is installed in the entry area of the passenger cabin, at zone 231.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

| TASK NUMBER                        | DESCRIPTION            | EFFECTIVITY              |
|------------------------------------|------------------------|--------------------------|
| <a href="#">25-27-05-000-801-A</a> | CURTAIN - REMOVAL      | ACFT MODEL(S)<br>EMB-135 |
| <a href="#">25-27-05-400-801-A</a> | CURTAIN - INSTALLATION | ACFT MODEL(S)<br>EMB-135 |

TASK 25-27-05-000-801-A

EFFECTIVITY: ACFT MODEL(S) EMB-135

## 2. CURTAIN - REMOVAL

### A. General

(1) This task gives the procedure to remove the main door curtain.

### B. Zones and Accesses

Not Applicable

### C. Tools and Equipment

Not Applicable

### D. Auxiliary Items

Not Applicable

### E. Consumable Materials

Not Applicable

### F. Expandable Parts

Not Applicable

### G. Persons Recommended

| QTY | FUNCTION      | PLACE           |
|-----|---------------|-----------------|
| 01  | Does the task | Passenger cabin |

### H. Removal

#### *SUBTASK 020-014-B*


- (1) Remove the main door curtain as follows ([Figure 401](#)):
  - (a) Loosen the snap button (10) that attach the main door curtain assembly (6) to the ceiling panel (11).
  - (b) Loosen the snap buttons (8) that attach the main door curtain assembly (6) to the end cap assembly (9).
  - (c) Loosen the hook & loop/D-ring fastener strap (14) to release the main door curtain assembly (6) to the LH windscreen, or to the LH wardrobe, or to LH galley, as applicable.
  - (d) Put the main door curtain assembly (6) in the open position.
  - (e) Remove the screws (12) and washers (13) that attach the hook & loop/D-ring fastener straps to the LH windscreen, or from the LH wardrobe, or from LH galley, as applicable.
  - (f) Remove the screws (2) and (4) and the washers (1) and (5) that attach the curtain track assembly (3).
  - (g) Loosen the curtain from the hook & loop fastener (7).

- (h) Remove the main door curtain assembly (6).

EFFECTIVITY: ACFT MODEL(S) EMB-135

Main Door Curtain - Removal/Installation

Figure 401

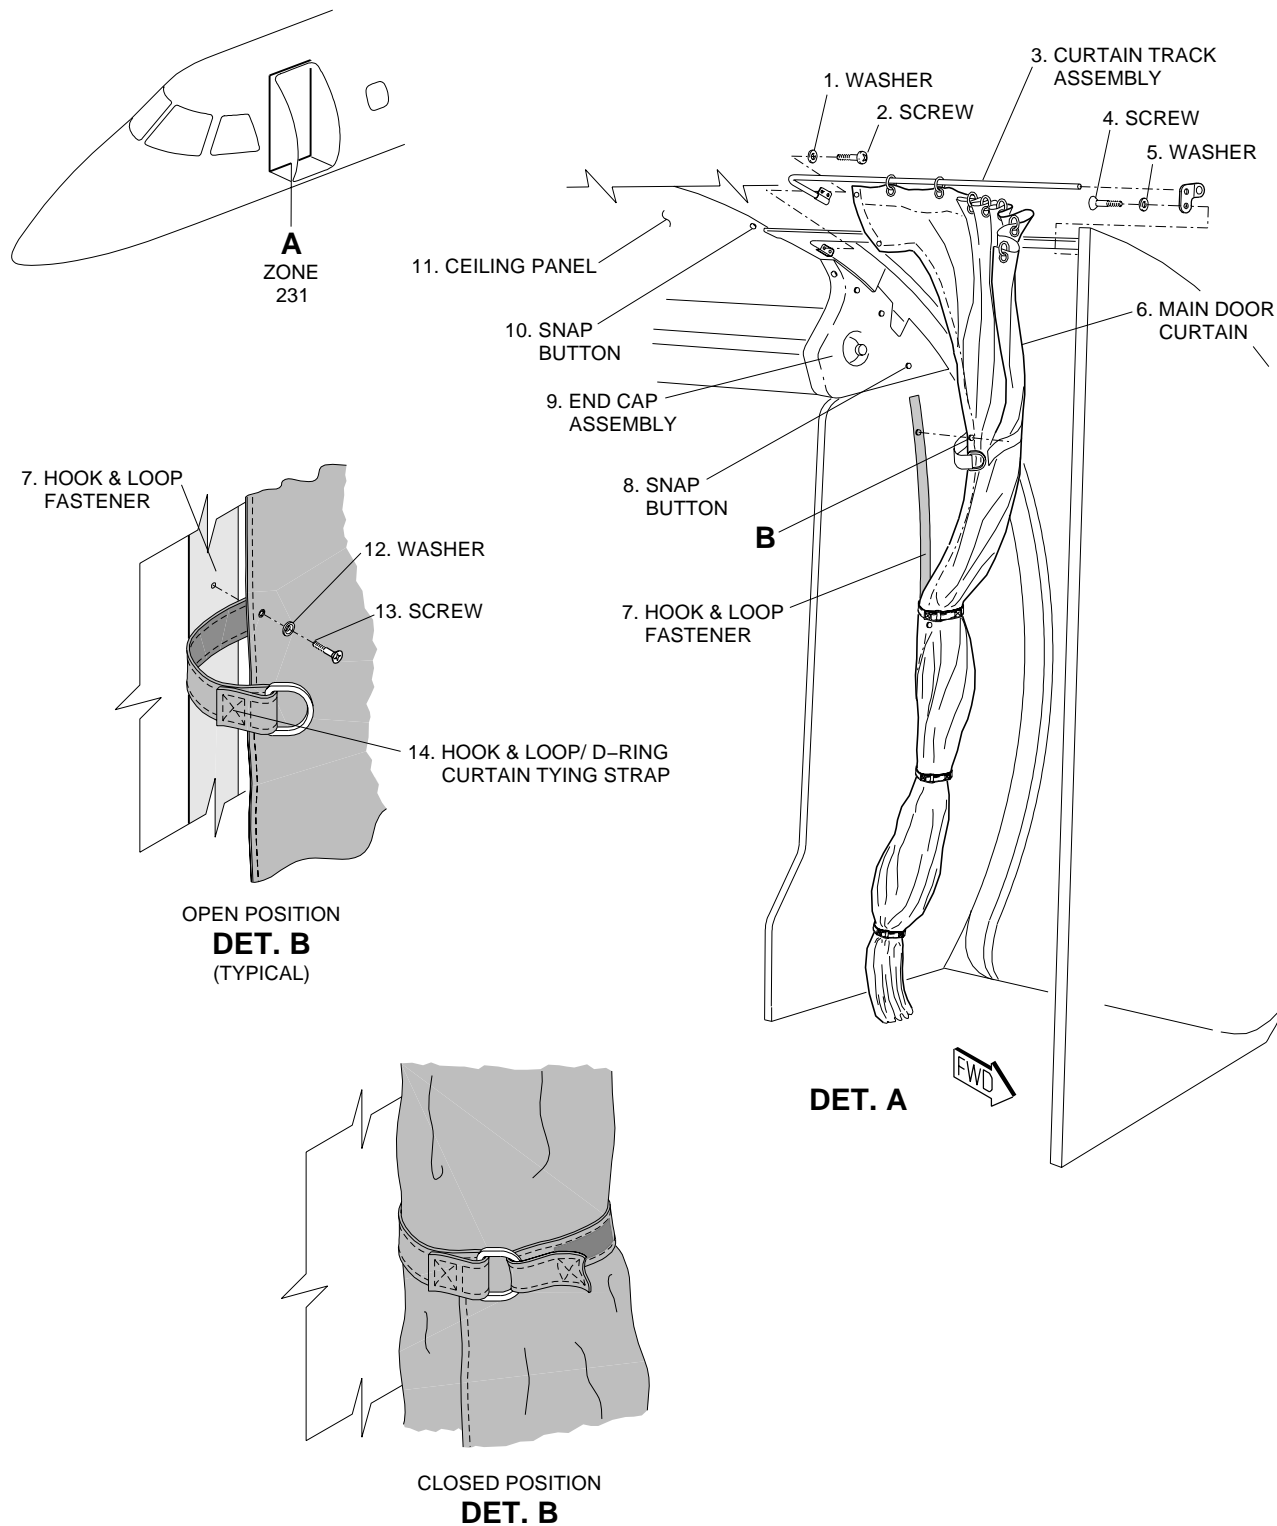

EM145AMM253418A.DGN

TASK 25-27-05-400-801-A

EFFECTIVITY: ACFT MODEL(S) EMB-135

### 3. CURTAIN - INSTALLATION

#### A. General

(1) This task gives the procedure to install the main door curtain.

#### B. Zones and Accesses

Not Applicable

#### C. Tools and Equipment

Not Applicable

#### D. Auxiliary Items

Not Applicable

#### E. Consumable Materials

Not Applicable

#### F. Expandable Parts

Not Applicable

#### G. Persons Recommended

| QTY | FUNCTION      | PLACE           |
|-----|---------------|-----------------|
| 01  | Does the task | Passenger cabin |

#### H. Installation

##### SUBTASK 420-014-B

(1) Install the main door curtain as follows (Figure 401):

- (a) Put the main door curtain assembly (6) in the open position.
- (b) Attach the curtain track assembly (3) with the screws (2) and (4) and the washers (1) and (5).
- (c) Attach the main-door-curtain hook & loop fastener (7) to the LH windscreen, or to the wardrobe, or to LH galley, as applicable.
- (d) With the screws (13) and washers (12), attach the hook & loop/D-ring curtain tying straps (14) to the LH windscreen, or to the LH wardrobe, or to LH galley, as applicable.
- (e) Put the main door curtain assembly (6) in the closed position.
- (f) Use hook & loop/D-ring fastener straps (14) to fasten the main door curtain assembly (6) to the LH windscreen, or from the LH wardrobe, or from LH galley, as applicable.
- (g) Use the snap buttons (8) to fasten the main door curtain assembly (6) to the end cap assembly.

- (h) Use the snap button (10) to fasten the main door curtain assembly (6) to the ceiling panel (11).