

ESCAPE ROPE - INSPECTION/CHECK

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to do the inspection/check of the escape ropes.
- B. The escape ropes are installed in the cockpit, in zones 225 and 226.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-60-07-200-801-A ♦	ESCAPE ROPE - INSPECTION	ALL

TASK 25-60-07-200-801-A

EFFECTIVITY: ALL

2. ESCAPE ROPE - INSPECTION

A. General

(1) This task gives the procedures to inspect the escape ropes.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-03/100	- COMPONENT LOCATION

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
225	225BLC	Cockpit LH
226	226BRC	Cockpit RH

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit RH/Cockpit LH

I. Cockpit Escape Rope - GVI (Figure 401)

SUBTASK 212-002-A

- (1) **NOTE:** Do the same procedures to inspect the escape ropes on the LH and RH sides of the cockpit.

Open the access panels 225BLC and/or the 226BRC to get the access to the escape ropes ([AMM MPP 06-41-03/100](#)).


- (2) Remove the bolt (1), washer (2) and bushing (4) that attach the escape rope (3).
- (3) Remove the escape rope (3).
- (4) Fully extend the escape rope (3) and make sure of the conditions that follow:

- (a) The escape rope (3) has no kinks, nicks, frayed parts, loose stitches, or other damage.
- (b) The escape rope (3) does not rub on the adjacent structure.
- (5) Examine the box for cracks or other damage.
- (6) At the attach points bolt (1), washer (2), and bushing (4) of the escape rope (3), make sure of the conditions that follow:
 - (a) The metal at the attach points has no corrosion, wear, damage, and cracks.
- (7) Tighten the bolt (1), washer (2), and bushing (4) that attach the escape rope (3).
- (8) Arrange the escape rope as shown in steps 1 thru 4. Keep it in the cockpit housing as shown in step 5.
- (9) Close the access panels 225BLC and/or 226BRC ([AMM MPP 06-41-03/100](#)).

EFFECTIVITY: ALL

Escape Rope - General Visual Inspection

Figure 601 - Sheet 1

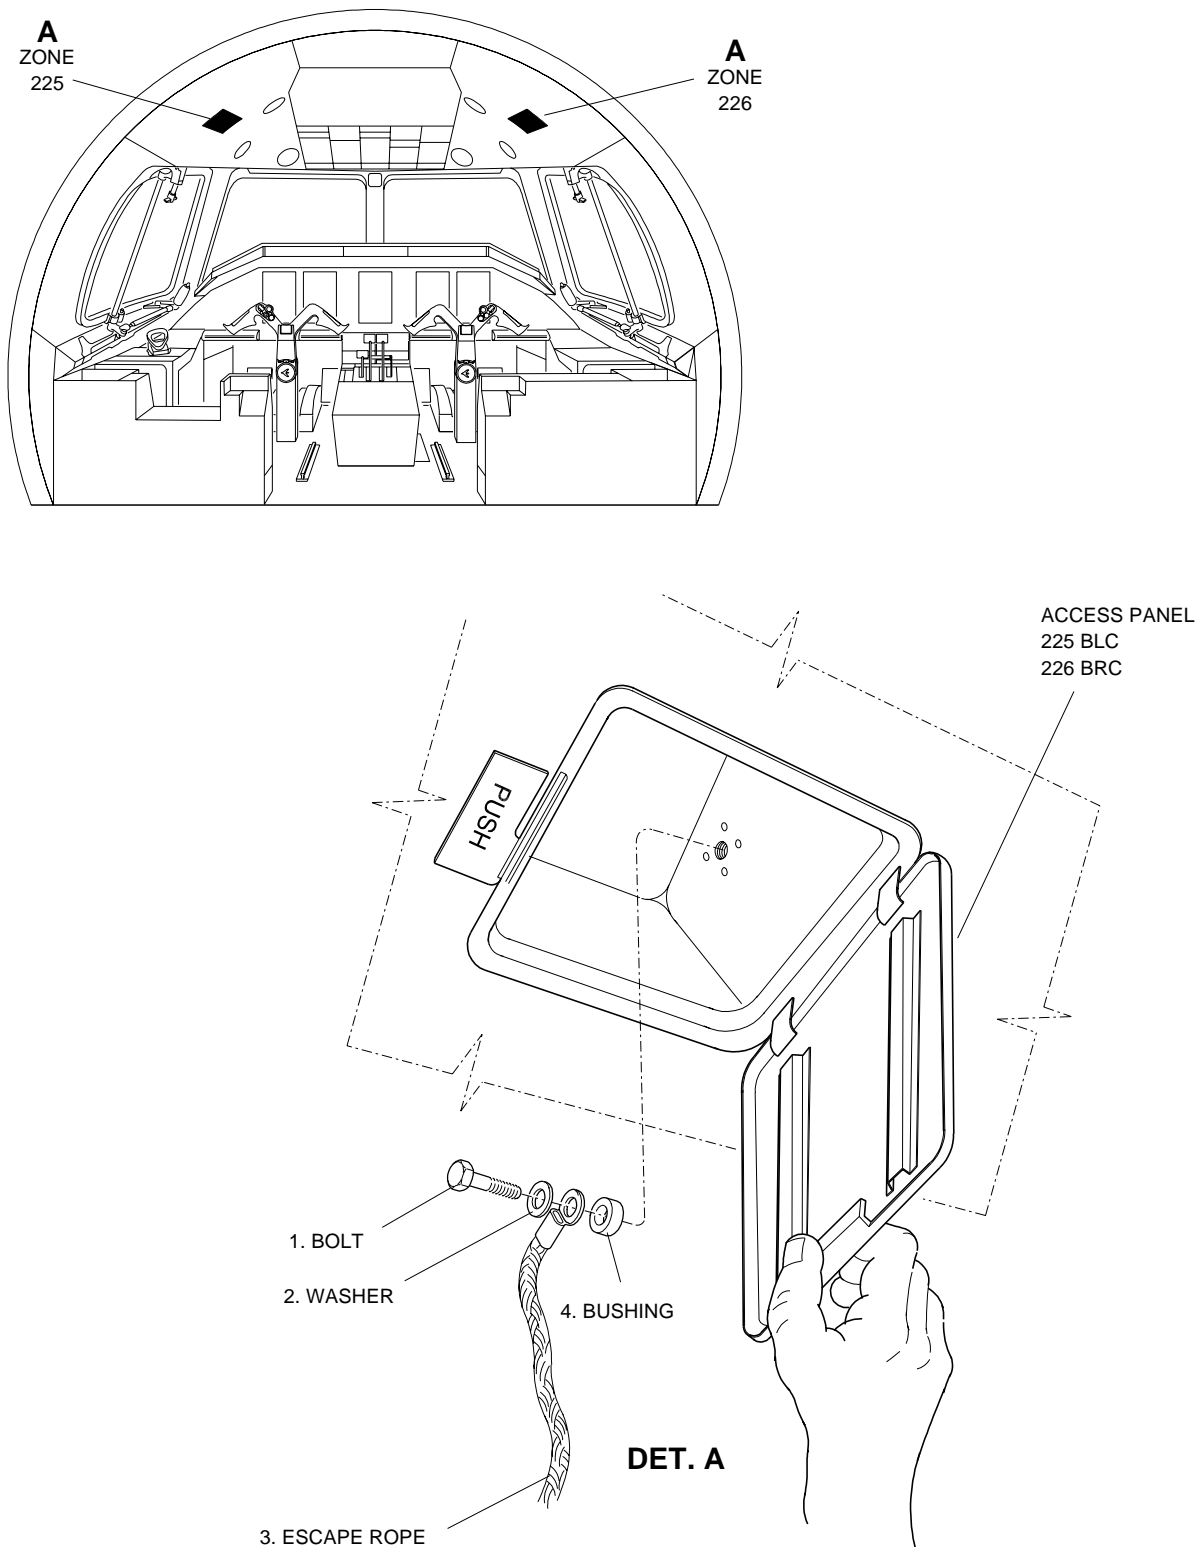


145AMM252439.MCE

EFFECTIVITY: ALL

Escape Rope - General Visual Inspection

Figure 601 - Sheet 2

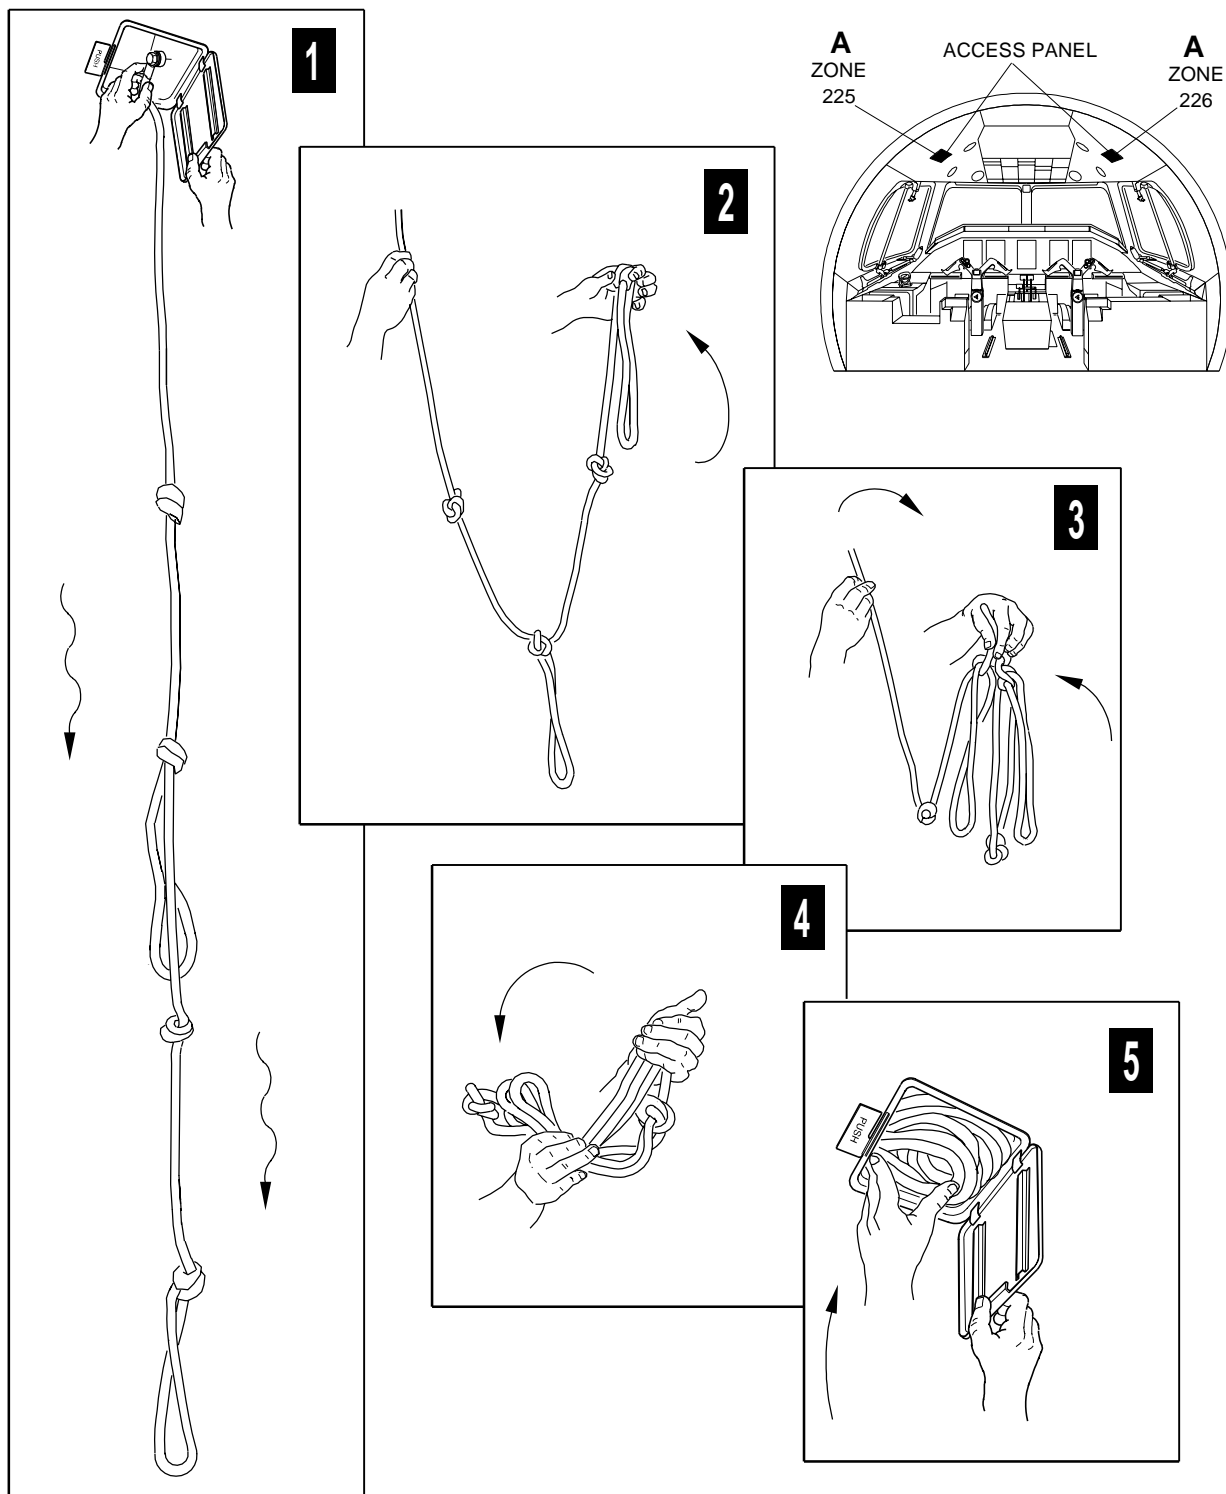

145AMM252600.MCE

