

REVERSIONARY PANEL - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedure to remove/install the Reversionary Panels.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
34-22-03-000-801-A	REVERSIONARY PANEL - REMOVAL	ALL
34-22-03-400-801-A	REVERSIONARY PANEL - INSTALLATION	ALL

TASK 34-22-03-000-801-A

EFFECTIVITY: ALL

2. REVERSIONARY PANEL - REMOVAL

A. General

(1) This task gives the procedure to remove the Reversionary Panels.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

H. Removal [\(Figure 401\)](#)


SUBTASK 020-002-A

- (1) Loosen the dzus fastener (3).
- (2) Pull the Reversionary Panel (2) to gain access to the connector (1).
- (3) Disconnect the connector (1) from the Reversionary Panel (2).
- (4) Remove the Reversionary Panel (2).

EFFECTIVITY: ALL

Reversionary Panels - Removal/Installation

Figure 401

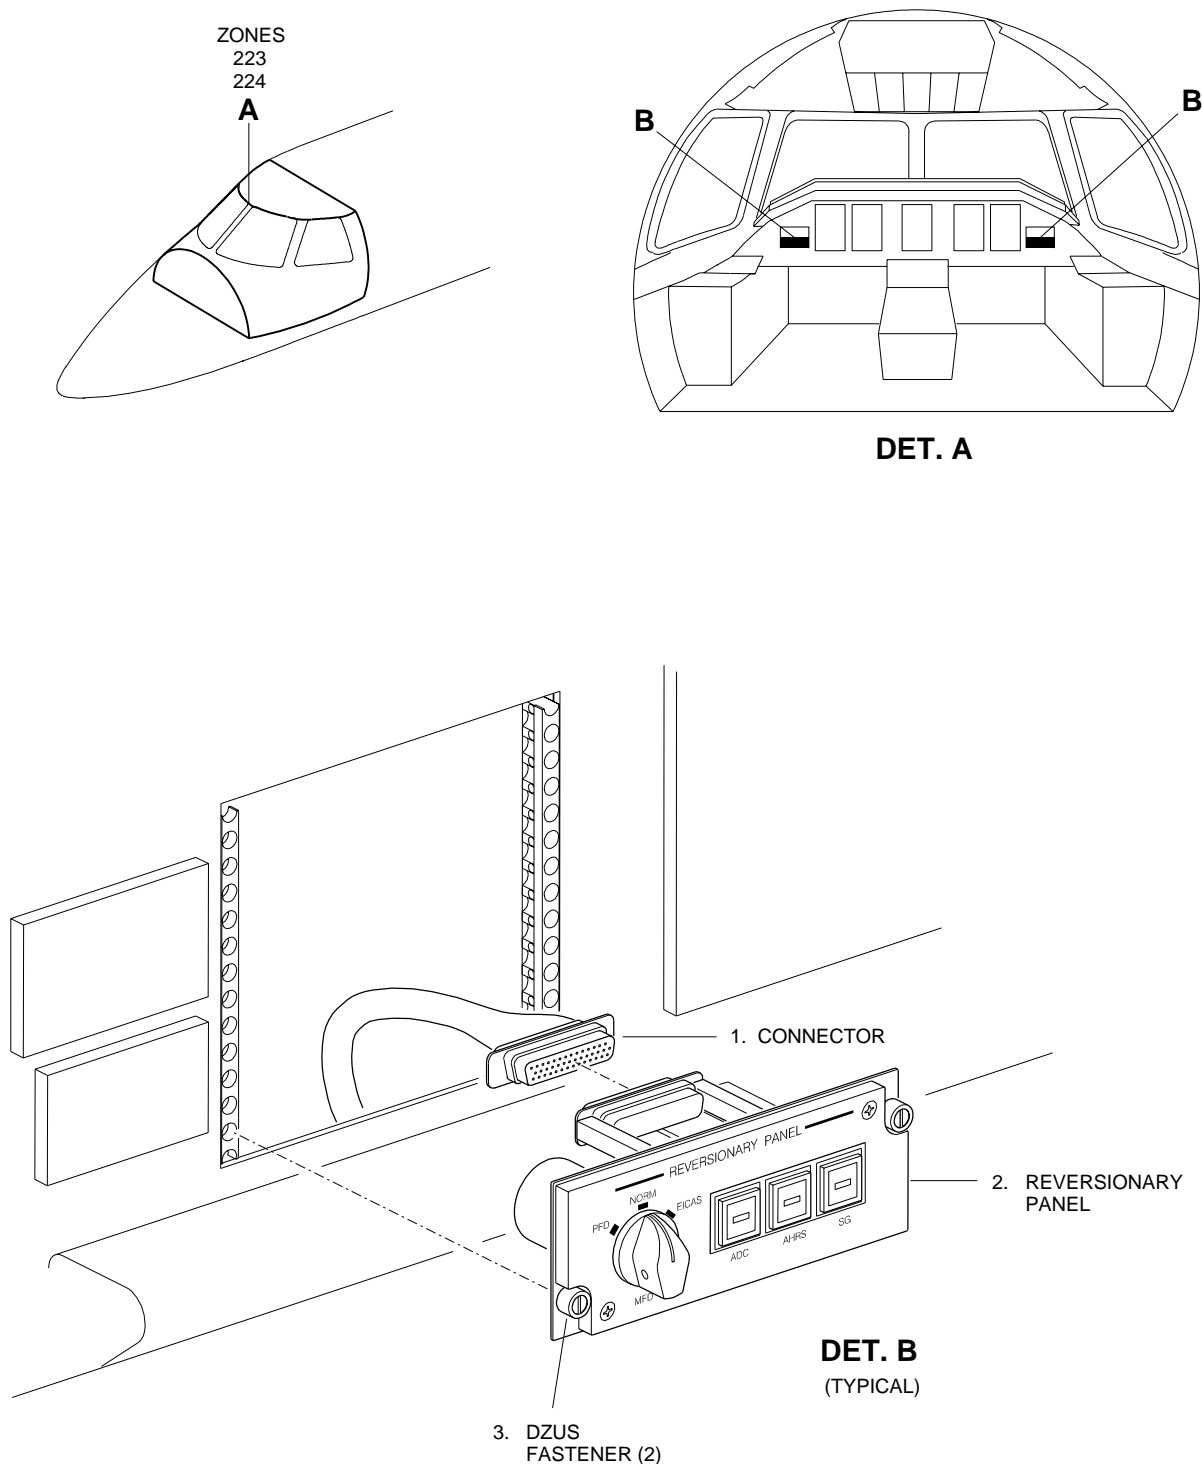

145AMM340208.MCE A

TASK 34-22-03-400-801-A

EFFECTIVITY: ALL

3. REVERSIONARY PANEL - INSTALLATION

A. General

(1) This task gives the procedure to install the Reversionary Panels.

B. References

REFERENCE	DESIGNATION
AMM TASK 34-22-00-700-801-A/500	ELECTRONIC FLIGHT INSTRUMENT SYSTEM - OPERATIONAL CHECK

C. Zones and Accesses

Not Applicable

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

Not Applicable

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Cockpit

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Put the Reversionary Panel (2) in position.
- (2) Connect the connector (1) to the Reversionary Panel (2).
- (3) Tighten the dzus fastener (3).

J. Follow-on

SUBTASK 410-002-A

- (1) Do the Integrated Display System Operational Test ([AMM TASK 34-22-00-700-801-A/500](#)).