

APU COMPARTMENT COOLING AIR INTAKE - INSPECTION/CHECK

EFFECTIVITY: AIRCRAFT WITH APU T-62T-40C11

1. General

- A. This section gives the procedures to do the inspection on the APU compartment cooling air intake.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
49-52-01-200-801-A	APU COMPARTMENT COOLING AIR INTAKE - INSPECTION	AIRCRAFT WITH APU T-62T-40C11

TASK 49-52-01-200-801-A

EFFECTIVITY: AIRCRAFT WITH APU T-62T-40C11

2. APU COMPARTMENT COOLING AIR INTAKE - INSPECTION

A. General

(1) Obey the instructions below to do the inspection on the APU compartment cooling air intake.

B. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
313	313	APU Cowling

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Ladder	To get access to the APU cowling	01

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	APU cowling

H. Preparation

SUBTASK 841-002-A

(1) Put the ladder below the APU cowling.

I. Inspect APU Compartment Cooling Air Intake (Figure 601)

SUBTASK 212-002-A


(1) Do a visual inspection on the APU-compartment cooling-air intake for blockage. Repair or clean the APU compartment cooling air intake, as required.

J. Follow-on

SUBTASK 842-002-A

(1) Remove the ladder.

EFFECTIVITY: AIRCRAFT WITH APU T-62T-40C11
APU Compartment Cooling Air Intake - Inspection
Figure 601

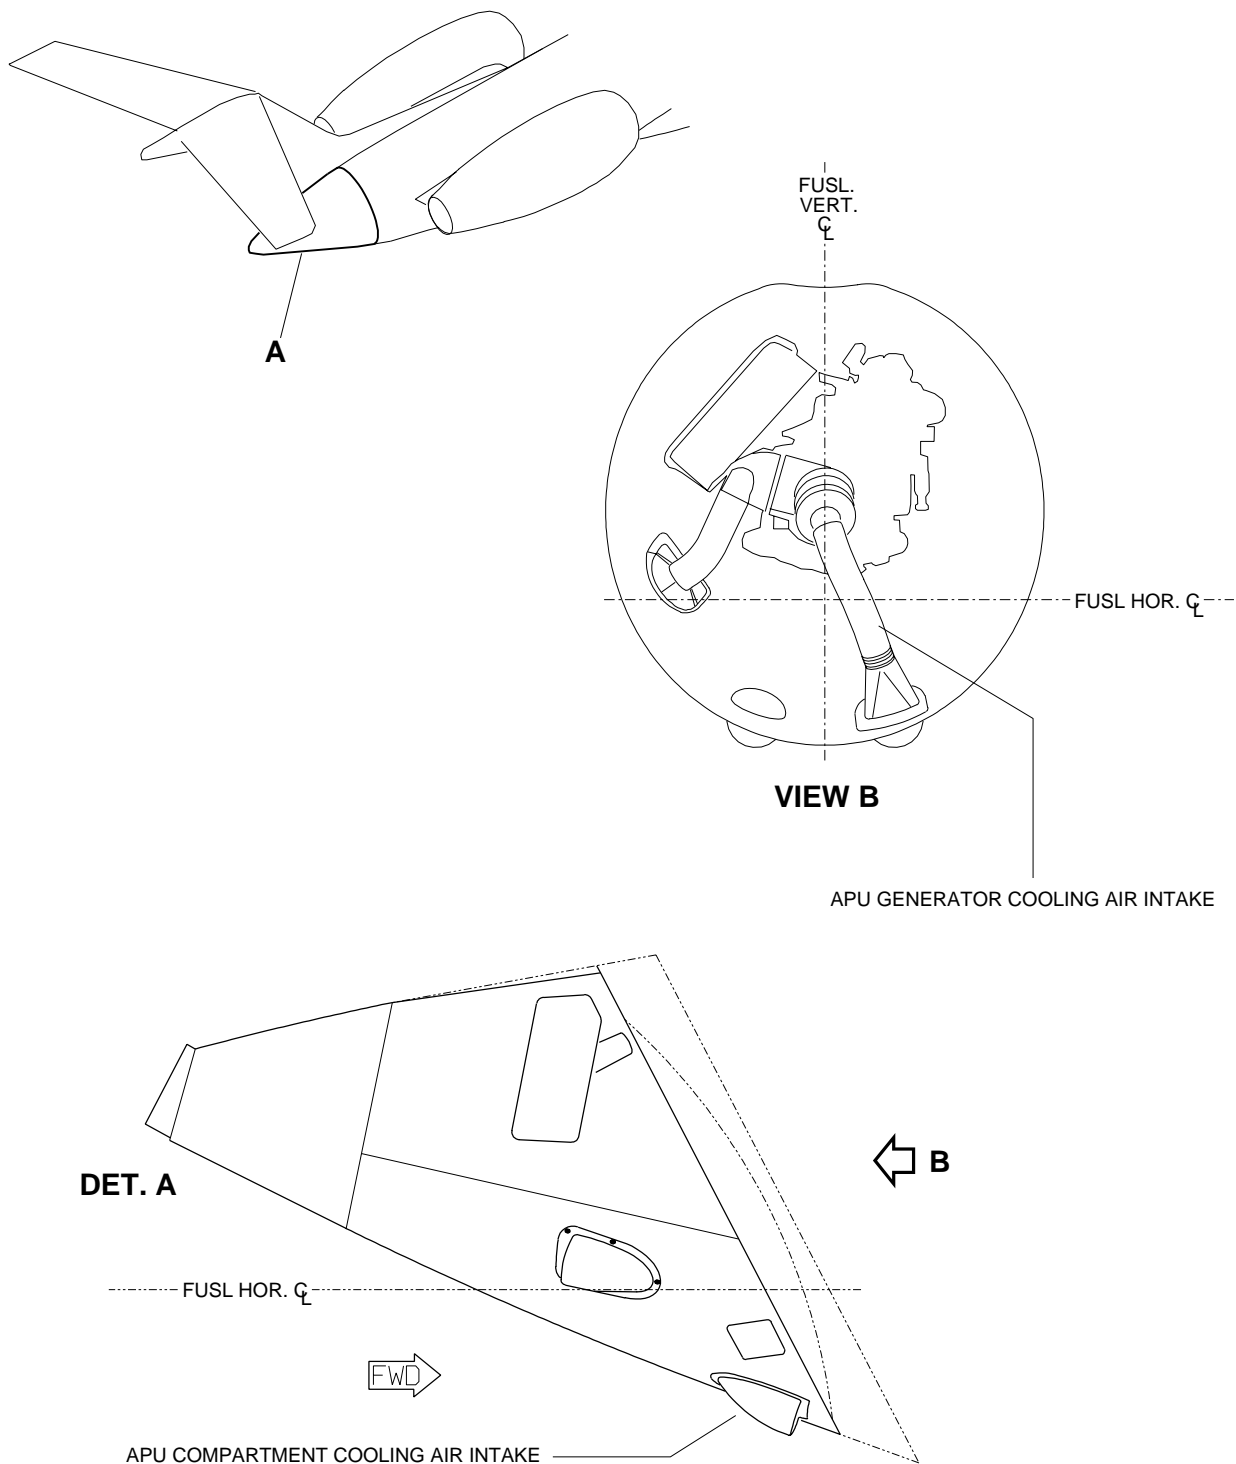

145AMM490013.MCE A

